



Mini Magnetic Holder

User Guide

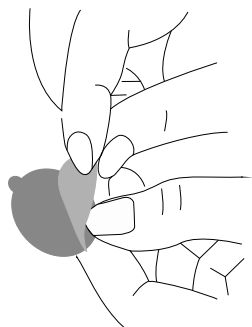


Clean the device surface before use..

Wipe your phone's back surface with a wet wipe. Ensure that the back side is thoroughly clean & dry. Chose one out of the two sizes (Round & Square) available for the metal sheets & white stickers according to the size of your phone.

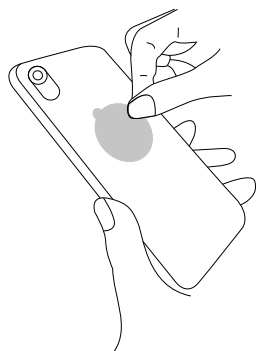


Peel off the White Sticker !.

Peel off the white film of the selected size & stick it down firmly to the center of the back of your phone or phone cover. This white sticker will protect your phone surface from any scratches by the metal plate.

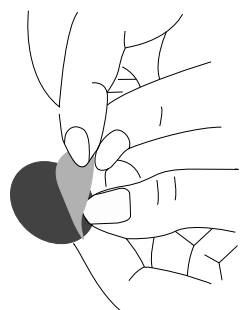


Take the Black Metal Plate

The black plate is the metal element which will hold your phone to the magnetic mount. Thus, chose the metal plate according to the surface are of your phone or phone cover. Square plate is recommended for bigger devices.

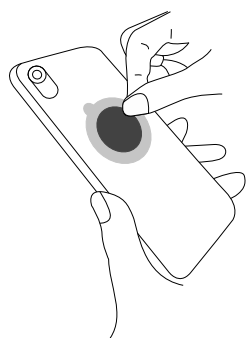


Apply the Metal Plate

Peel off the white 3M sticker from the back of the metal sheet and press it down firmly to the center of the white sticker on the back of your phone or cover.

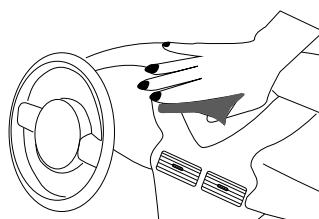


Clean the Dashboard..

Clean the dashboard surface where you want to fix the HIKER mount. Use the alcohol swab to wipe off any dust, oils or dirt particles from the dashboard surface. Ensure that the surface is thoroughly clean & dry before proceeding with the HIKER mount installation.

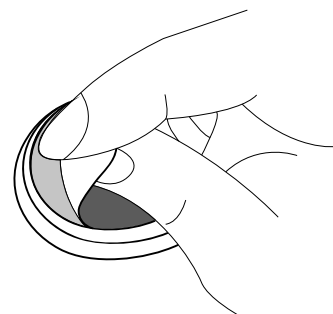


Fix the HIKER Mount !.

Once the desired area is clean & completely dry, peel off the 3M sticker on the back of the HIKER Mount and firmly press it onto the dashboard surface. Keep pressure on the mount for 2-3 minutes.

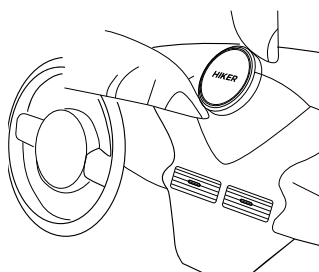

Shh.. Wait for sometime!

After installation of the HIKER mount please wait 24 hours before usage so that the adhesive can firm up/stick properly. Using it too early may cause the adhesive to fail.

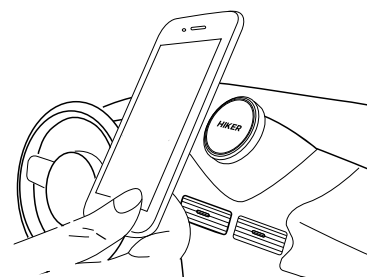

Ready to Use !

After 24 hours, your HIKER magnetic mount is ready for use. Tap off your phone on the top of the holder and let the HIKER magnetic mount do the rest.

Other Uses

