

Crazy Catch Replacement Net Fitting

Step One – Detach Grey frame from the red and lay face down on a hard surface.


Step Two – Position the net in the middle of the frame and loosely pull out.




Step three – Using string or cable ties (if you have them) stretch out the net and secure to each side of frame.



Step four – Weave the bungee in and out of the net squares and attach to the frame using the clips provided (see images for the top, corners and bottom frame when complete)

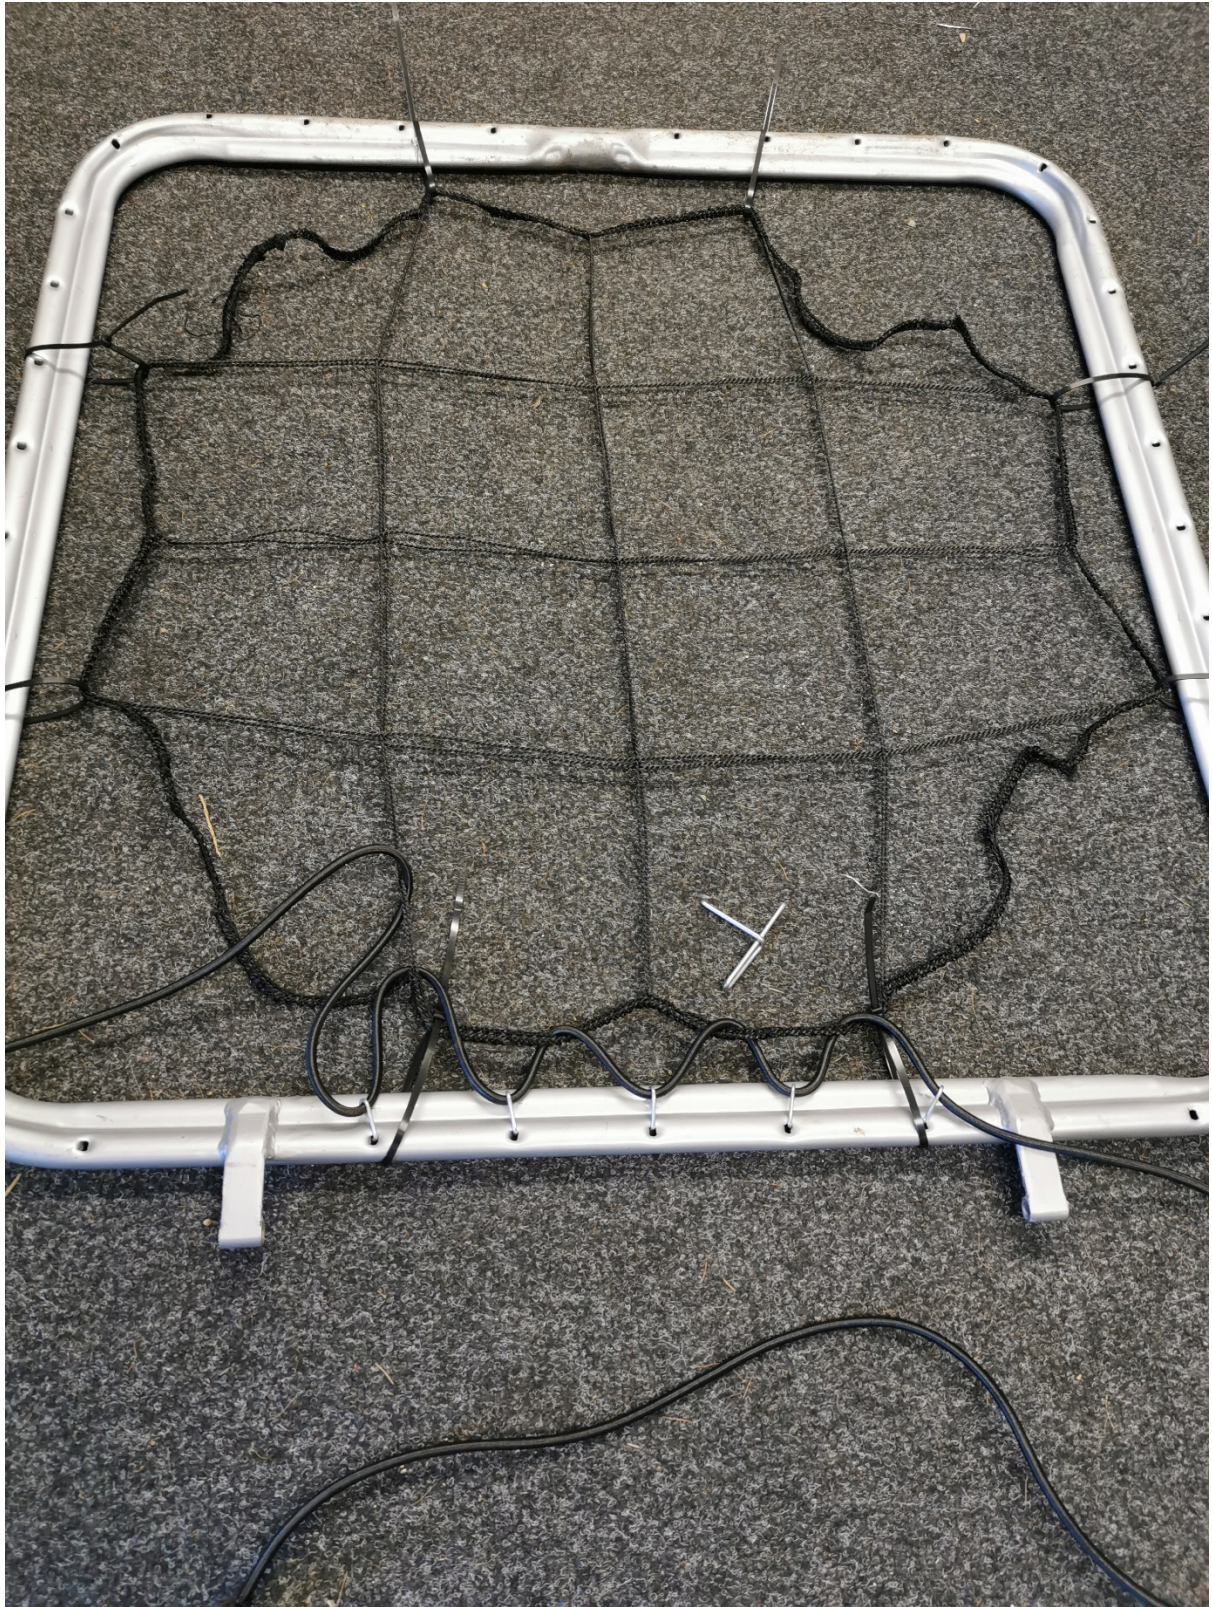

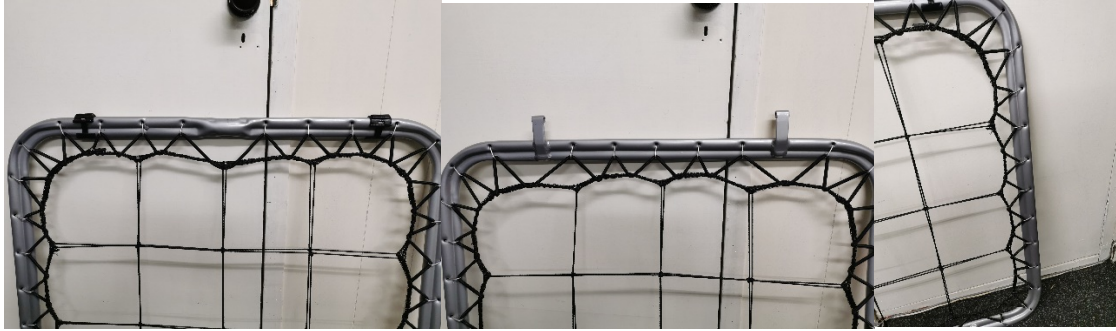

Step Five – remove string / cable ties, re-attach frames

Note – it gets more tricky the further round you get as the tension starts to build. You will find a tool in the clip bag (photo in second email) to help pull the bungee to the clip hole without trapping your fingers.

