




DESIGNED FOR LIFE

Assembly Instructions

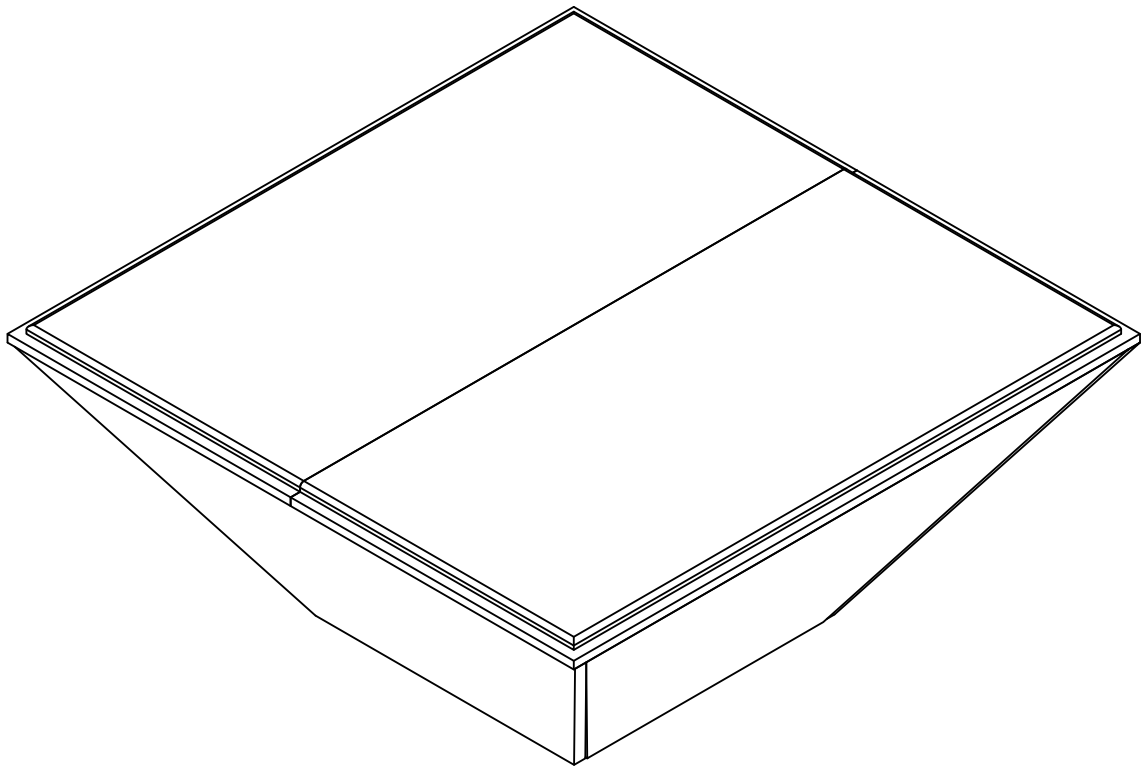

Coffee table

Model No.
HOGA-NY117X



www.tribesign.com



Contact Us

We're here to help you.



Your satisfaction is our top priority. If you encounter any issues with this product, such as missing or damaged parts, we're here to help. Please retain the original packaging and take photos of the packaging and the product, then contact us as soon as possible.

Warm Tips

1. Carefully read these instructions and keep them for future reference.
2. Check the parts list and confirm everything's there before starting assembly.
3. When assembling, put all parts on a soft, smooth surface like a carpet to avoid scratches.
4. Don't fully tighten screws until all parts are confirmed in place to avoid misalignment.

How to Get the Assembly Video




Step 1

Scan the QR code.

Step2


Search with the Model No.
(on the bottom left corner of the title page)

Note: If you can't find the assembly video, please contact us.

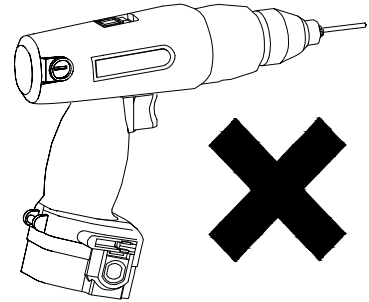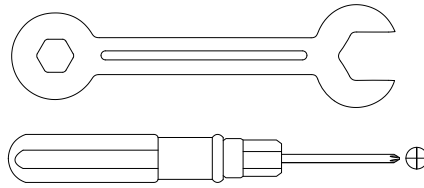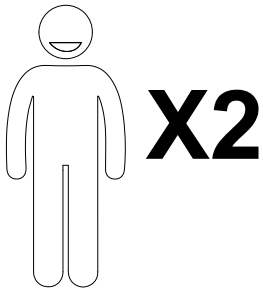



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

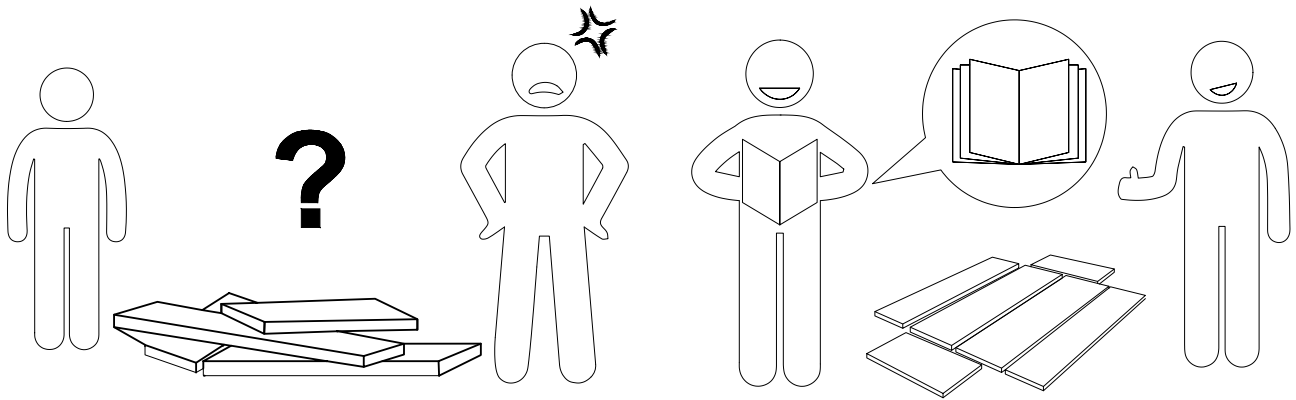

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.





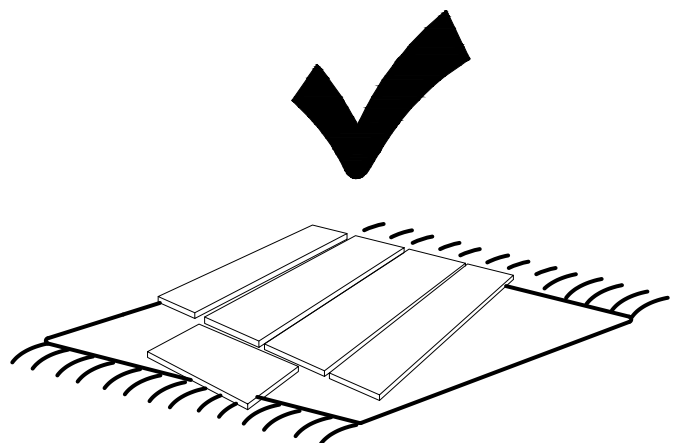
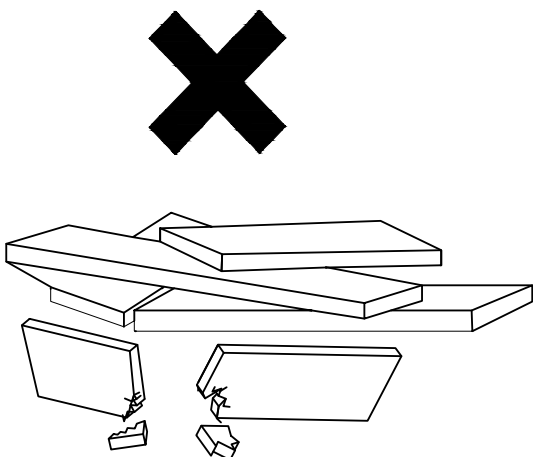


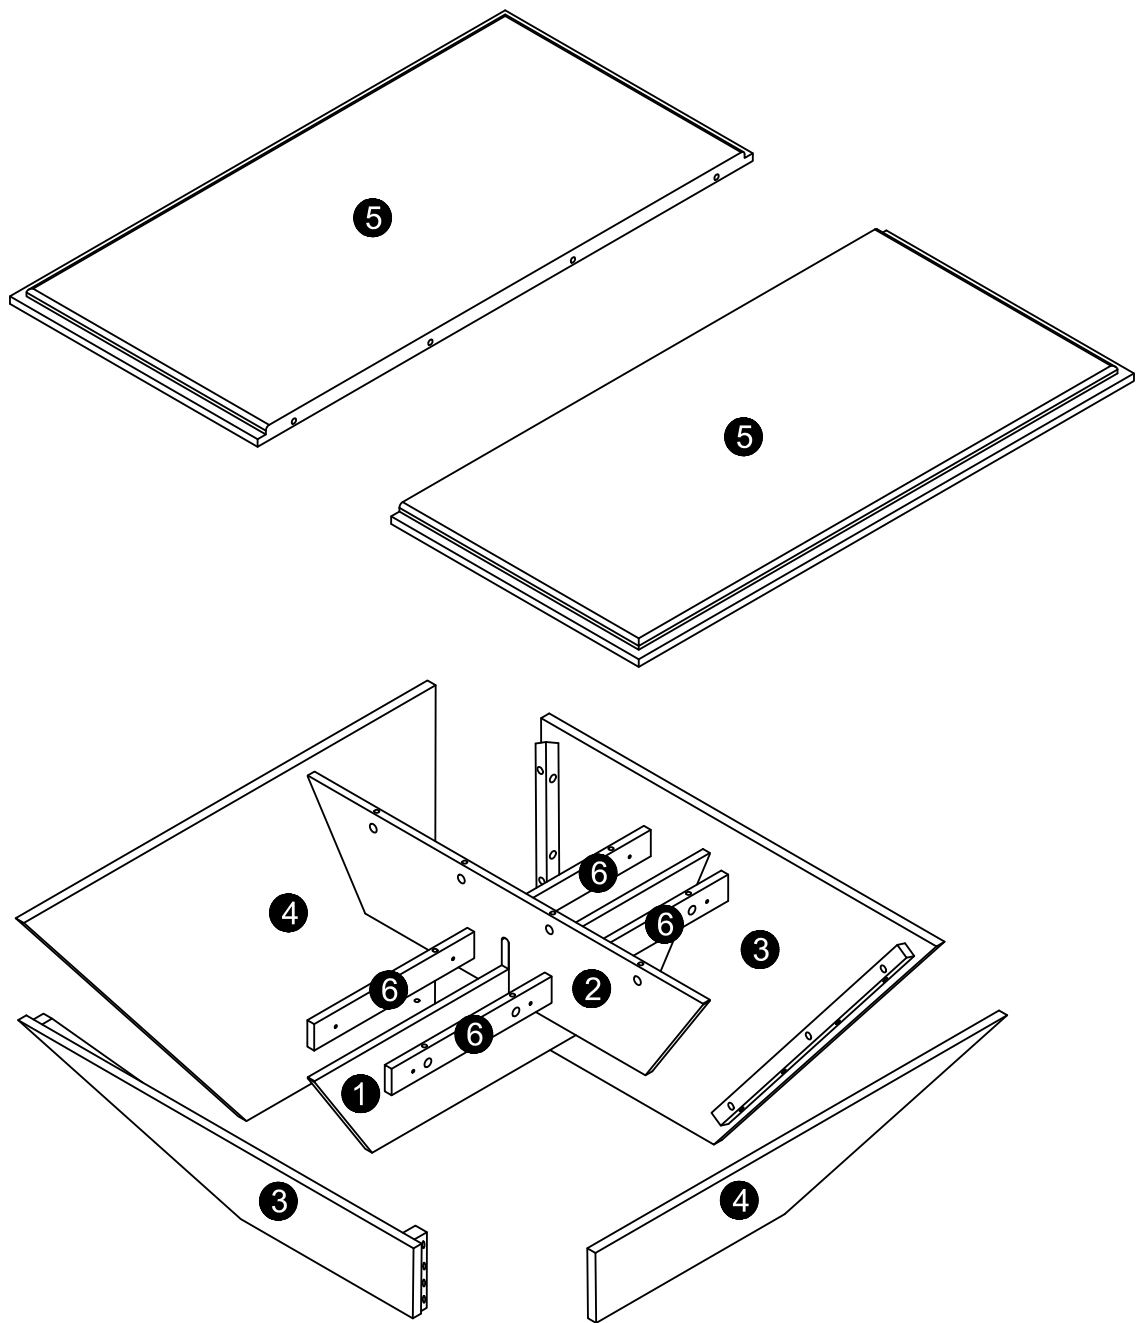**⚠ Caution**





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.



Parts List

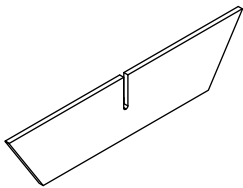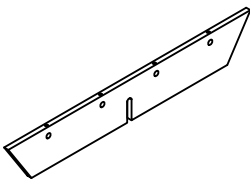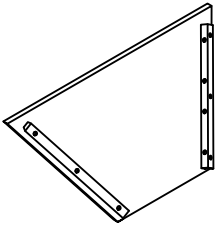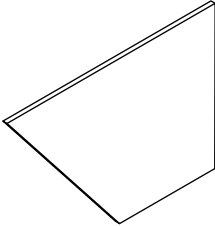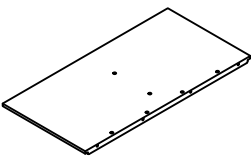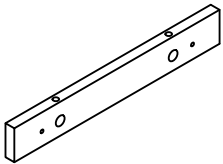1  1 pc	2  1 pc	3  2 pcs	4  2 pcs	5  2 pcs
6  4 pcs				

Hardware List

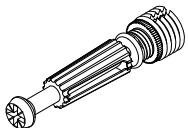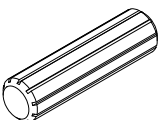A	B	C	D	E	
 M6x35mm	 Ø3.5x30mm		 Ø8x30mm	 Ø15x12mm	
12pcs	24 pcs	4pcs	4pcs	12pcs	1 pc





Installation of Cams and Pins


Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.



No gap

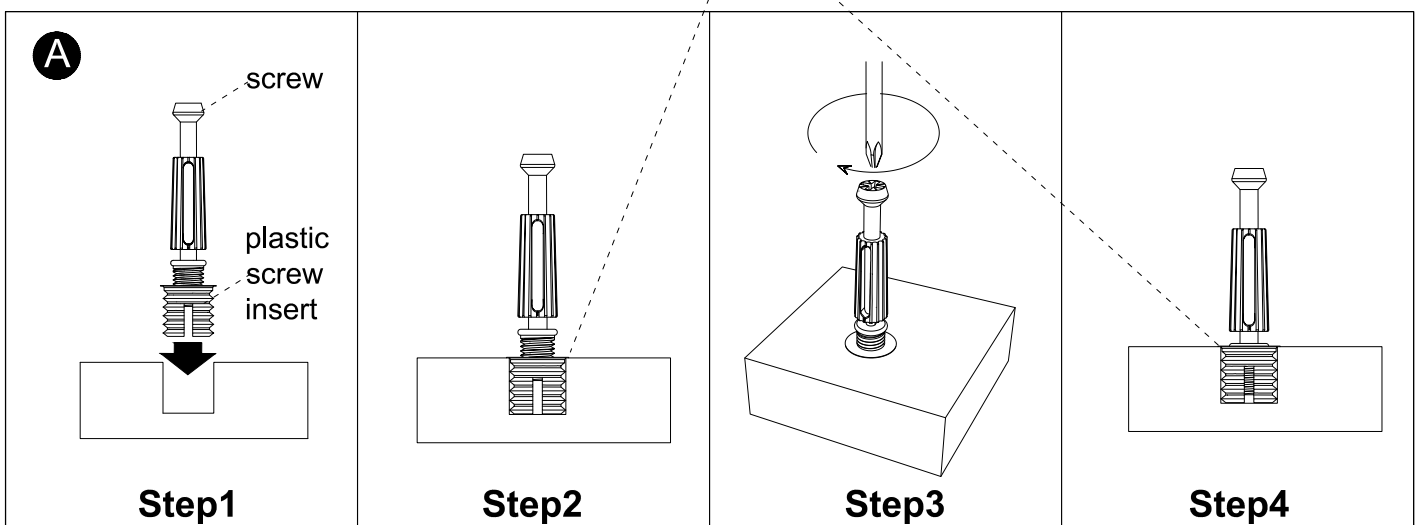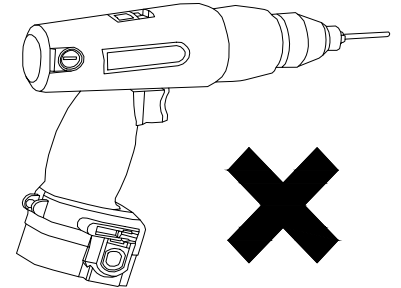

Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

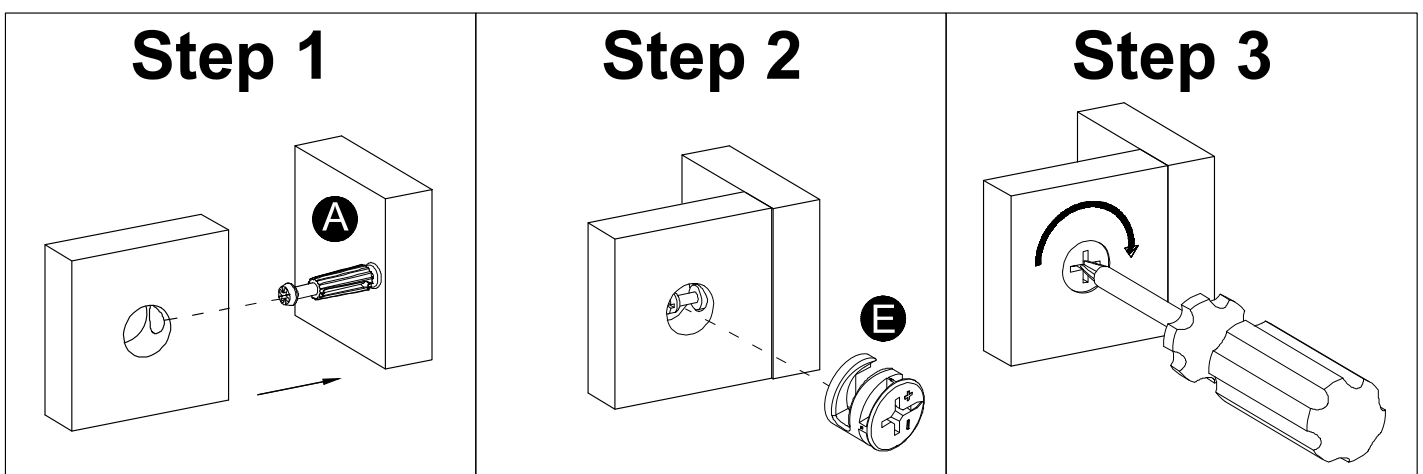




1

D


Ø8x30mm
4 pcs

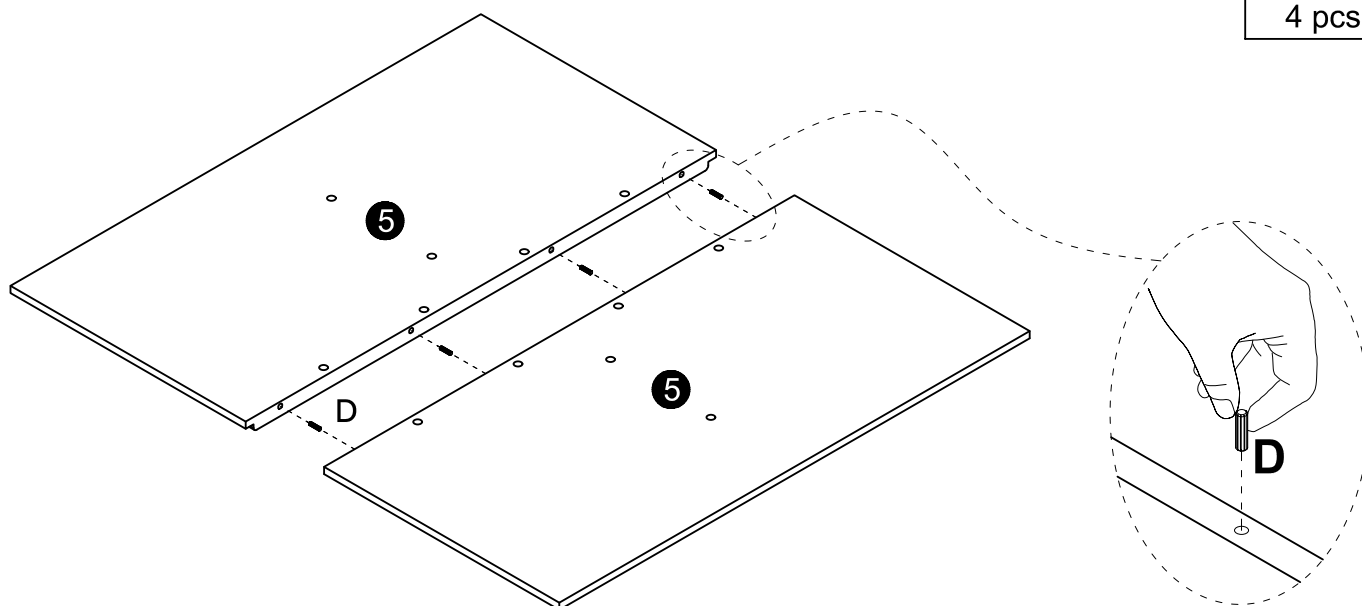

2

A

M6x35mm
12 pcs

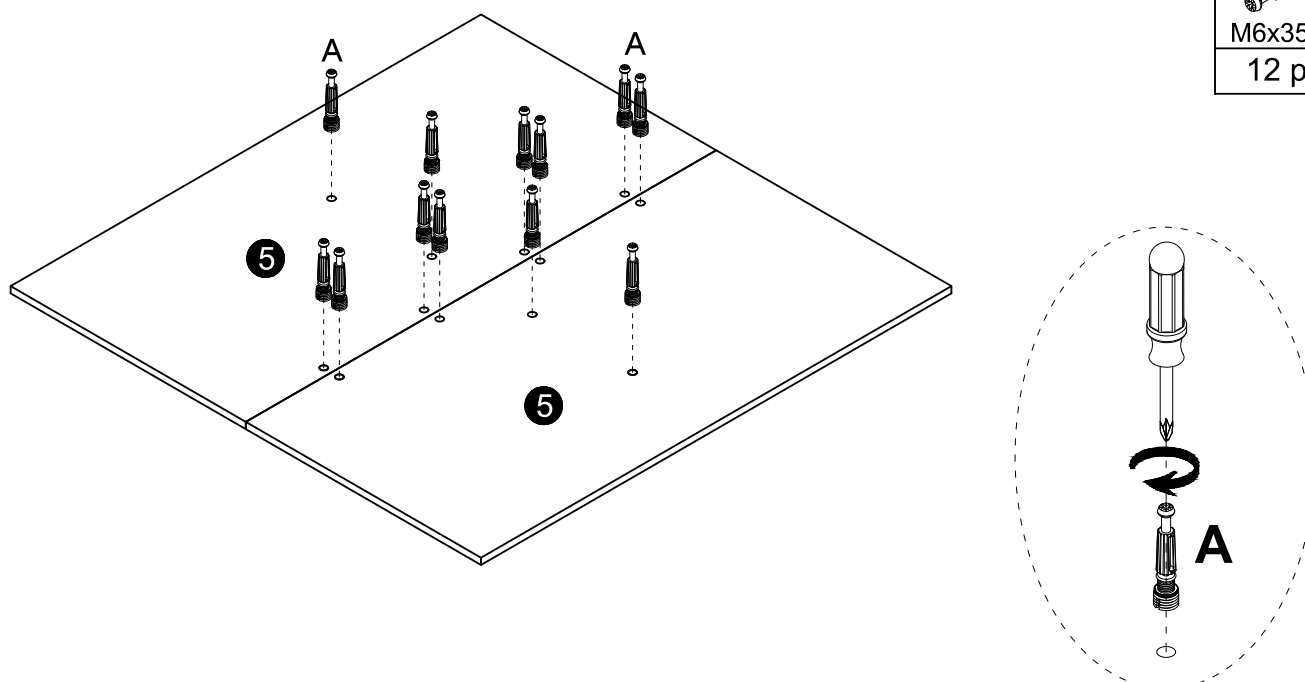



3


E




Ø15x12mm

4 pcs



Step 1

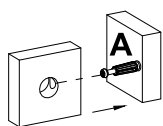


Step 2

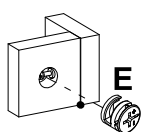

Step 3

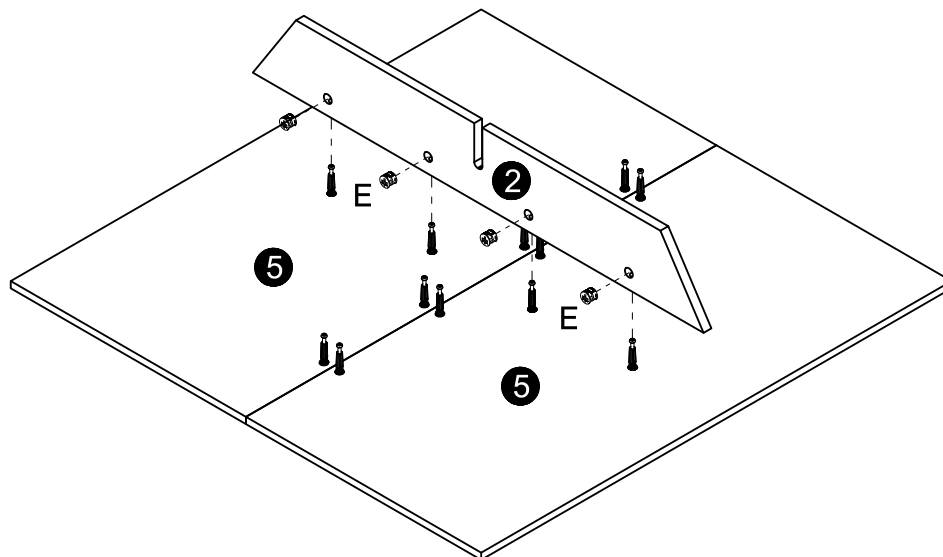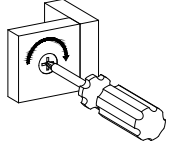

4

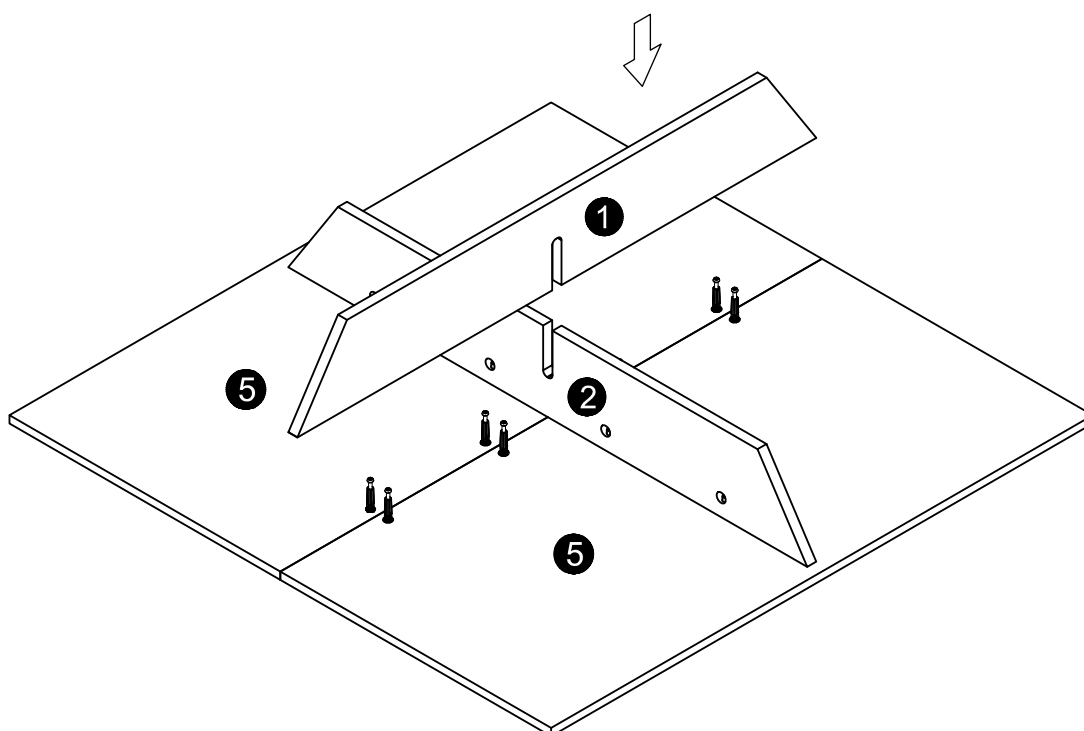



5


E




Ø15x12mm

4 pcs



Step 1

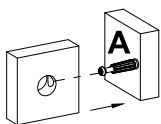

Step 2

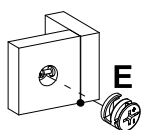

Step 3

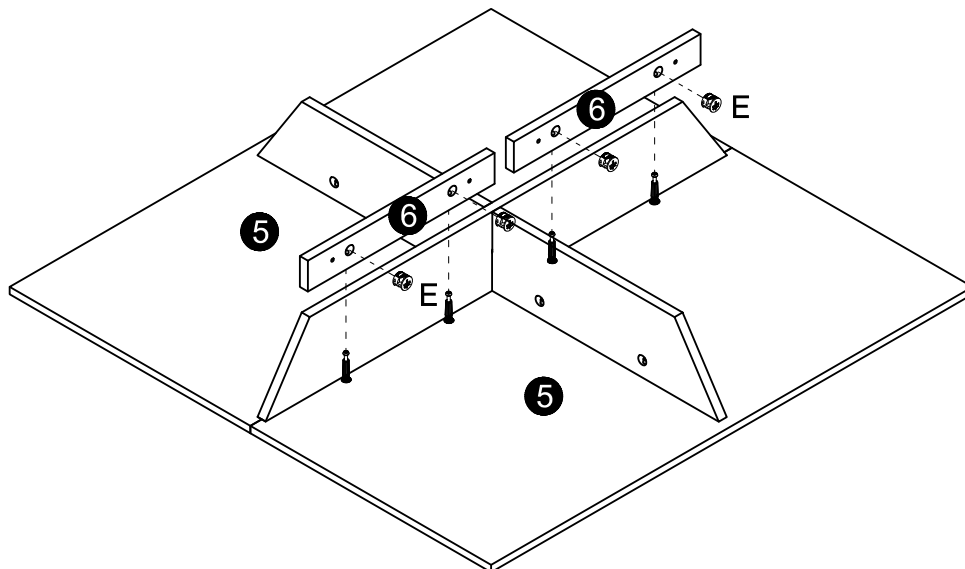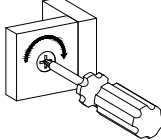

6


E




Ø15x12mm

4 pcs



Step 1

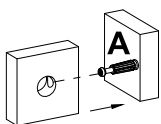


Step 2

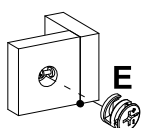


Step 3

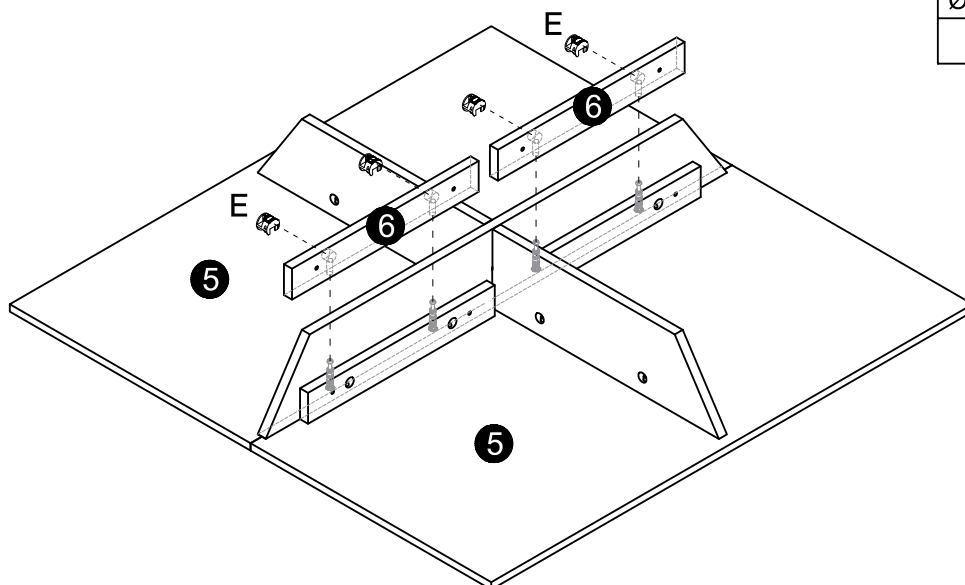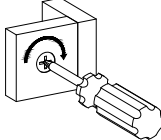

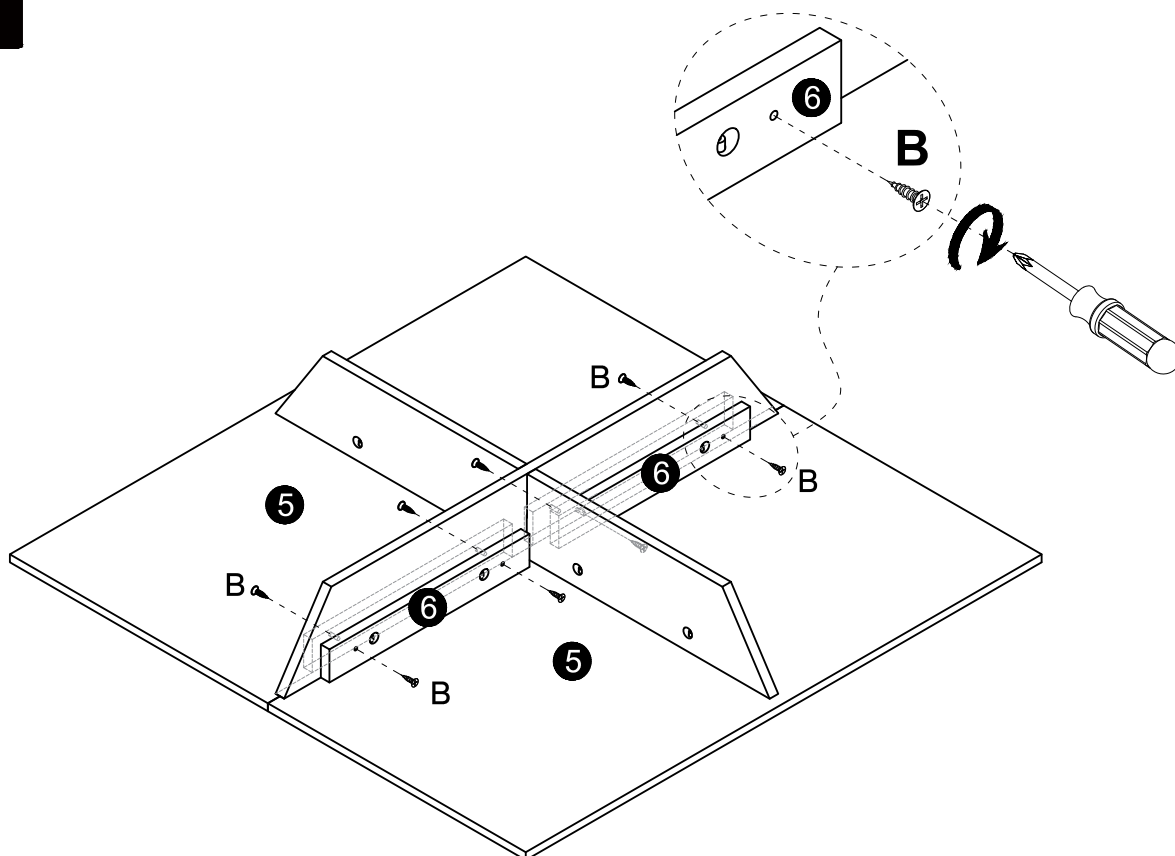**7**

B

Ø3.5x30mm
8 pcs

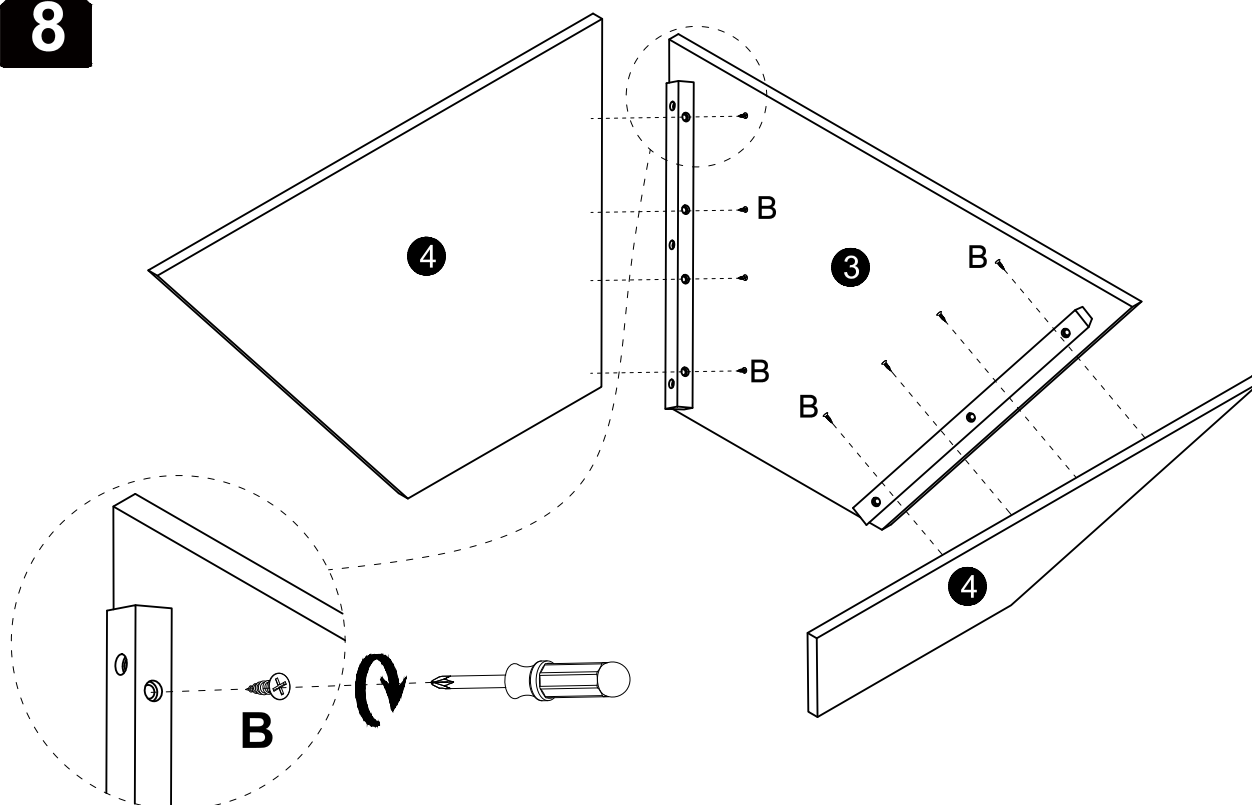
8

B

Ø3.5x30mm
8 pcs




9

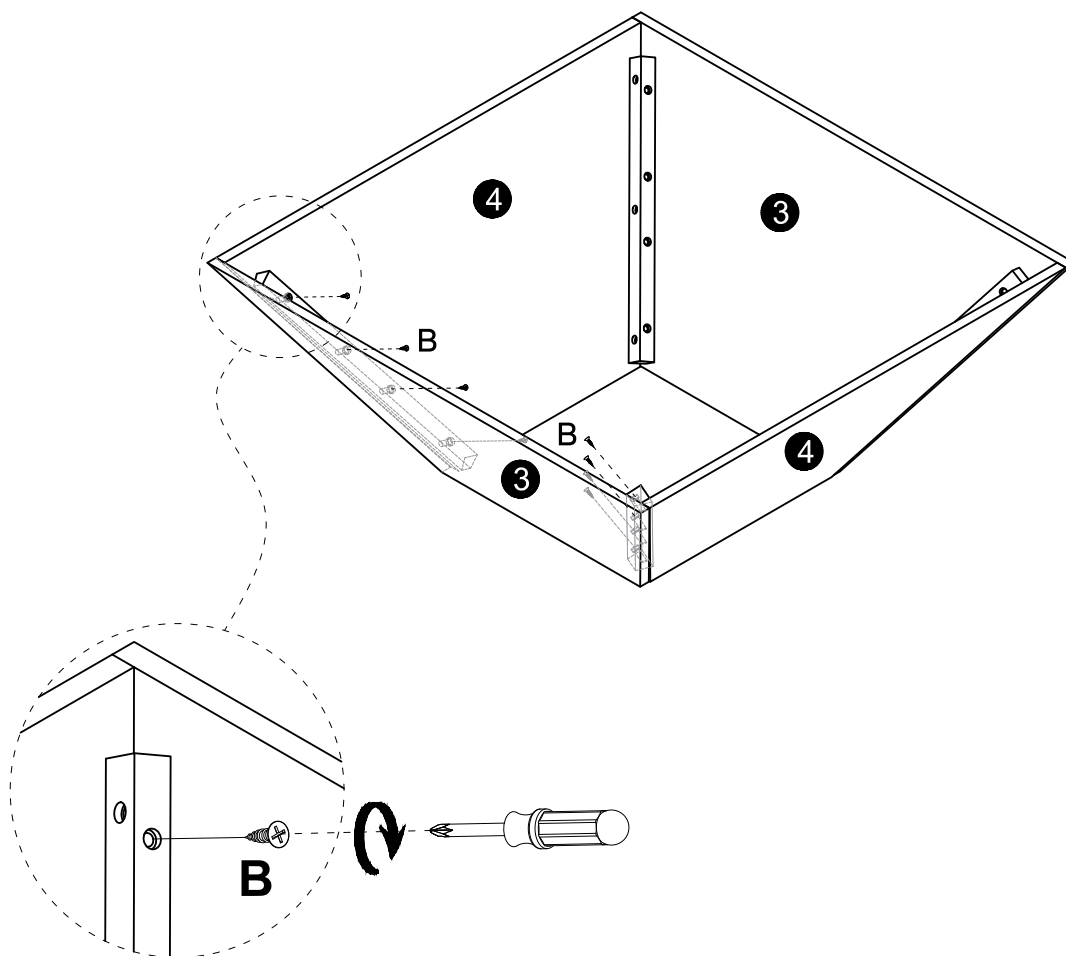

B

Ø3.5x30mm
8 pcs

10

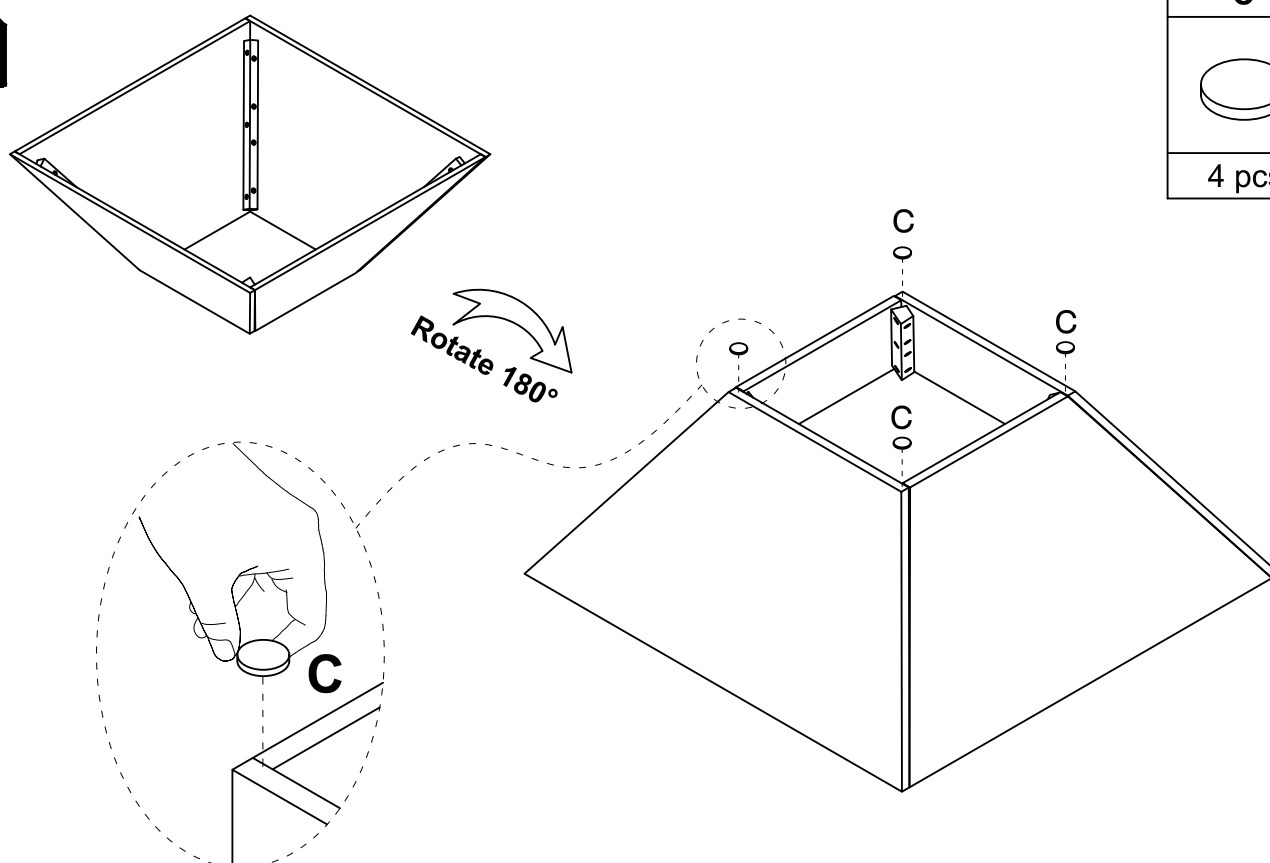


C

4 pcs




11

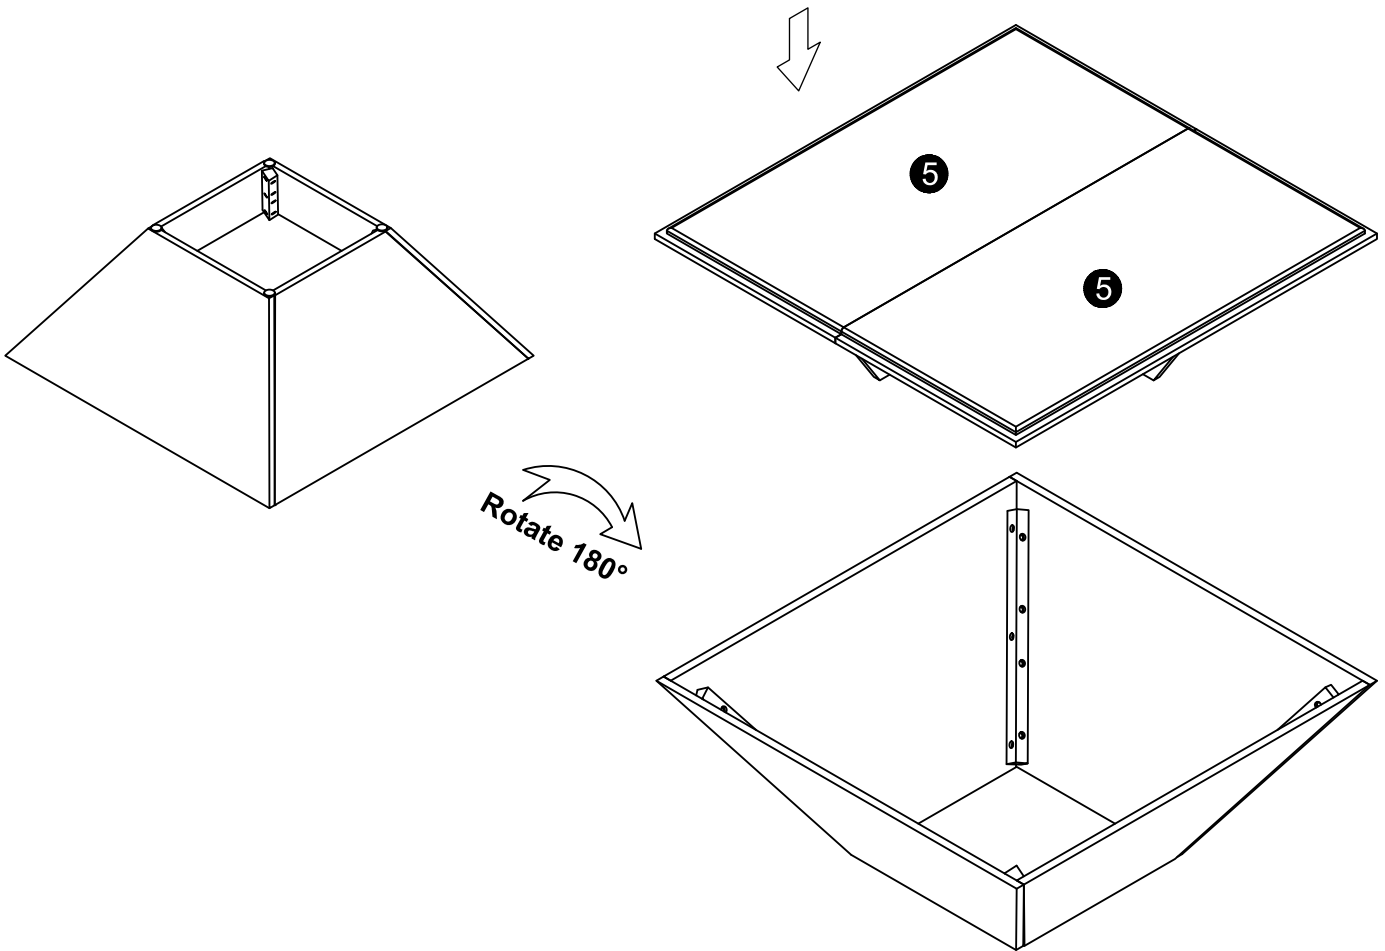



DESIGNED FOR LIFE

Thank you for your support !

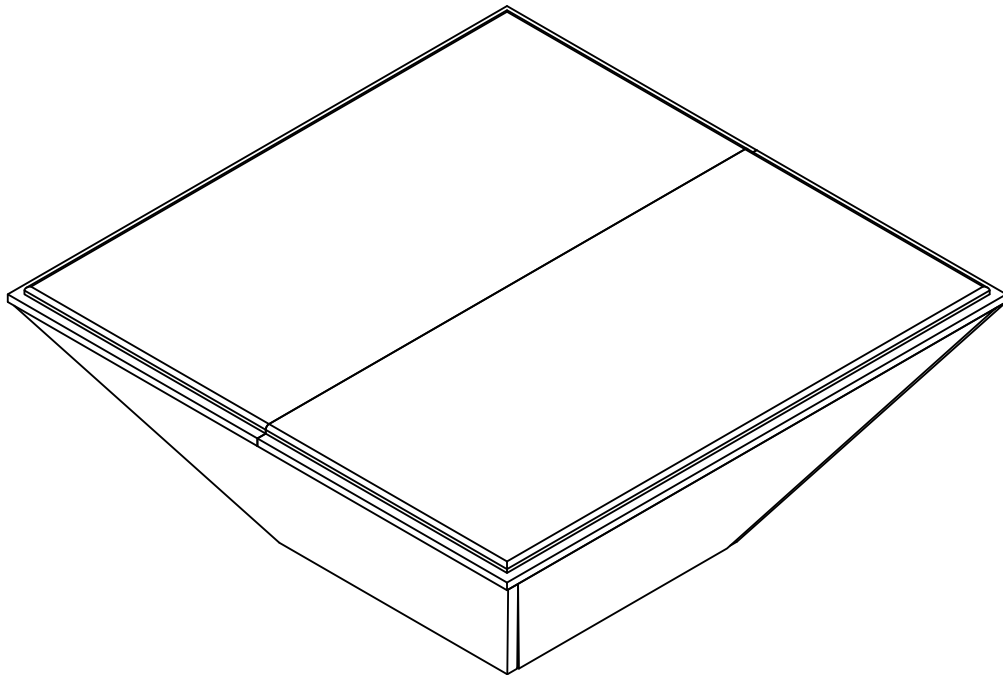

Contact our customer service team



support@tribesigns.com
www.tribesigns.com



1-424-220-6888

7 AM to 8 PM EST,
Monday to Friday

Follow Tribesigns



Facebook



Instagram




Pinterest



Twitter



YouTube

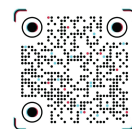

TikTok



WhatsApp