

1998.5-2018 5.9L/6.7L CUMMINS EXHAUST MANIFOLD BOLT AND SPACER KIT

P/N 216110100

Kit Includes:

- 12X Manifold Bolt (M10)
- 12X Spacer
- 2x Stainless Steel Heat Shield Screw
- 2X Heat Shield Washer
- 1X Fastener Lubricant Packet

PPE recommends replacement of manifold gaskets. Install the exhaust manifold and gaskets. Install the bolts and spacers and tighten the bolts in the sequence shown to 32 lb-ft.


1998.5-2018 5.9L/6.7L CUMMINS EXHAUST MANIFOLD STUD, NUT & WASHER KIT

P/N 216110200

Kit Includes:


- 12X Manifold Stud (M10)
- 12X Flange Nut
- 12x Flat Washer
- 1X Fastener Lubricant Packet


PPE recommends replacement of manifold gaskets. Hand tighten studs to cylinder head with Allen sockets facing outward. Install the exhaust manifold and gaskets. Install the supplied washers and nuts. Tighten nuts in the sequence shown to 38 lb-ft.

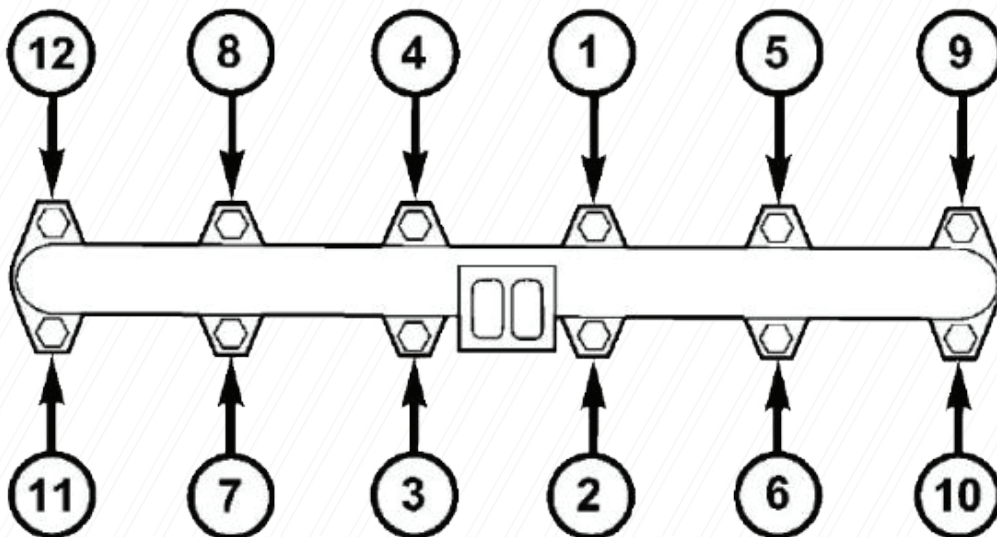


8102cd8b

@PPEpower    

 725. 238. 2002

 sales@ppepower.com

 PPEpower.com