

# Carson Linear Chandelier

KC1091 1.0

## GENERATION LIGHTING CHANDELIER

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.

This product may be dimmed with an electronic dimmer.

This product may require the help of another person for installation.


This instruction shows a typical installation.

### CAUTION - RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


Use minimum 90°C supply conductors.

**SAVE THESE INSTRUCTIONS!**

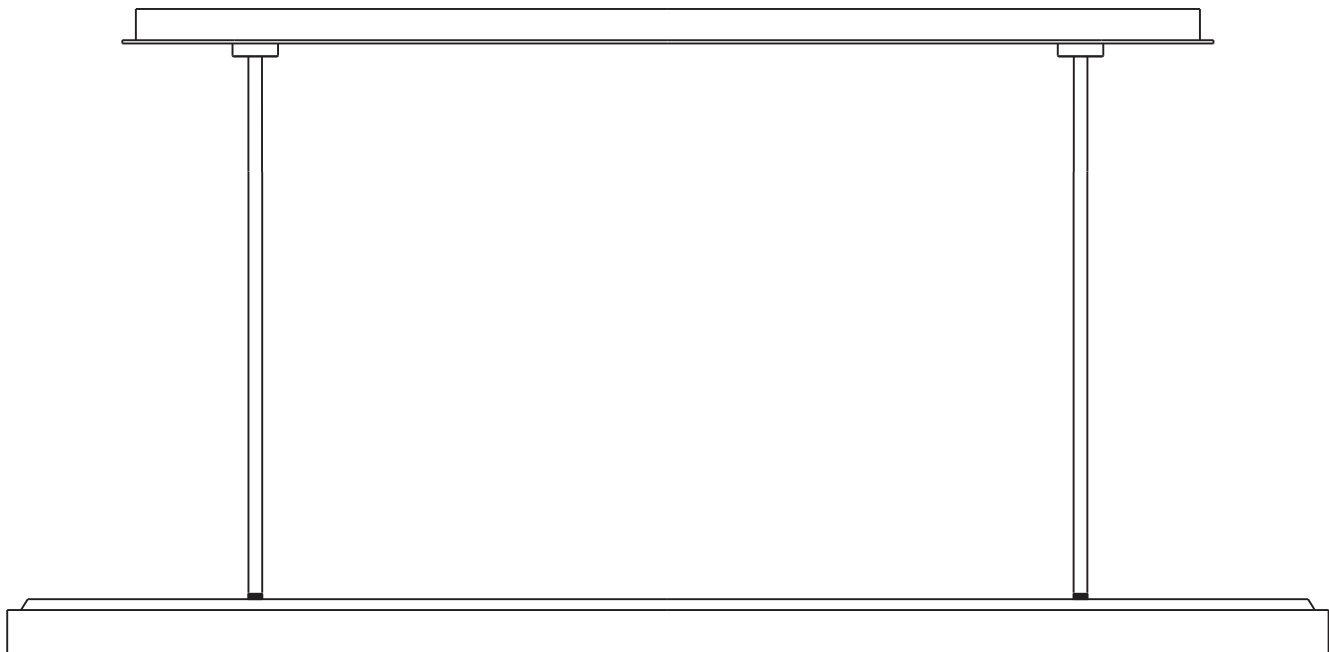

GENERATION LIGHTING  
7400 Linder Ave., Skokie, IL 60077  
T 847.410.4400 | F 847.410.4500  
www.generationlighting.com

# Install the Fixture

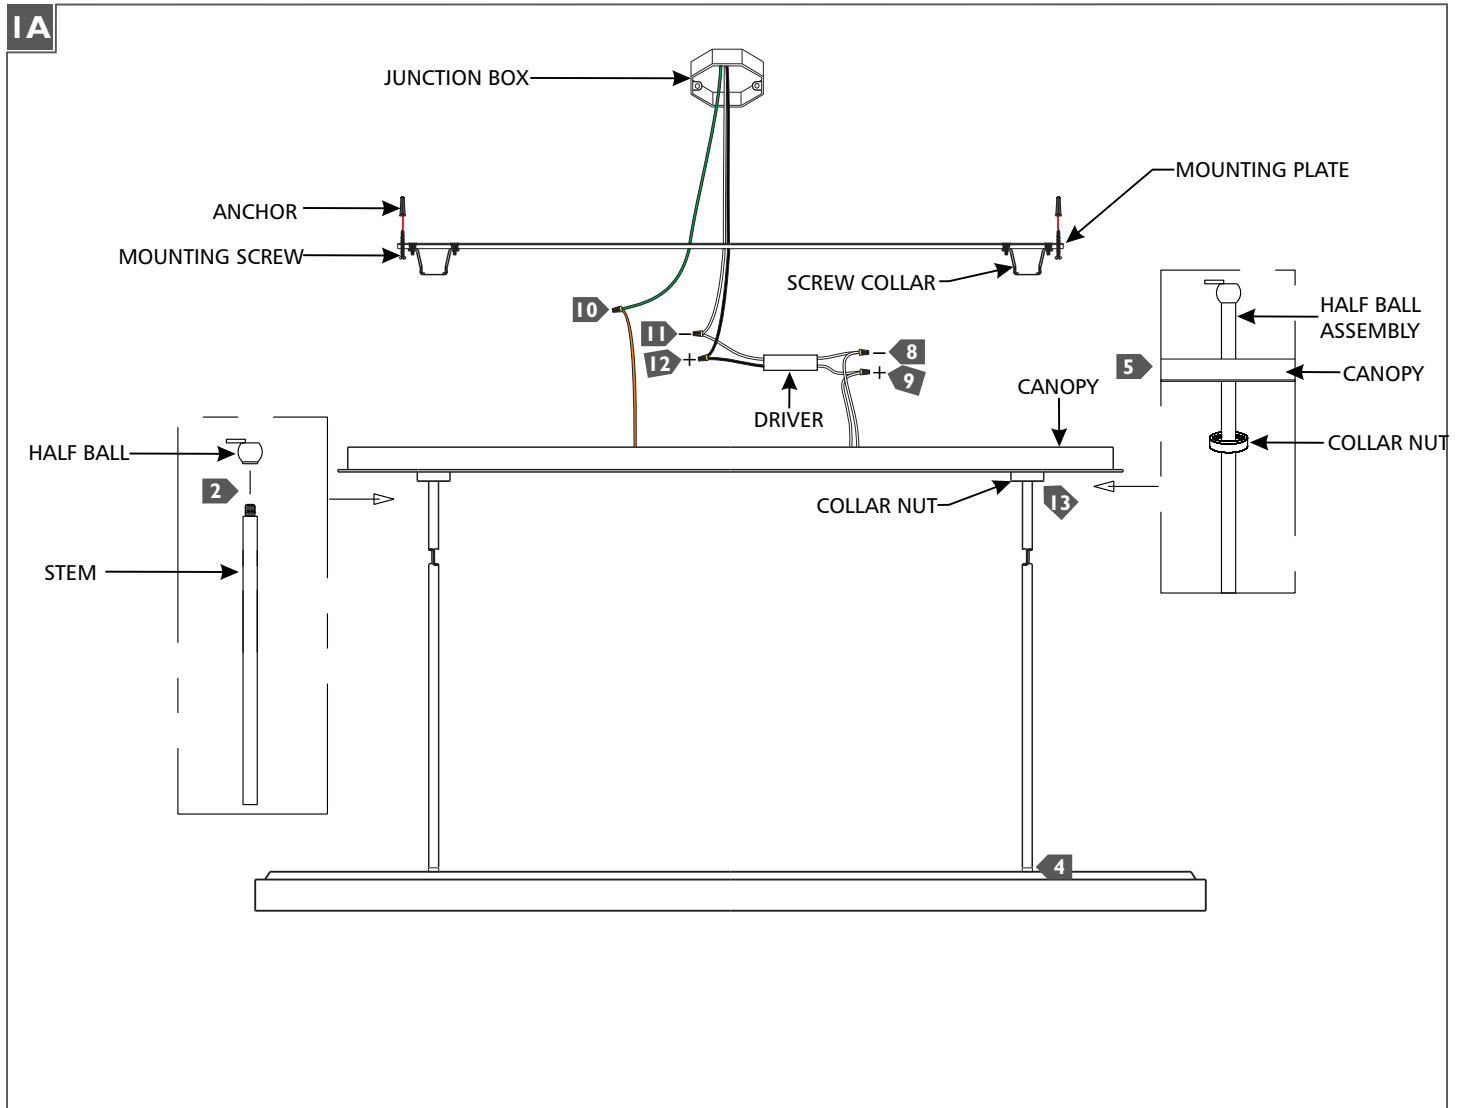

- 1 Secure the mounting plate to the ceiling with the provided hardware.
- 2 Screw the half ball to the stem which will be on top. Repeat for the other side.
- 3 Determine the wanted height or look of the fixture with the provided stems, then assemble them by screwing them together. Do not include half ball/stem assembly.
- 4 Feed the fixture wires through the stem assembly, then screw the stem assemblies to the top of the fixture.
- 5 Install the collar nuts onto the stems, then slide the canopy onto the stem assemblies.
- 6 Feed the fixture wires through the half ball assembly, then screw the half ball assemblies onto the stem assemblies.
- 7 Lift the fixture assembly and slide the half ball assemblies onto the onto the screw collars on the mounting plate.
- 8 Connect the negative (-) fixture wire (square and/or rigid) to the negative (-) output driver wire with a wire nut.
- 9 Connect the positive (+) fixture wire (round and/or smooth) to the positive (+) output driver wire with a wire nut.
- 10 Connect the fixture to a suitable ground in accordance to local electrical codes.
- 11 Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 12 Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 13 Neatly place the driver and wires into the junction box / canopy, place the canopy onto the mounting plate and secure it in place by screwing the collar nut tightly onto the mounting plate.