




SETUP INSTRUCTIONS


STEP 01

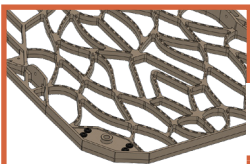

Use 5/32" Allen Wrench to screw AIS Plates onto desired AIS Port on treestand.

2022 Treestand & AIS require the provided nut and washer be secured to underside of bolt and AIS Plate

STEP 02

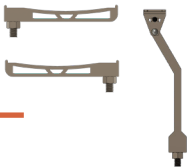

Thread your accessory(s) into their prospective AIS Plate(s).

STEP 03



Adjust accessory to desired position and lock in position with jam-nut.

HANG STAND
& GO HUNT

**Hardware for both 2022 and 2023 AIS plates are provided

VERTICAL™
TREESTANDS