


Measure manual

How to take the correct measures for Petrie's riding boots so that optimum comfort and a good fitform is achieved.

General

Take measures over riding-breeches and socks, using the original **Petrie measuring tape**. Do not pull the tape too tight. Note the achieved measures in the corresponding place at the measure sheet.

CAUTION! Do not confound left and right!

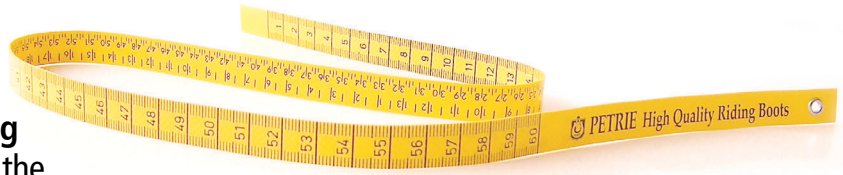


1. Shaft height
(measure standing)
At the outside of the leg from the ground to the splintbone knob and at the back from the ground highly into the hollow of the knee (top knob - top hollow of the knee).
CAUTION! These two measures must be equal, otherwise they were not taken correctly!





2. Neck(???)
(measure sitting)
Measure in the hollow of the knee off the splintbone knob (top knob - top hollow of the knee).
CAUTION! Both legs must be placed right-angled and loosely on the ground.



3. Calf outline
(measure sitting)
Measure the thickest outline of the calf – don't pull the tape too tight!
CAUTION! Both legs must be placed right-angled and loosely on the ground.

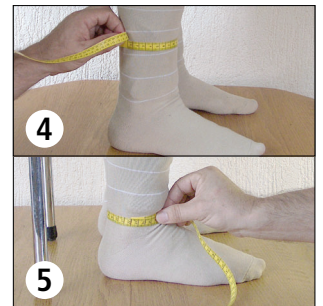

4. Upper ankle
5. Ankle
For boots that should fit tightly around the ankle, the outline of the upper ankle (10 cm above the ankle) and the ankle should be measured as well.
CAUTION (5)! Measure the smallest outline of the ankle, above the knob.

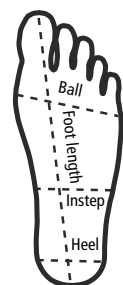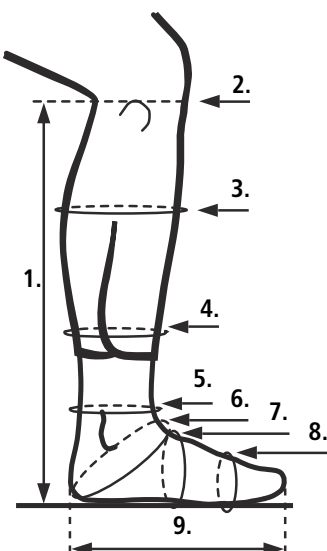

6. Heel / 7. Instep / 8. Ball
(measure standing)
Take the three outline measures – as shown on the pictures and sketch – with loosely laid measuring tape. (Compare achieved measures with those of standard boots to see whether it is necessary to make boots to measure.)

9. Foot length
Always indicate the measures in centimeters.
In case of measure-made boots a footprint in fitfoam* must be sent in with the measure sheet. Therewith an exact footbed can be produced. For that your customer will be grateful!

*Request some fitfoams as a supply.

It is meaningful to mention the shoe size the customer normally wears.

