


LEADING EDGE SAFETY

CORRUGATED SKYLIGHT SCREEN INSTALLATION

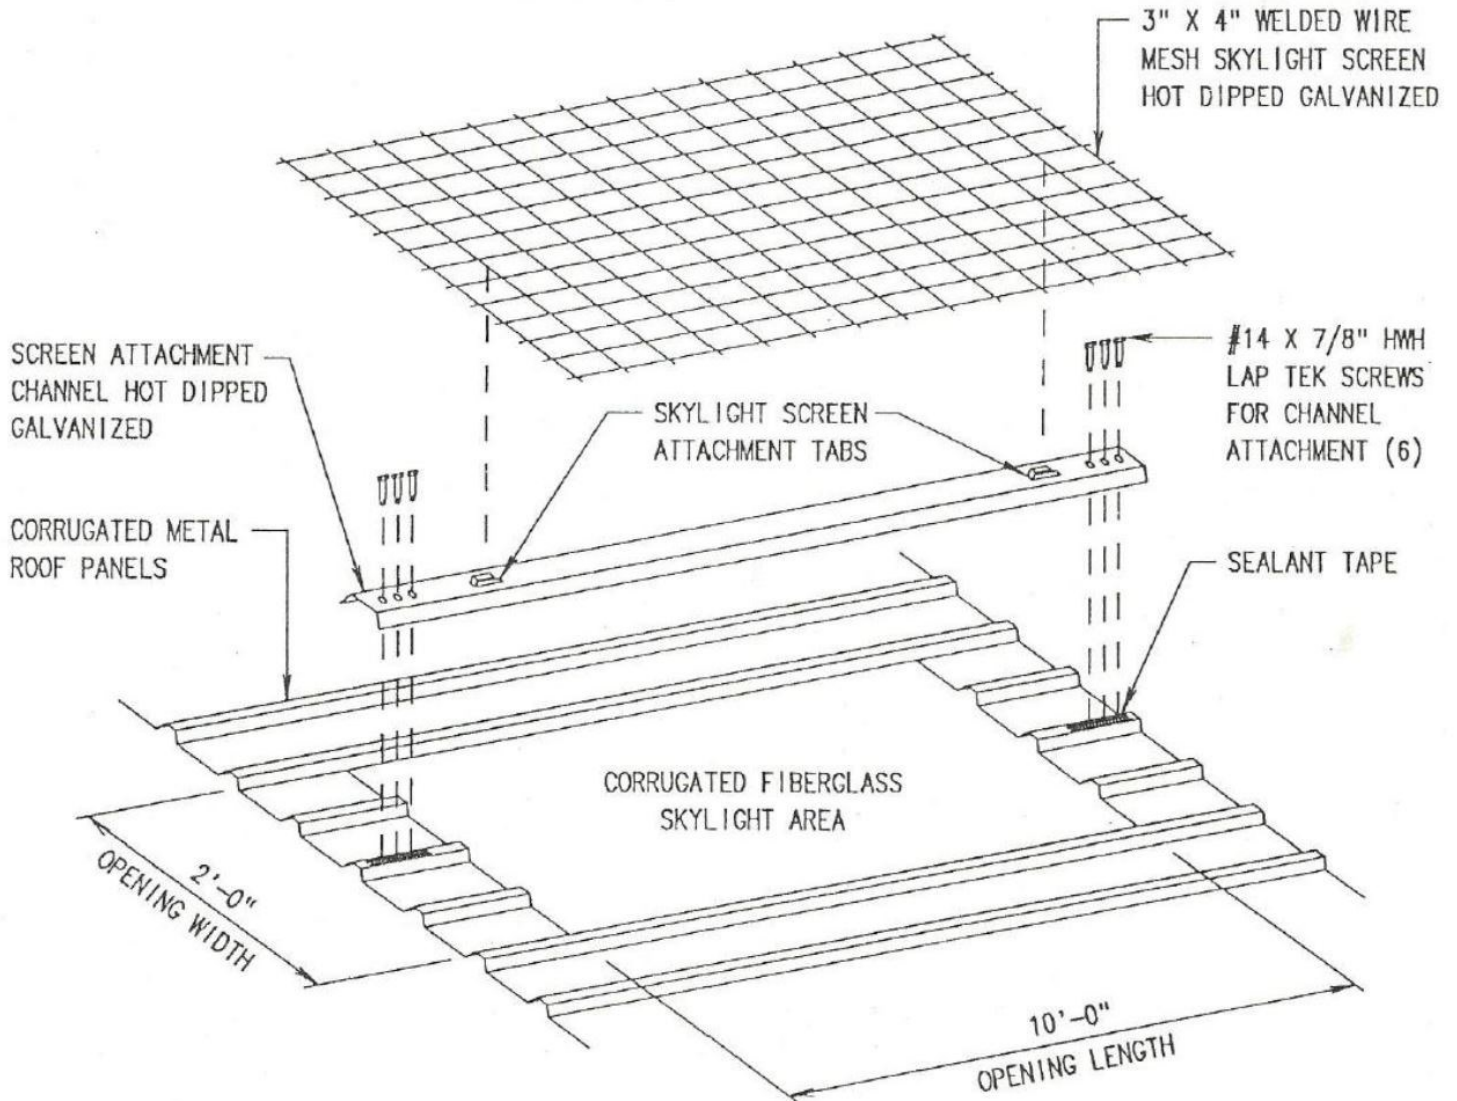

INSTALLATION INSTRUCTIONS

Do not place body weight on skylights during installation. Use proper fall protection and other PPE when working near roof skylight openings and during installation.

1. The skylight screen channel should be mounted on the highest corrugation nearest the center of the skylight.
2. On the high end, the fiberglass skylight should be under the corrugated metal. Clean and install the adhesive/sealant pads on the corrugated metal approximately 1" from the edge. Be sure to remove the release liner from the adhesive/sealant pads.
3. Position the skylight screen channel so that the three mounting holds in the channel are positioned over the adhesive pads.
4. Fasten the high end of the screen channel to the corrugated metal using the self-drilling screws.
5. Proceed to lower end of the skylight screen channel. Clean area under the three holes in the channel and install the adhesive/sealant pads. Fasten the lower end of the skylight screen channel to the corrugated metal panel.
6. Center the skylight screen over the skylight and insert the screen under the tabs on the skylight screen channel. Bend tabs over the skylight screen to secure.