

Stellar


Freestanding Outdoor Shower Installation Instructions

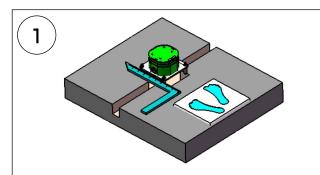



Place the concealed body in the desired position of the shower. Mark and drill (4) holes.

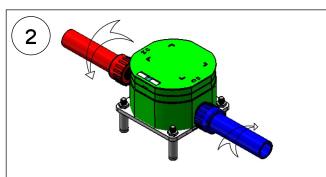


Connect the hot and cold supply pipes to the concealed body and check for any leaks.

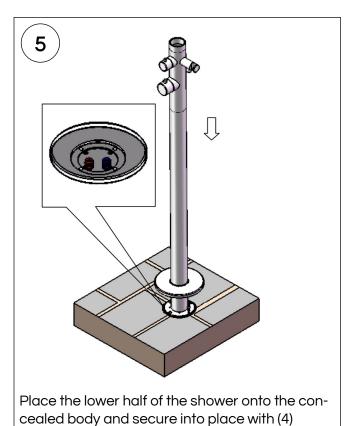

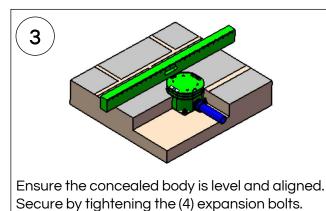

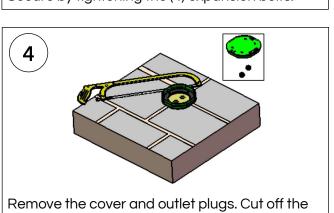

excess plastic portion of the concealed body.

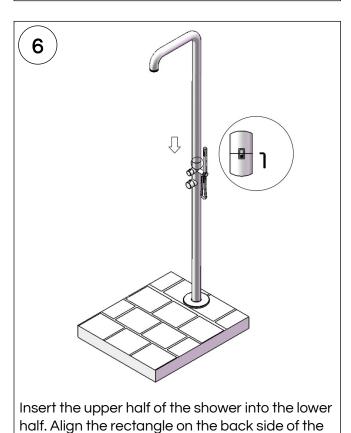

shower and secure the set screw.

screws.