


KEONJINN

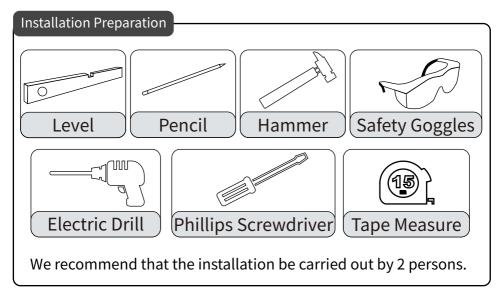



INSTALLATION OF MIRROR

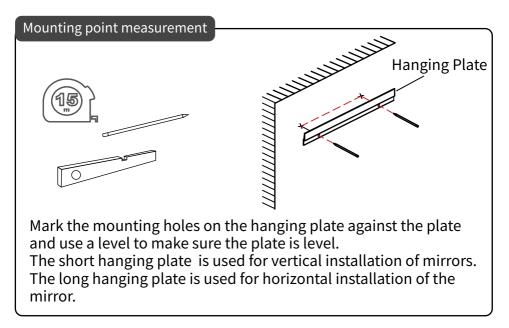

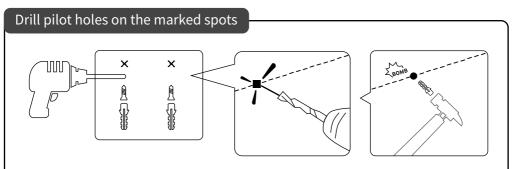

Use an electric drill to punch four 6mm holes at the marked spots, and then apply wall anchors with hammer. (6mm drill bit, drilling depth in 5 cm)

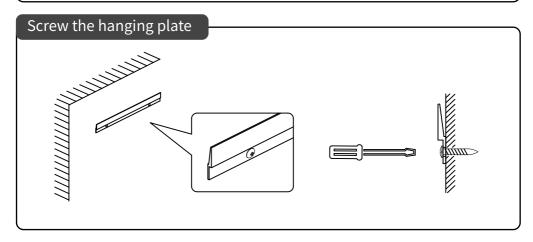

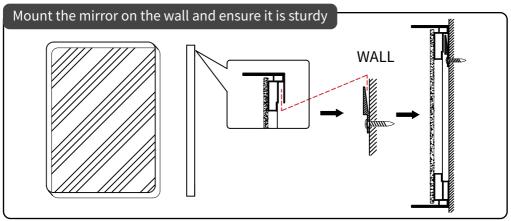

If you have any problem, please feel free to contact us on sales@keonjinn.com