

SPORTGLIDE CUSTOM

**Paul Yaffe's
Bagger
Nation™**



FENDER ADAPTER

INSTALL INSTRUCTIONS



PAUL YAFFE ORIGINALS
DESIGN & DEVELOPMENT


1

2

3

4

ITEM NO.	Part Num	DESCRIPTION	QTY.
1	SBHCSCREW 0.19-32x0.5-HX-C	Button Head Cap Screw	2
2	Regular LW 0.19	Lock Washer	2
3	IFRS	Inverted Fork Rock Shield	1
4	IFFB-T-OEM-13E	Inverted Fork Fender Bracket Top Black L/R	1
5	IFFB-U-OEM-13E	Inverted Fork Fender Bracket Upright R/L	1
6	SCHCSCREW 0.25-20x1x1-HX-C	Flat Head Socket	1
7	SPS 0.1875x0.375	Slotted Spring Pin	1
8	Regular LW 0.3125	Lock Washer	2
9	Preferred Narrow FW 0.3125	Flat Washer	2
10	HBOLT 0.3125-18x0.5x0.5-C	Hex Head	2

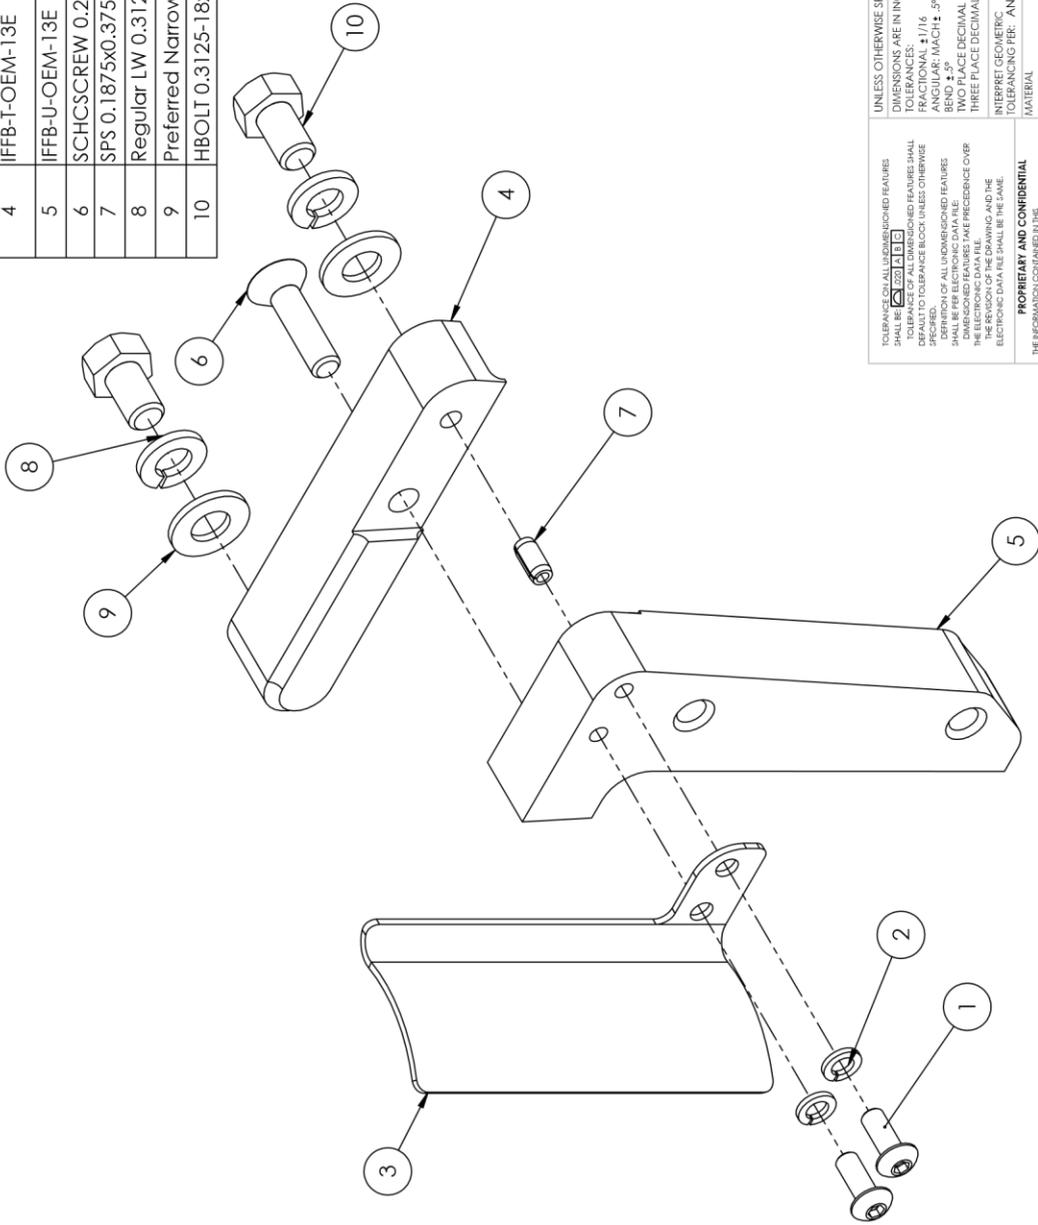

RIGHT SIDE SHOWN

1

2

3

4



TITLE:
Sport Glide Fender Adapter
18L L/R

SIZE PART. NO. REV
B PYC-SGFA-18L **B**
 SCALE: 1:1 WEIGHT: SHEET 1 OF 1

UNLESS OTHERWISE SPECIFIED:
 DIMENSIONS ARE IN INCHES
 TOLERANCES: ±.010
 ±.015
 ±.020
 ±.030
 ±.040
 ±.050
 ±.060
 ±.070
 ±.080
 ±.090
 ±.100
 ±.125
 ±.150
 ±.1875
 ±.250
 ±.3125
 ±.375
 ±.500
 ±.625
 ±.750
 ±.875
 ±1.000
 ±1.125
 ±1.250
 ±1.375
 ±1.500
 ±1.625
 ±1.750
 ±1.875
 ±2.000
 ±2.125
 ±2.250
 ±2.375
 ±2.500
 ±2.625
 ±2.750
 ±2.875
 ±3.000
 ±3.125
 ±3.250
 ±3.375
 ±3.500
 ±3.625
 ±3.750
 ±3.875
 ±4.000
 ±4.125
 ±4.250
 ±4.375
 ±4.500
 ±4.625
 ±4.750
 ±4.875
 ±5.000
 ±5.125
 ±5.250
 ±5.375
 ±5.500
 ±5.625
 ±5.750
 ±5.875
 ±6.000
 ±6.125
 ±6.250
 ±6.375
 ±6.500
 ±6.625
 ±6.750
 ±6.875
 ±7.000
 ±7.125
 ±7.250
 ±7.375
 ±7.500
 ±7.625
 ±7.750
 ±7.875
 ±8.000
 ±8.125
 ±8.250
 ±8.375
 ±8.500
 ±8.625
 ±8.750
 ±8.875
 ±9.000
 ±9.125
 ±9.250
 ±9.375
 ±9.500
 ±9.625
 ±9.750
 ±9.875
 ±10.000

A

B

Thank you for purchasing Paul Yaffe's Bagger Nation products. Please read through these instructions completely before attempting installation.



1.
Check the contents for missing hardware

2. Using (2) 5/16 x 1/2" bolts, flat washers & lock washer provided assemble adapter block marked "R" on right side of fender.



Note: Right & Left are determined The "R" faces outside surface of fender only **when sitting on bike.**

Remember to, **BLUE LOCTITE®** and finger tighten at this time (Fig #3)

Right = Air cleaner side

Left = kickstand side (Fig #2)



3. Slide fender in place over tire & repeat step #2 only this time with the bracket marked “L” on the left side (Fig # 4) Again, **BLUE LOCTITE®** and finger tighten only.

4. Raise fender into position and reusing your stock fender mounting bolts, install fender (Fig #5)

Tighten block bolts at this time.



5. While pushing lightly down on the front tip of fender, tighten the (4) 5/16 x 1/2” bolts paying attention while tightening to the rear of fender staying centered over tire.



6. Install debris guards on right & left sides. Check fender fastener torque & gently turn wheel from side to side for clearance. Squeeze front brake & depress fork checking for paper travel clearance. (Fig #6)
7. Now go ride your badass looking Sport Glide & tell you friends where your fender came from!!

Thanks for choosing Bagger Nation Designs!



**Paul Yaffe's
Bagger
Nation™**

