

INSTRUCTION SHEET



SOUND CONTROL KIT FOR INDIAN CHIEFTAIN, ROADMASTER & DARKHORSE

INCLUDED COMPONENTS:

- Pre-cut Dynamat Xtreme (14)
- Pre-cut Dynaliner (4)

HELPFUL FOR INSTALLATION:

- Gloves
- Utility Knife

QUESTIONS?




EMAIL:
info@getklocked.com
CALL: (605) 996.3700



1



2

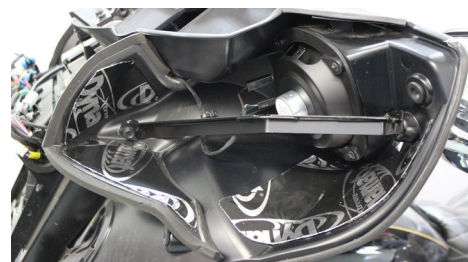

3



4



5



6

1. Remove outer fairing and rest on a soft cloth.
2. Clean any dust and debris from inside the outer fairing.
3. Test fit Dynamat Xtreme to check for alignment and position with paper backing still attached. **(1)**
4. Remove paper backing to expose butyl layer.
5. Apply Dynamat Xtreme to designated area using light pressure at first, to aide in adjustment. **(2, 3 and 4)**
6. Smooth from center outward to prevent air pockets. Use a rag or gloves and work into contours of the fairing. If an air pocket develops, simply puncture with a knife or pin and roll smooth.
7. Test fit Dynaliner to check alignment with paper backing still attached.
8. Peel the release liner, and apply **Dynaliner (Components O, P, Q, and R)** directly to the **Dynamat Xtreme**, pressing it firmly into place. **(5 and 6)**




These two pieces WILL NOT fit models equipped with an infotainment system.


CAUTION: Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.

COMPONENT SHEET

DYNAMAT

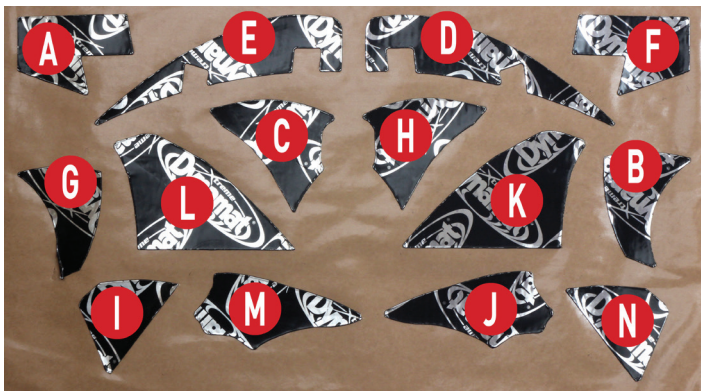

DYNALINER

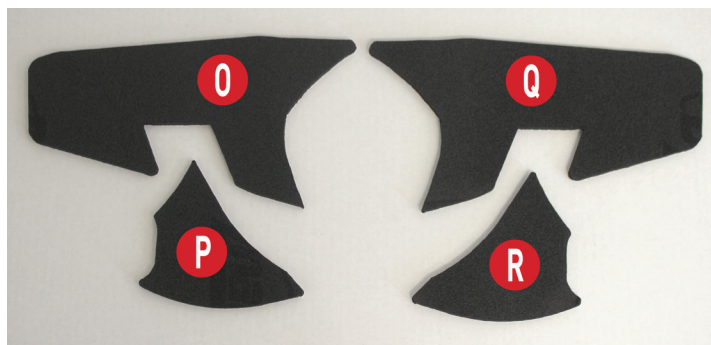


DYNAMAT COMPONENTS MUST BE APPLIED BEFORE DYNALINER COMPONENTS.

OUTER FAIRING



LEFT INNER FAIRING

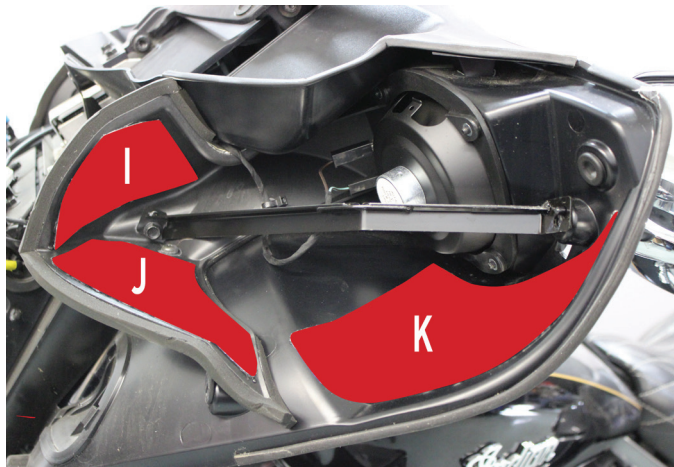

RIGHT INNER FAIRING

