

INSTRUCTION SHEET



SOUND CONTROL KIT FOR VICTORY

INCLUDED COMPONENTS:

- Pre-cut Dynamat Xtreme (14)
- Pre-cut Dynaliner (12)

HELPFUL FOR INSTALLATION:

- Gloves
- Utility Knife

QUESTIONS?



EMAIL:
info@getklocked.com
CALL: (605) 996.3700




1



2



3

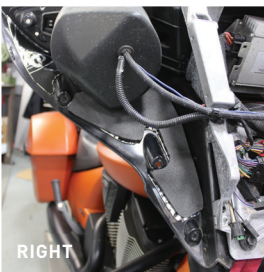

RIGHT

4



5



LEFT

6




7

1. Remove outer fairing and rest on a soft cloth.
2. Clean any dust and debris from inside the outer fairing.
3. Test fit Dynamat Xtreme to check for alignment and position with paper backing still attached. **(1)**
4. Remove paper backing to expose butyl layer.
5. Apply Dynamat Xtreme to designated area using light pressure at first, to aide in adjustment. **(2-3)**
6. Smooth from center outward to prevent air pockets. Use a rag or gloves to flatten the Dynamat Xtreme and work into contours of the fairing. If an air pocket develops, simply puncture with a knife or pin and roll smooth.
7. Test fit Dynaliner to check alignment with paper backing still attached.
8. Peel the release liner, and apply **Dynaliner (Components A2, B2, C2, D2, E2, F2, H2, I2, J2, K2, and N2)** directly to the **Dynamat Xtreme**, pressing it firmly into place. **(4-7)**


CAUTION: Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.

COMPONENT SHEET

DYNAMAT

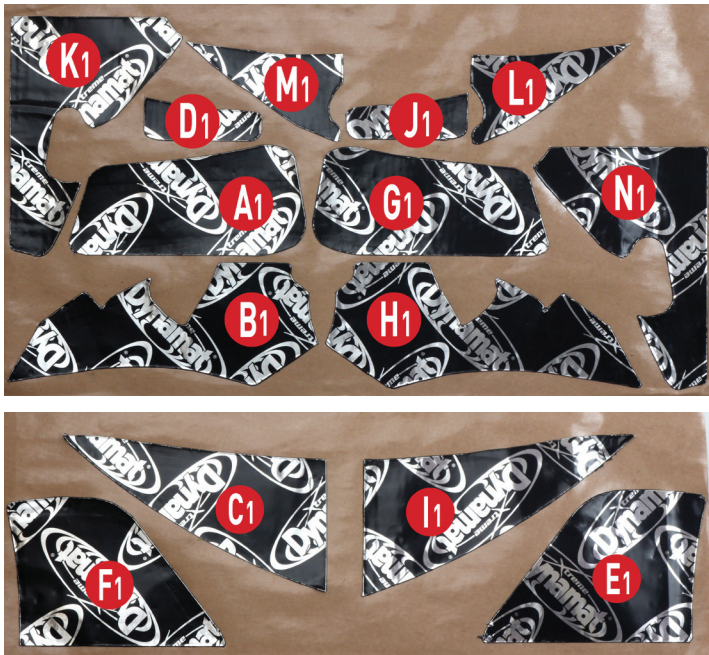


DYNALINER

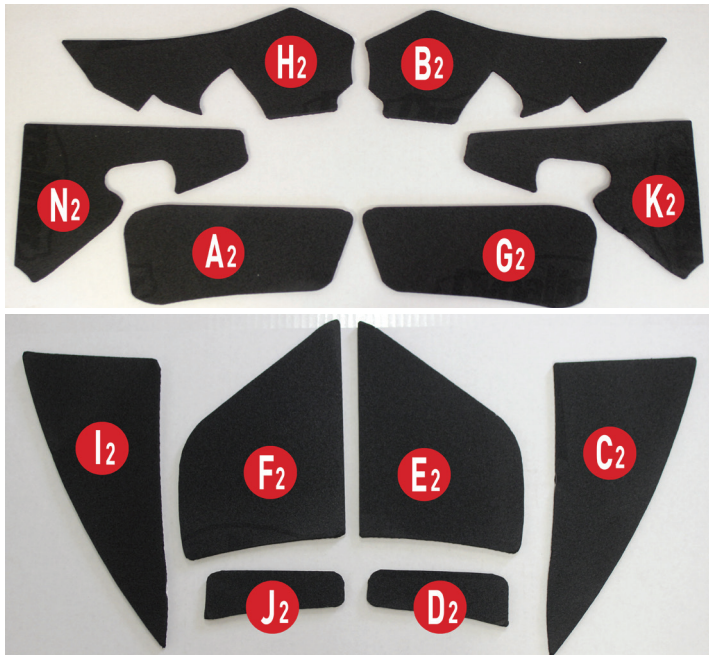

Dynamat components designated with a 1 must be applied before Dynaliner components designated with a 2.

OUTER FAIRING

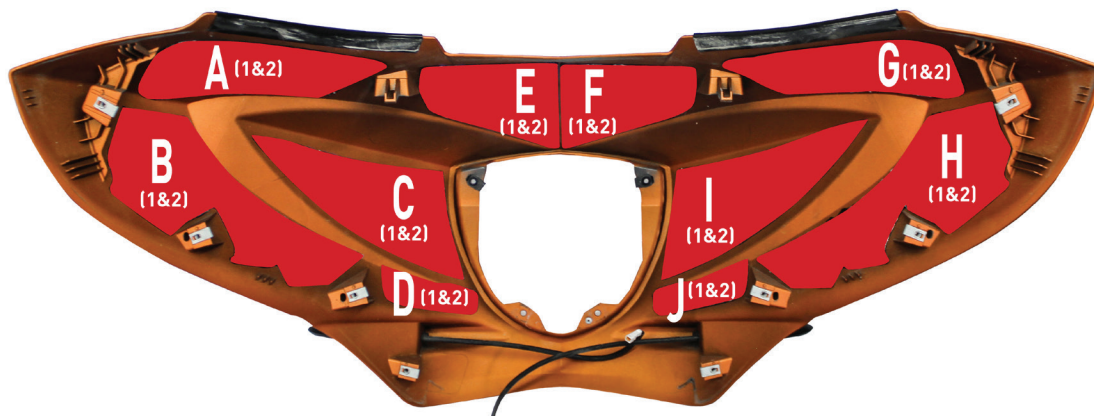

LEFT INNER FAIRING



RIGHT INNER FAIRING

