

INSTRUCTION SHEET



REYTELO SIDE COVERS FOR INDIAN CHIEFTAIN | ROADMASTER - CLASSIC BODY STYLE

PART NUMBER:
+ KWS-04-0400

KIT CONTENTS:
+ (2) Side Covers
+ (1) Center Spacer
+ (1) Hardware Kit

NOTE:
Always refer to model appropriate service manual for procedures and torque specifications


QUESTIONS?
 **EMAIL:**
info@getklocked.com
 **CALL:** (605) 996.3700

FIG 1



FIG 2

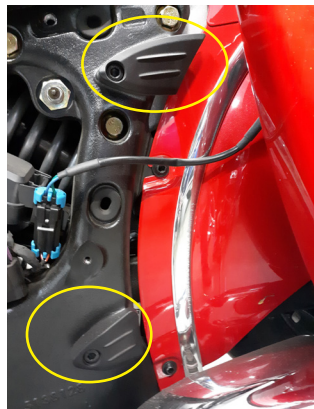


FIG 3



FIG 4



NOTE: Before sending to paint, we highly recommend you test fit all parts to ensure proper fitment.

1. Remove the two side seat bolts and saddlebags, if equipped.
2. Remove passenger foot pegs including the mounts, if equipped (FIG 1)
3. Remove both the upper and lower side covers on the left and right sides
4. Remove the right and left-side saddlebag guard mount plugs (FIG 2)
5. Determine whether or not the passenger foot pegs are going to be reinstalled. Refer to cut-out attachments if reinstalling; otherwise proceed to the next step.
6. Loosely install the right side cover using the seat bolt removed in Step 1 and a supplied M8 button head bolt with a washer in the lower hole (FIG 3 & 4)

INSTRUCTION SHEET

FIG 5



FIG 6



FIG 7





FIG 8



7. Loosely install the center spacer using supplied M6 button head screws and washers (FIG 5 & 6)
8. Loosely install the left side cover using the other seat bolt that was removed in Step 1 and a supplied M8 button head bolt with a washer in the lower hole (FIG 7 & 8)
9. Once everything is lined up, secure the side covers to the frame
10. Secure the center spacer


11. Reinstall the passenger foot pegs, if equipped (See step 5)
12. Reinstall the saddlebags, if equipped

NOTE: Full size cut out foot peg templates attached on next page.

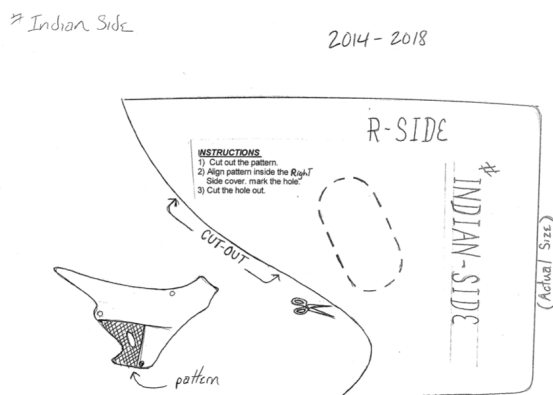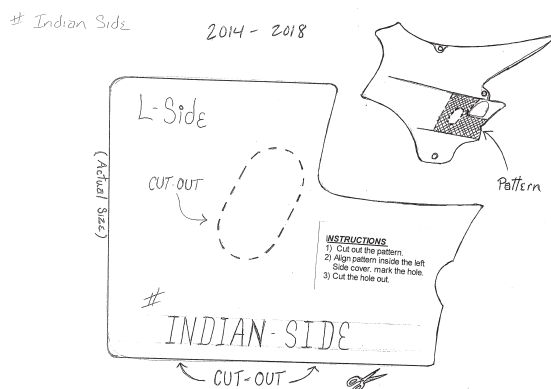

Indian Side

2014 - 2018

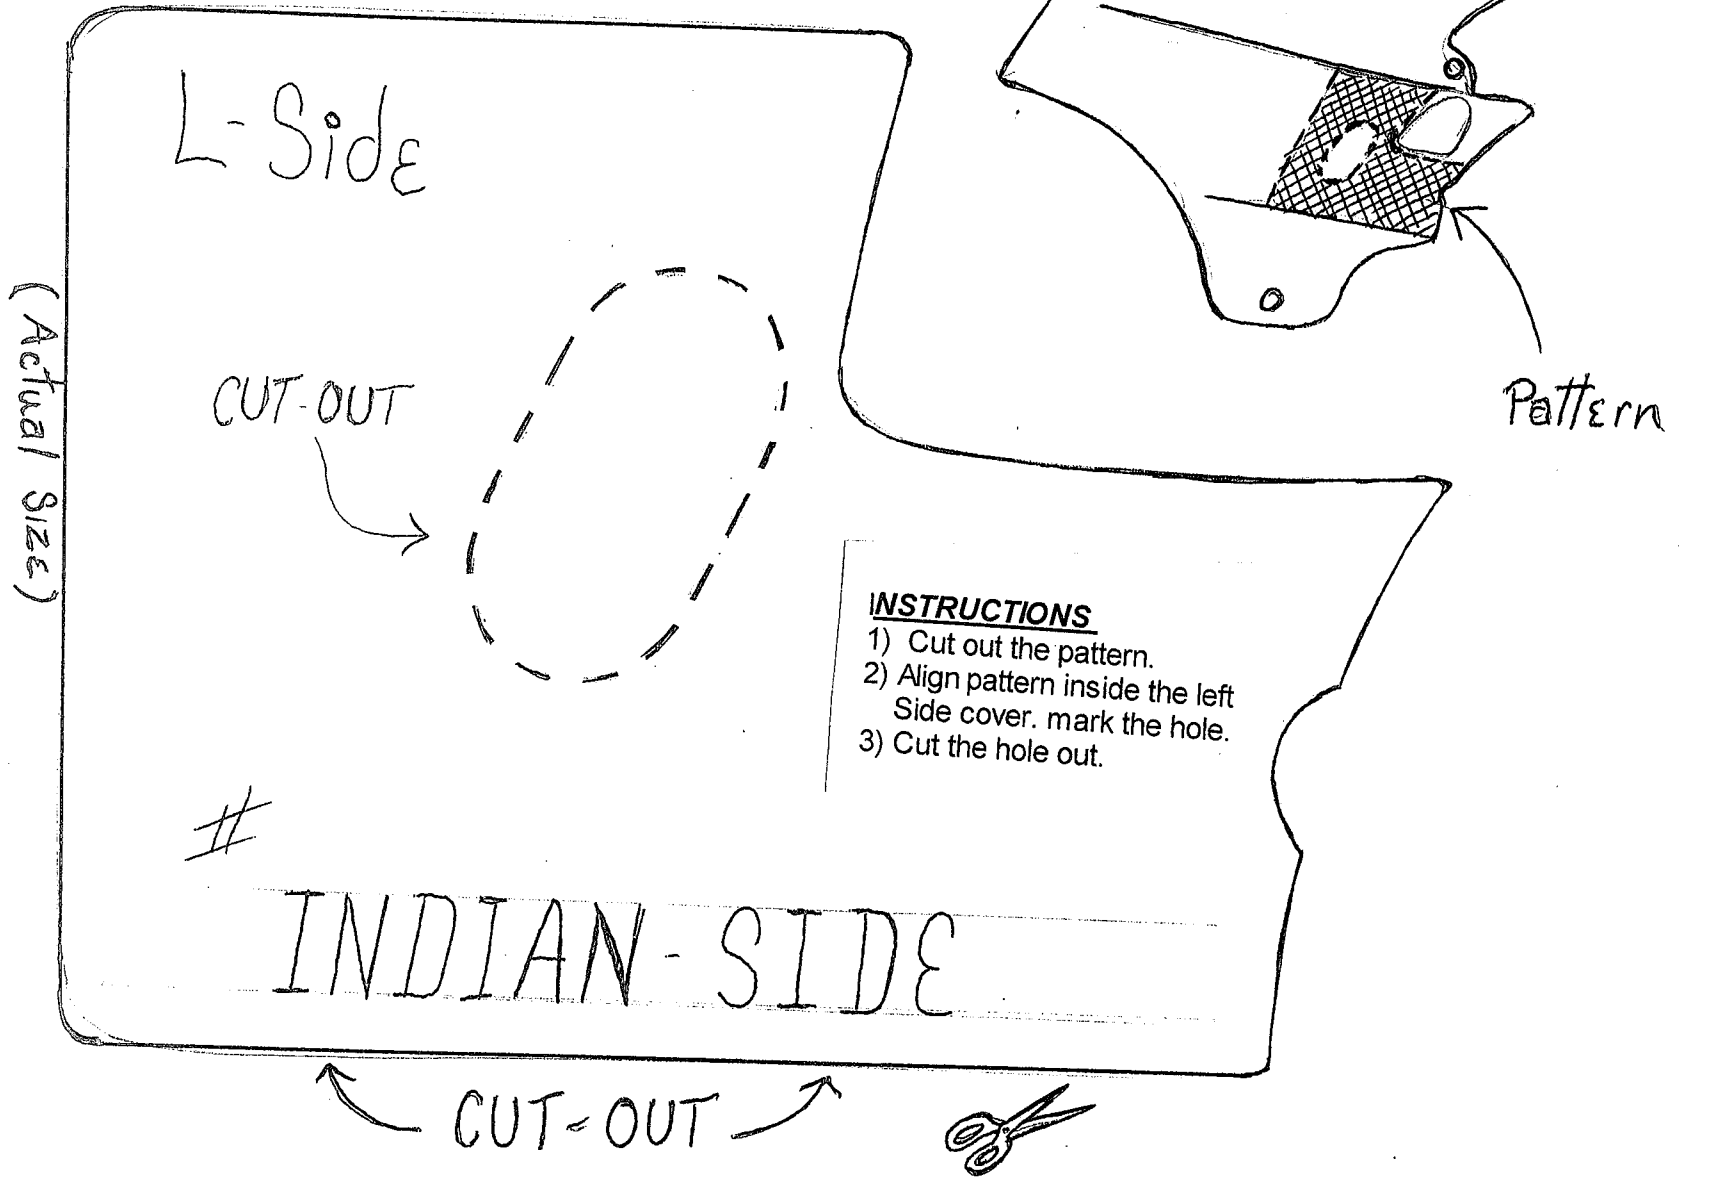

Indian Side

2014-2018

