

SOUND CONTROL KIT

for Indian Chieftain Limited and Chieftain Darkhorse

INCLUDED COMPONENTS:

- + Pre-cut Dynamat Xtreme (11)
- + Pre-cut Dynaliner (2)
- + Instruction Sheet

HELPFUL FOR INSTALLATION:

- Gloves
- Utility Knife




CAUTION: Klock Werks cannot be held responsible for any damage to painted surfaces during removal or addition of Klock Werks parts.

QUESTIONS?

EMAIL:
info@getklocked.com

CALL:
(605) 996.3700

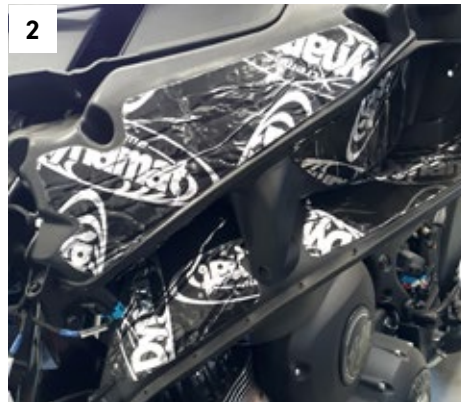

1. Remove outer fairing and rest on a soft cloth.
2. Clean any dust and debris from inside the outer fairing.
3. Test fit Dynamat Xtreme to check for alignment and position with paper backing still attached.
4. Remove paper backing to expose butyl layer.
5. Apply Dynamat Xtreme to designated area using light pressure at first, to aide in adjustment.
(FIG 1, 2 AND 3)
6. Smooth from center outward to prevent air pockets. Use a rag or gloves and work into contours of the fairing. If an air pocket develops, simply puncture with a knife or pin and roll smooth.
7. Test fit Dynaliner to check alignment with paper backing still attached.
8. Peel the release liner, and apply Dynaliner (COMPONENTS 12 & 13) directly to the outer fairing, pressing it firmly into place. (FIG 4 AND 5)


DYNAMAT EXTREME




OUTER FAIRING



RIGHT INNER FAIRING

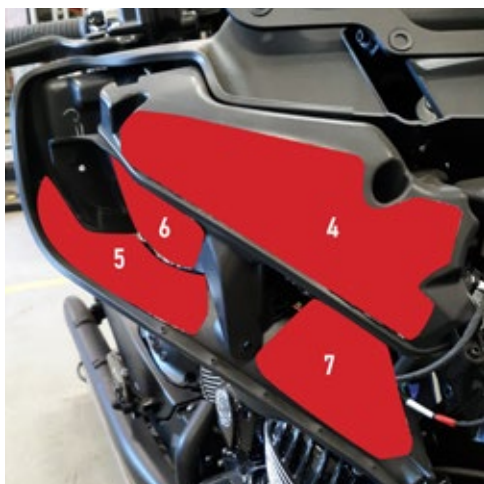

LEFT INNER FAIRING

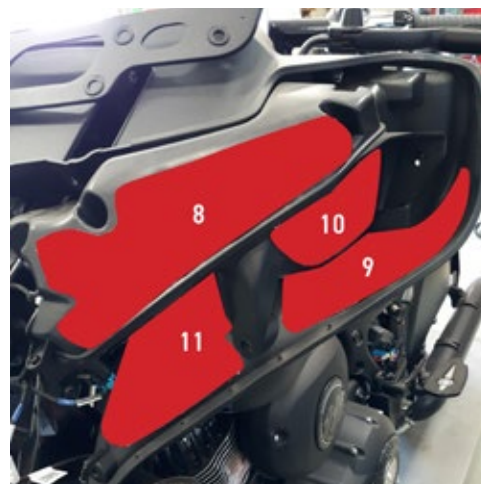

DYNALINER



OUTER FAIRING

