



welcome to
i  mounts®

**UTV GRAB HANDLE PASSENGER MOUNT
FITS UTV/SANDRAIL WITH 3/4" SQUARE GRAB HANDLE**

WATCH THIS VIDEO



SCAN HERE



Learn how to adhere the
iOdisc™ correctly to guarantee
a wonderful experience.

GETKLOCKED.COM/HOW-TO

iOmounts™ COMPONENTS



iOdisc™

KEEP EXTRAS ON HAND!

Once an iOdisc is adhered to a device, it can readily use the iOmounts system.



iOcore™

CUSTOMIZE YOUR LOOK

The magnetic iOcore™ (the powerhouse in this system) is available in multiple colors.

DEVICE TETHER

The Device Tether can be used with almost any smartphone to give an added sense of security and piece of mind when using or mounting your smart device.



Place tether tab through charging port.



Snap phone back in place in your case.




Attach lanyard to tether tab and GO!

INSTALLATION



When adhering the iOdisc™ allow adhesive to set at least 24 hours before attaching to iOcore.

For best results, let set 72 hours before first use.

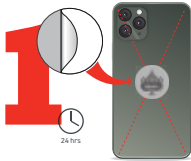

ADHERE

Clean the surface of your device case and allow to dry. Center the iOdisc™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

2



INSTALL

CLAMP INSTALLATION

1. Before installing the clamp over the tube, hold it up and verify the Allen head will be within reach of a 5mm hex tool. Flipping the clamp over may provide better tool accessibility.
2. Position the clamp below the grab handle, with it open at the top. Simply pop the clamp over the 3/4" square bar. There are two small teeth that will keep the clamp from falling while installing the mount arm.

MOUNT INSTALLATION

Install the phone mount to the clamp at the desired location. The hex cavity in the clamp will prevent the locknut from rotating. A small piece of tape can help prevent the nut from falling out.

- Do not over tighten the clamp, damage may occur. If using a torque wrench, do not exceed 54 in-lbs.
- There are three holes in the offset arm that allows for some additional adjustment. The iOsemisphere can be moved to any of these holes for better device clearance and visibility.



ATTACH

Once the iOdisc™ has cured for 24 hours, your device is ready to be attached to *any* iOmount®!



CONNECT TO EVEN MORE...

Connect to stands, wall mounts, car mounts and more. Find it all at:

GETKLOCKED.COM



A FEW TIPS AND TRICKS...

- ➔ We do not recommend using full-size tablets or other larger devices on model-specific, nomad™, nomadXL™, or nomad+™ mounts.
- ➔ While a very strong 3M VHB adhesive is used, the iOdisc™ will not stick to all surfaces and materials. This includes rubber, silicon, soft-touch and other soft and/or textured surfaces.
- ➔ For best results, Klock Werks recommends the use of a smooth plastic, non-silicone case.
- ➔ Each iOdisc™ utilizes permanent adhesive and is very difficult to remove once applied. Klock Werks and/or iOmounts™ are not responsible for any damages caused by the removal of the iOdisc™.

WARNING: When riding or driving, please follow your state laws regarding device use.

QUESTIONS?

DON'T HESITATE TO REACH OUT

WEBSITE

GetKlocked.com

EMAIL

info@getklocked.com

CALL

(605) 996-3700