



FLARE™ FOR 2018+ GL 1800 GOLDWING

INCLUDED COMPONENTS:

- Flare™ Windshield
- Installation Instructions




TOOLS NEEDED:

- 5mm Allen Wrench
- Clean Cloths

QUESTIONS?

- EMAIL: info@getklocked.com
- CALL: (605) 996.3700

1. With ignition on, raise windshield to max height
2. Holding the windshield position switch in the up position, turn ignition off
3. Locate the body rivets on backside of windshield mount and push the center in until you hear it click (Fig 1 and Fig 2)
4. While supporting the windshield mount cover on the front side, use a finger nail or small pick to remove the body rivet (Fig 3)
5. Slide windshield mount cover down slightly and pull out to remove (Fig 4)
6. Push the center of the body rivet back so it is sticking out the back to be ready for installation (Fig 5)
7. Repeat steps 3-6 for other windshield mount cover
8. Using a 5mm hex key remove the four windshield mounting screws (Fig 6)
9. Use caution to make sure both the plastic and rubber washer stay on each shoulder bolt (Fig 7)
10. Remove windshield
11. Install your new Klock Werks Flare™ reinstall four mounting screws insuring the washers stay in place and torque to factory specifications (Fig 8)
12. Install windshield mount covers and replace the body rivet, pushing the center pin in until it clicks at flush.
13. Use your Shine Werks for a final wipe down and enjoy the ride

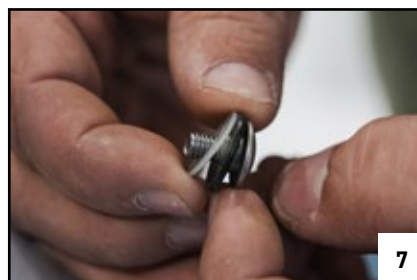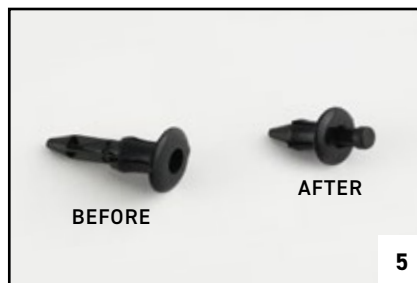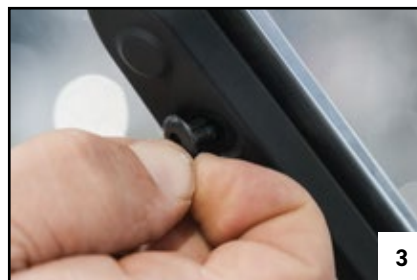

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192