

INSTRUCTION SHEET



FLARE™ WINDSHIELD FOR BMW FOR 2021+ BMW R1250RT


QUESTIONS?
EMAIL: info@getklocked.com
CALL: (605) 996.3700

INCLUDED IN BOX:

(1) Flare™ Windshield (1) Instruction Sheet

TOOLS NEEDED:

+ T25 Torx Driver

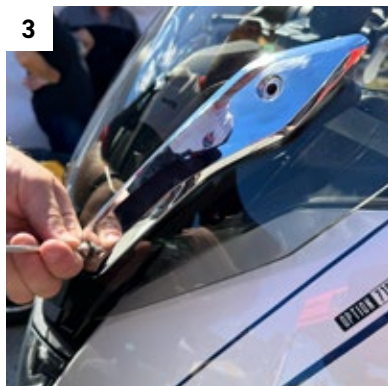

1. Protect all painted surfaces.
2. Remove both screws and trim from the right hand side (**FIG 1**).
3. Temporarily replace top screw through windshield to help hold it in place
4. Remove both screws and trim from the left hand side.
5. Remove top right hand screw and windshield.
6. Remove 4 rubber grommets from windshield and install them in new windshield (**FIG 2**).
7. Temporarily install the top right hand screw through the windshield.
8. Install the left hand trim and both screws but do not tighten (**FIG 3**).
9. Remove top right hand screw.
10. Install right hand side trim and both screws.
11. Tighten all four screws.
12. Clean with Shine Werks and enjoy!

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192