



FLARE™ WINDSHIELD OE REPLACEMENT

INCLUDED IN BOX:

(1) OE Replacement Windshield
Instructions


NOTE:

Be careful not to let brackets slide along new Flare™ during install. This can cause a scratch on Flare™ surface.

QUESTIONS?



EMAIL:
info@getklocked.com
CALL: (605) 996.3700

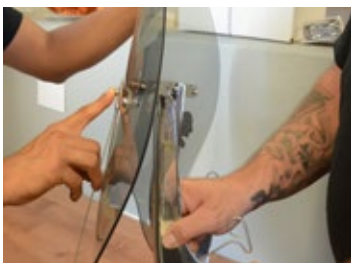

1. Set your stock windshield on a soft scratch-resistant surface.

2. Remove mounting brackets from your stock windshield.

NOTE It helps to start with the side brackets and then remove the top center bracket



3. Clean the brackets of any loose dirt to help prevent scratches on reassembly.

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.



4. Align the top-center bracket and loosely install your brackets onto our Flare™ Windshield.

5. Torque windshield fasteners to factory specifications.



Install bracket hardware using the sequence shown above.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192