

CUSTOMER COPY



FLARE™ WINDSHIELD FOR HONDA F6B

TOOLS NEEDED FOR INSTALLATION:

- 10mm box end wrench
- 8mm nut driver or 8mm socket and ratchet
- plastic putty knife


NOTE:

Klock Werks Flare™ Windshield uses all of the stock mounting hardware. Instructions lead you through removing the stock shield and hardware, and re-installing the Flare™.

QUESTIONS?



EMAIL:
info@getklocked.com
CALL: (605) 996.3700

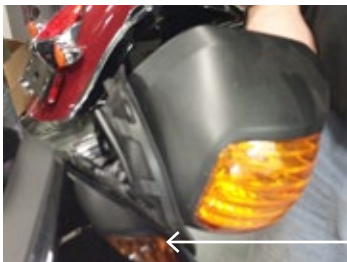

1. Remove mirror boots from outer fairing.
2. Gently fold the mirrors forward to expose the 6mm fairing mount bolts.



5. Use a plastic putty knife or similar non-abrasive tool, gently lift the nose of the fairing off of the four grommets in the lower fairing.
6. Carefully remove front fairing and set aside.



3. Place a rag underneath the mounting bolts to help prevent them from falling into the fairing.



7. Use an 8mm wrench to loosen the windshield mounting screws and remove the stock windshield.



4. Using a 10mm wrench, remove the two mounting bolts.



8. Install your new Flare™ Windshield with the hardware removed in step 7 and torque fasteners to factory specifications.

Reference your service manual for proper windshield torque specs. Over-tightening may crack windshield material.

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192