

VENT SCREENS FOR INDIAN CHALLENGER

TOOLS NEEDED:

- + 4mm Hex Key
- + 6mm Hex Key
- + Non-marring Pry Tool or Padded Flathead Screwdriver

INCLUDED IN BOX:

- + Instructions
- + Left and right vent screen with preinstalled adhesive
- + Alcohol Wipes

QUESTIONS?

EMAIL:
info@getklocked.com

CALL:
(605) 996-3700



1. Protect all painted surfaces
2. Remove outer fairing
 - a. Remove left and right speaker grills from inner fairing by prying up on the outer edge of the grill with a non-marring pry bar or a cushioned flat screwdriver. **(FIG 1)**
 - b. Remove the left and right storage compartment liner from the inner fairing. **(FIG 2)**
 - c. Remove 4mm hex button head cap screws from the top of the speaker pod opening on both left and right sides. **(FIG 3)**




- d. Remove 4mm hex button head cap screws from top outer corner of storage compartment on the left and right side. **(FIG 4)**
- e. Remove 6mm hex button cap screws from bottom side of fairing. **(FIG 5)**
- f. Disconnect the three electrical connectors under the front of the fairing for the headlight and turn signals - two on the left side, one on the right side. **(FIG 6)**

VENT SCREENS FOR INDIAN CHALLENGER (CONTINUED)



- g. Remove headlight bezel by prying down lightly on the top of the bezel and remove by rotating the top of the bezel out of the fairing. **(FIG 7)**
- h. Remove the three 6mm hex button head socket screws from the opening behind the headlight bezel. You may want assistance supporting the outer fairing as these are the last screws holding the outer fairing in place. **(FIG 8)**
- i. Remove the outer fairing. **(FIG 9)**

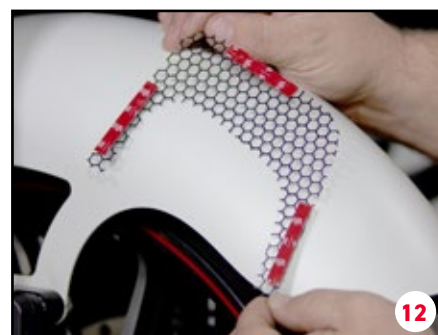

3. Install vent screens

- a. Test fit vent screens without exposing tape. **(FIG 10)**
- b. Using the supplied alcohol wipe clean the front face of the vent duct. **(FIG 11)**
- c. Peel adhesive tape backer and install vent screening pressing the tape onto the vent duct. **(FIG 12)**
- d. Repeat on other side.

4. Re-install outer fairing. **(FIG 13)**