



welcome to
imounts®

iOtraveler™ MAGNETIC SUCTION PHONE MOUNT


iOmounts™ COMPONENTS



iOdisc™

KEEP EXTRAS ON HAND!

Once an iOdisc is adhered to a device, it can readily use the iOmounts system.

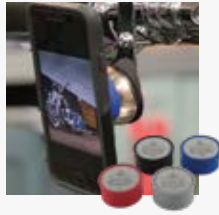

iOcore™

CUSTOMIZE YOUR LOOK

The magnetic iOcore™ (the powerhouse in this system) is available in multiple colors.



connect to even more...

FIND IT AT GETKLOCKED.COM

Once the iOdisc is adhered to your device, connect to iOstands®, model-specific mounts, and more!

INSTALLATION



ADHERE

Clean the surface of your device case thoroughly. Center the iOdisc™ on your case then apply with firm pressure to the case while on a flat surface and adhere.

Allow adhesive to set at least 24 hours before attaching to iOcore. For best results, let set 72 hours before first use.

INSTALL

Optional. The adhesive base is an option that allows the iOtraveler to suction to a variety of flat surfaces. Peel the 3M protector off, and press firmly to promote good adhesion.

1. Remove suction cup film.
2. With the lever in the up position, press the suction cup to the chosen surface. While holding pressure, flip the lever back toward the surface.

ATTACH

Once the iOdisc™ has cured for 24 hours, your device is ready to be attached to *any* iOmount®!



Watch this video and learn how to adhere the iOdisc correctly to guarantee a wonderful experience.

[GETKLOCKED.COM/HOW-TO](https://www.getklocked.com/how-to)

FYI



While a very strong 3M VHB adhesive is used, the iOdisc™ will not stick to all surfaces and materials. This includes rubber, silicone, soft-touch and other soft or textured surfaces.

For best results, Klock Werks recommends the use of a smooth plastic, non-silicone case.



Each iOdisc™ utilizes permanent adhesive and is very difficult to remove once applied. *Klock Werks is not responsible for any damages caused by the removal of the iOdisc™.*

HAVE QUESTIONS?

DON'T HESITATE
TO REACH OUT



WEBSITE
GetKlocked.com

EMAIL
info@getklocked.com

CALL
(605) 996-3700

GET SOCIAL WITH US WITH A LIKE, TAG OR SHARE



#GETKLOCKED