

Firgelli Automations Inc

www.FirgelliAuto.com

Model: FA-WM-28" Full Motion Wall Mount



Thank you a choosing the Firgelli Auto wall mount. This mount is for TV's weighing less than 45 kg (100 lb) to a vertical wall, and will tilt $\pm 15^\circ$, swivel angle : $\pm 70^\circ$




CAUTION: Do not use this product for any purpose not explicitly specified by Firgelli Automations. Improper installation may cause property damage or personal injury. If you do not understand these directions or have doubts about the safety of the installation, contact Firgelli Automations. Firgelli Automations is not liable for damage or injury caused by incorrect mounting, assembly, or use.



WARNING! This product contains small items that could be a choking hazard if swallowed. Keep these items away from young children!






Hardware and procedures for multiple mounting configurations are included. When you see this symbol, choose the correct configuration to suit your needs. Not all hardware included will be used.

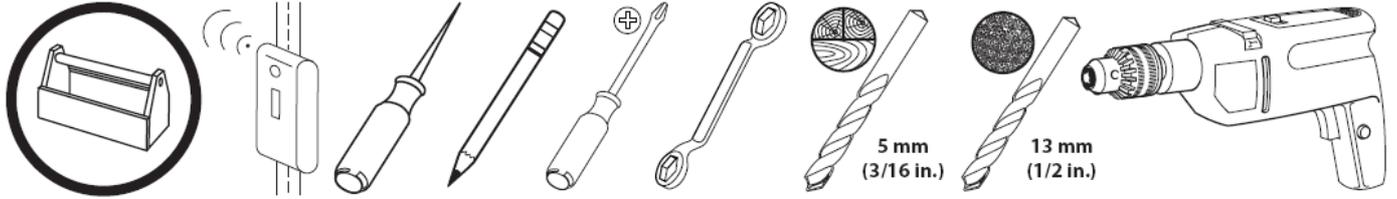

Supplied Parts and Hardware

Before starting assembly, verify all parts are included and undamaged. If any parts are missing or damaged, do not return the item to your dealer; contact Firgelli Automations.

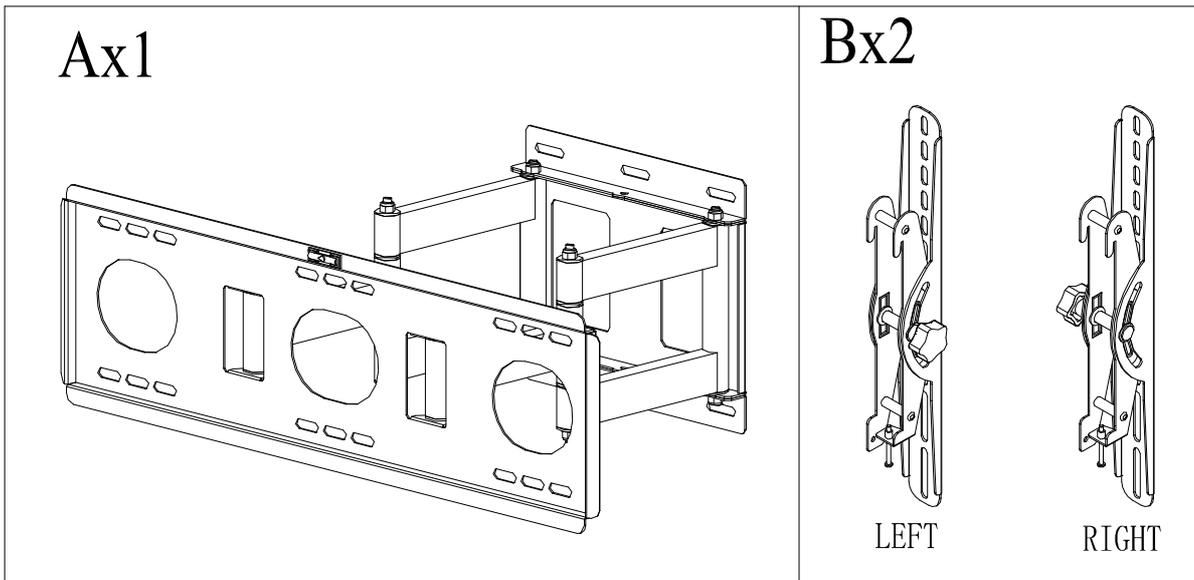

<p>Cx6</p> 	<p>Ex4</p> 	<p>Gx4</p>  <p>M8X30</p>	<p>Ix4</p>  <p>M6X25</p>
<p>Dx6</p> 	<p>Fx4</p> 	<p>Hx4</p>  <p>M8X15</p>	<p>Jx4</p>  <p>M6X15</p>

Wood Stud Mounting

NOTE Verify stud location.


CAUTION: Do not over-tighten the lag bolts [D]. Tighten the lag bolts [D] only until the washers [D] are pulled against the wall plate [A].

CAUTION: Any material covering the wall must not exceed 10 mm (2/5 in.).




HEAVY! You may need assistance with this step.

- If attaching the TV Mount to the Fircelli Automations TV Lift mechanism, see below for how to install that. Use 4 x M6 screws and nuts to attach

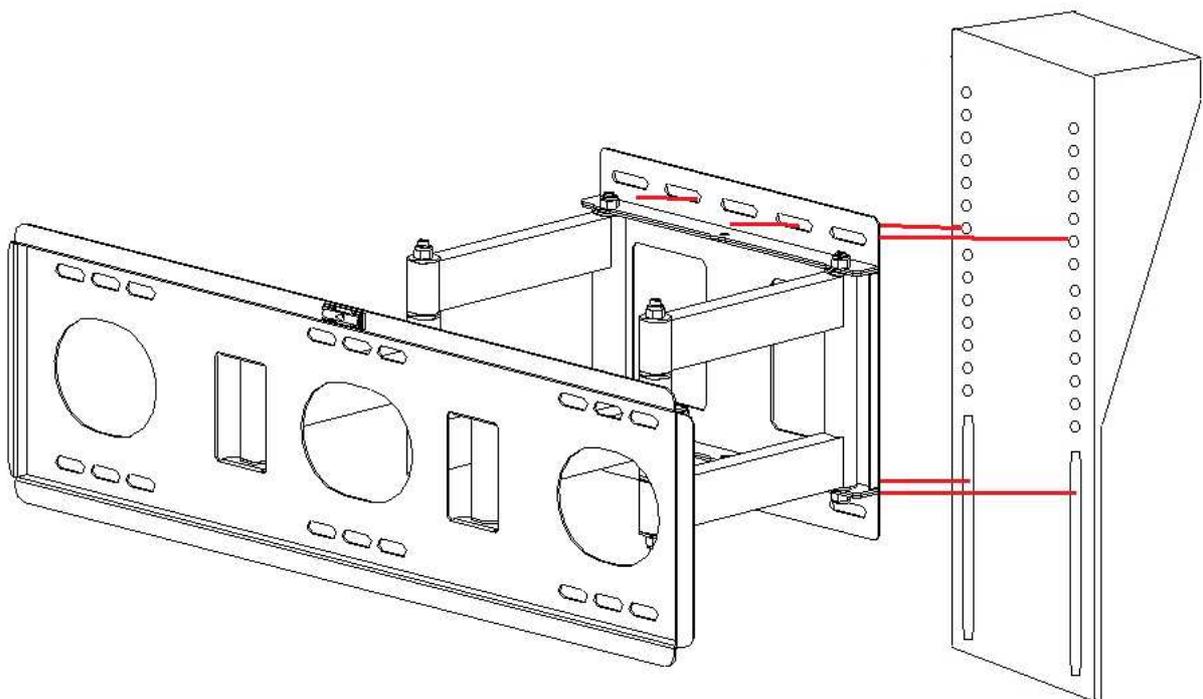


- If attaching mount directly to the wall use the instructions below.

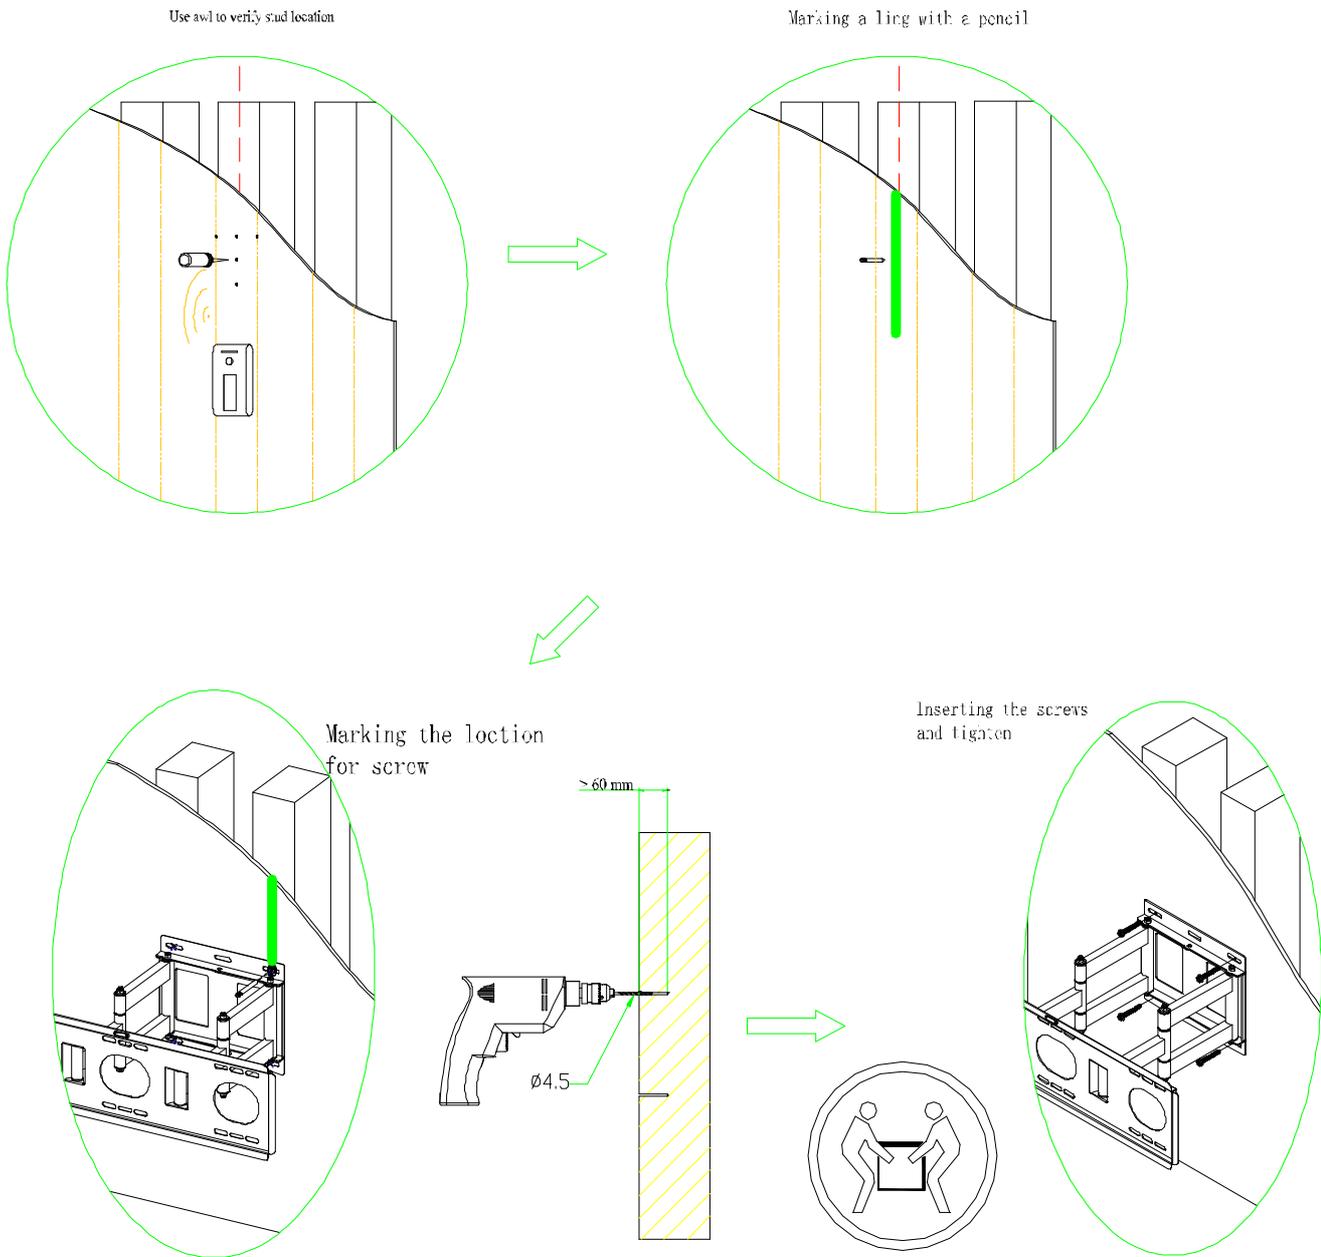

Concrete Block Mounting


- ▲ **CAUTION:** For concrete block walls, install the fasteners into the face of the block. Ensure the anchors seat flush with the block.
- ▲ **CAUTION:** Do not over-tighten the lag bolts [D]. Tighten the lag bolts [D] only until the washers [D] are pulled against the wall plate [A].
- ▲ **CAUTION:** Any material covering the wall must not exceed 10 mm (2/5 in.).
- ▲  **HEAVY!** You may need assistance with this step.

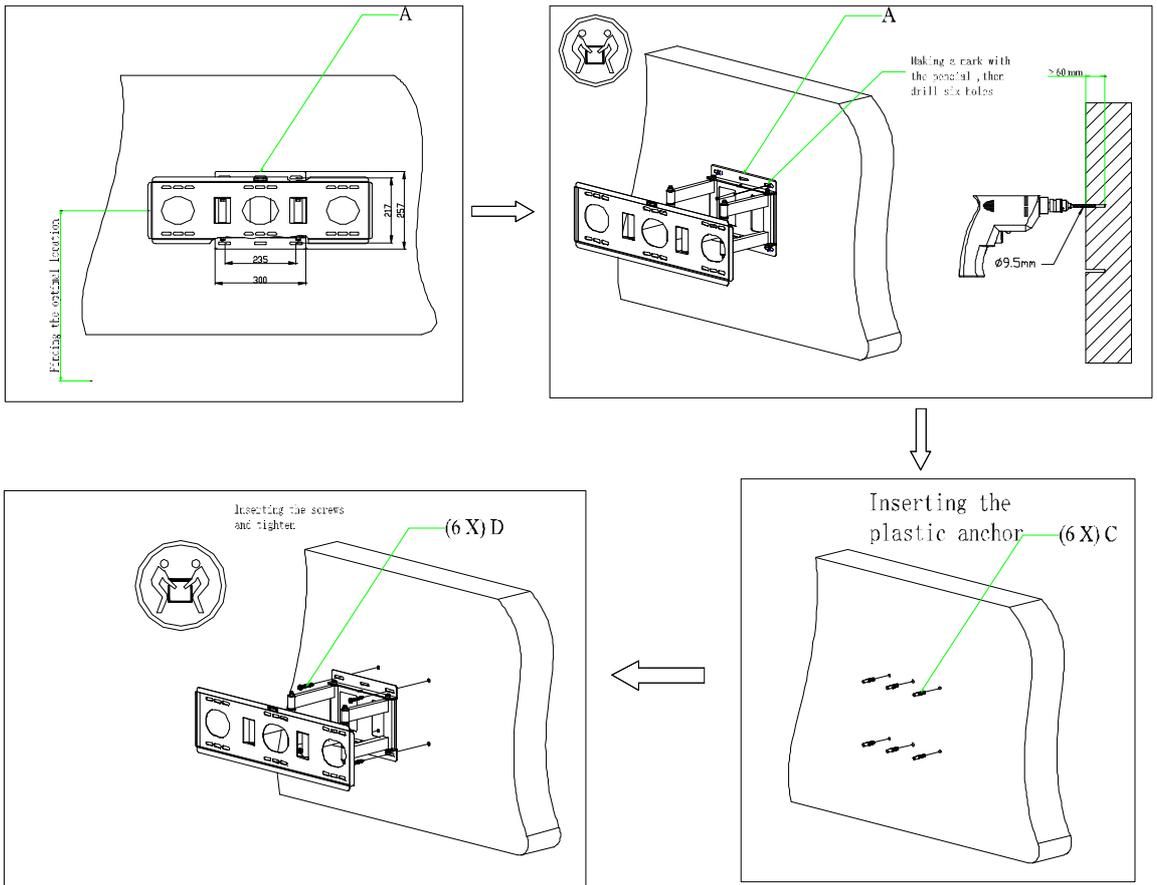


TV with flat back

Determine the diameter of the screw your TV requires by hand threading them into the threaded insert on the back of the TV. Stop immediately if you encounter any resistance.

HEAVY! You will need assistance with this step.

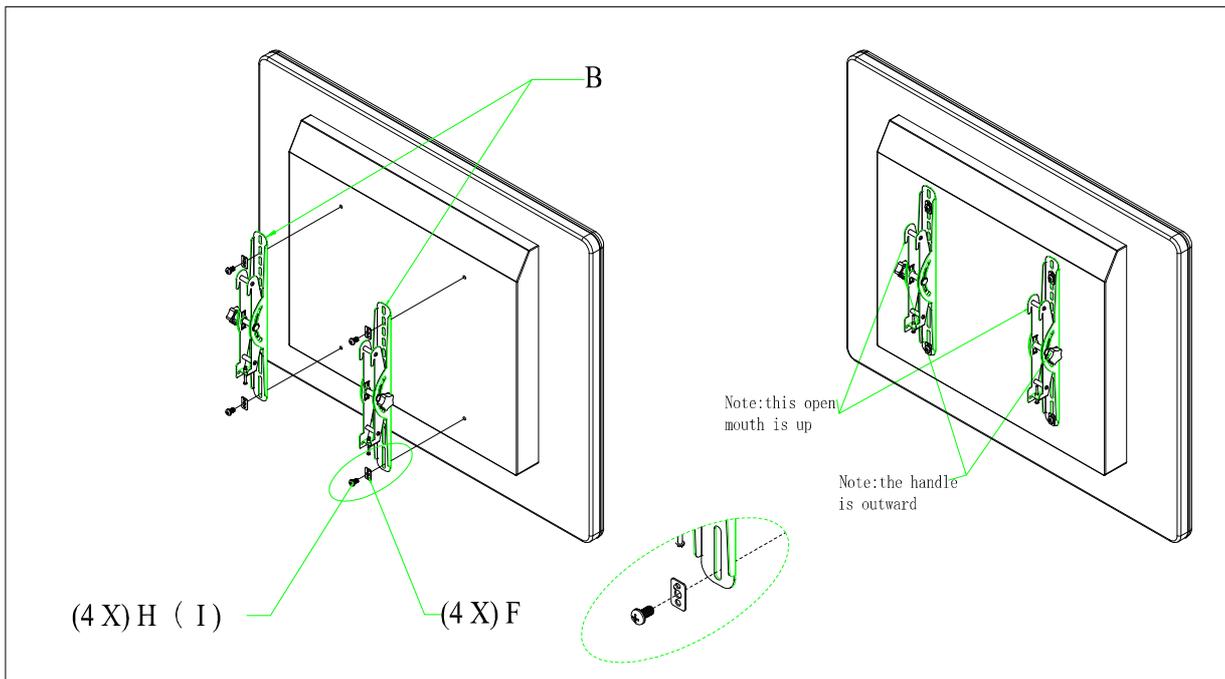

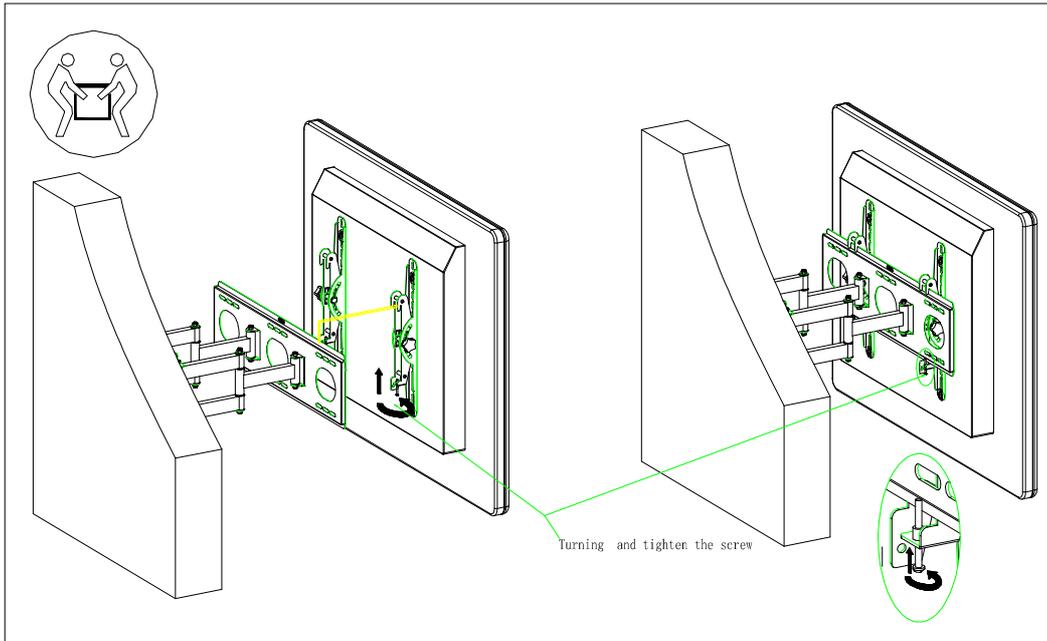



TV with curved back or obstruction near threaded insert

Determine the diameter of the screw your TV requires by hand threading them into the threaded insert on the back of the TV. Stop immediately if you encounter any resistance.



HEAVY! You will need assistance with this step.

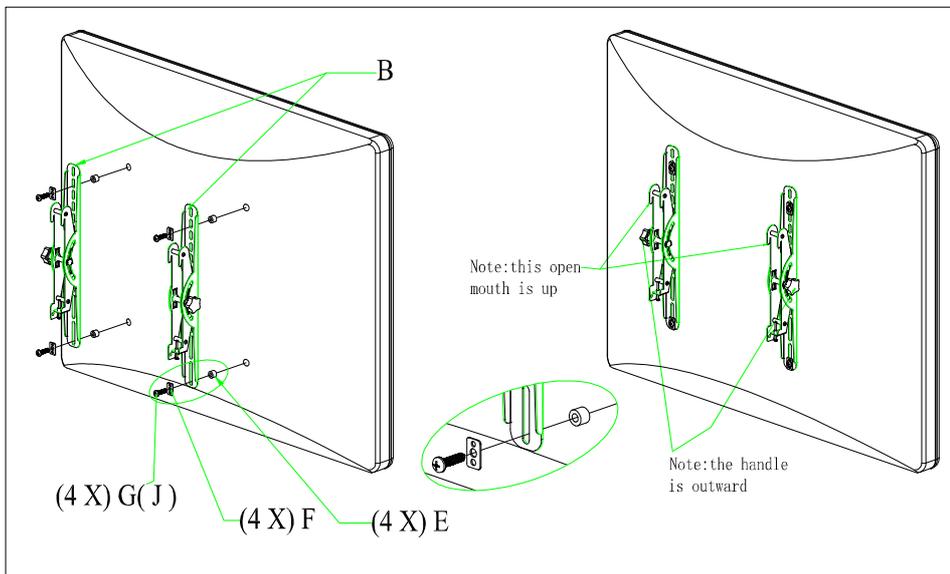

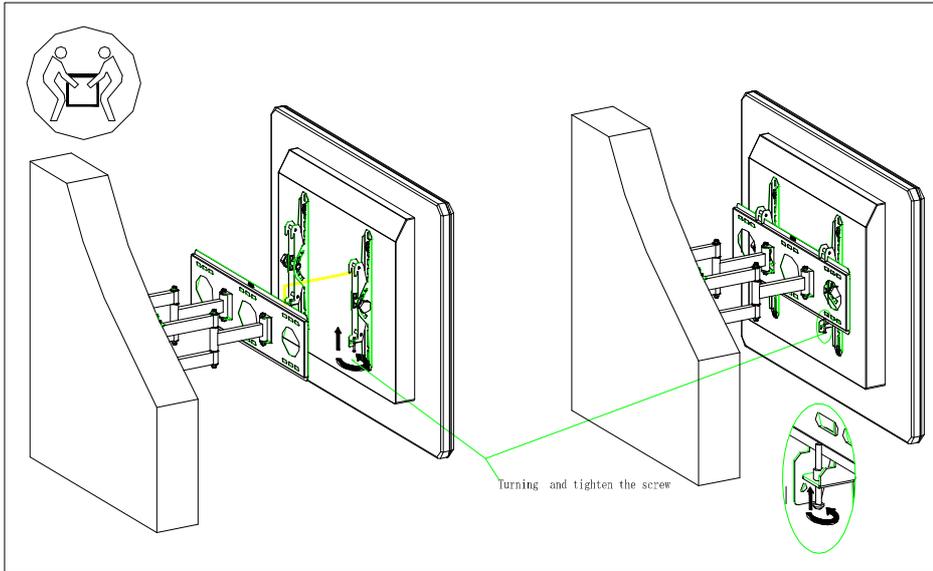

Firgelli Automations and its affiliated corporations intend to make this manual accurate and complete. However, Firgelli Automations makes no claim that the information contained herein covers all details, conditions, or variations. Nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without notice or obligation of any kind. Firgelli Automations makes no representation of warranty, expressed or implied, regarding the information contained herein. Firgelli Automations assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.