INSTALLING THE HANDLE KIT ONTO ENVIRONMENTAL ENCLOSURE MODEL 854030

QUICK START GUIDE

This guide will help you quickly install the handles for Environmental Enclosure Model 854030.

Unpacking the Handle Kit for the Environmental Enclosure

- Unpack the Handle Kit (854035) for Environmental Enclosure (854030) and verify that all the items listed in the following table are present.
- Contact <u>TSI</u> immediately if items are missing or broken.

Qty.	Item Description	Reference Picture
2	Handle	Se S
4	3/8" Washers	
4	Sealing Washer	

Tools Needed

• 9/16" Wrench (not included)



(continued on next page)




Installing the Handle Kit (854035)


1. Remove the ½" plugs (qty: 4) included with the 854030 enclosure.



2. Remove the star washer included with the handles.

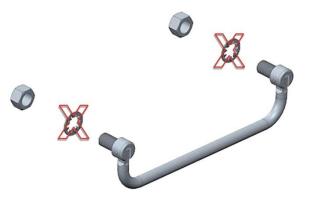

3. Position the 3/8" washers on the exterior of the enclosure. Install the sealing washers on the interior with the rubber side of the sealing washer facing the enclosure surface.

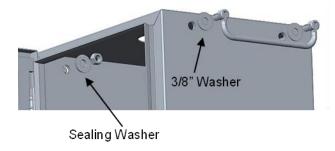

UNDERSTANDING, ACCELERATED

TSI Incorporated – Visit our website <u>www.tsi.com</u> for more information.

USA Tel: +1 800 874 2811 UK Tel: +44 149 4 459200 France Tel: +33 1 41 19 21 99 Germany Tel: +49 241 523030

P/N 6008575 Rev. B

 India
 Tel: +91 80 67877200

 China
 Tel: +86 10 8219 7688

 Singapore
 Tel: +65 6595 6388

©2015 TSI Incorporated Printed in U.S.A.

4. Handles install through the same holes with the same hardware used to attach the solar shield. The optional Solar Shield (854032) can be installed at the same time the handles are installed.

