


# Installation Instructions for K10656

## Motor mount kit for LS engines



- Kit contents:      Additional parts required:
- Left and right engine brackets
  - Fasteners
  - Frame bracket

### 1. Mount driver's side bracket

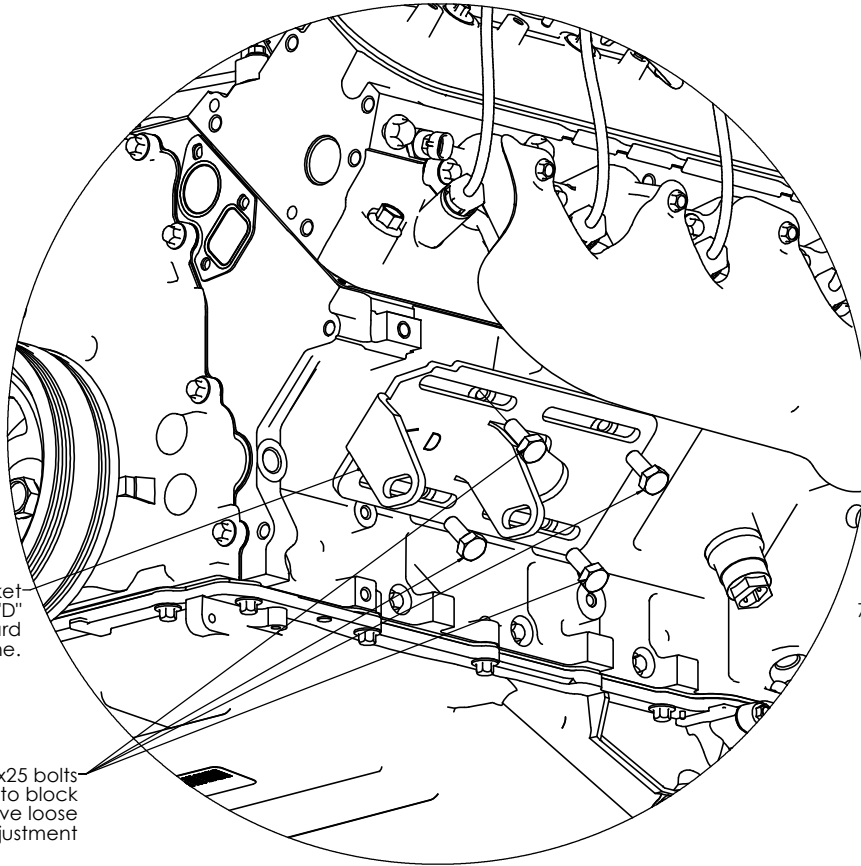


Driver's side bracket with letter "D" Arrow goes toward front of engine.

Four M10x25 bolts screw into block  
**Note:** Leave loose for adjustment

### 2. Repeat for passenger side bracket

### 3. Lower engine, and bolt to frame bracket

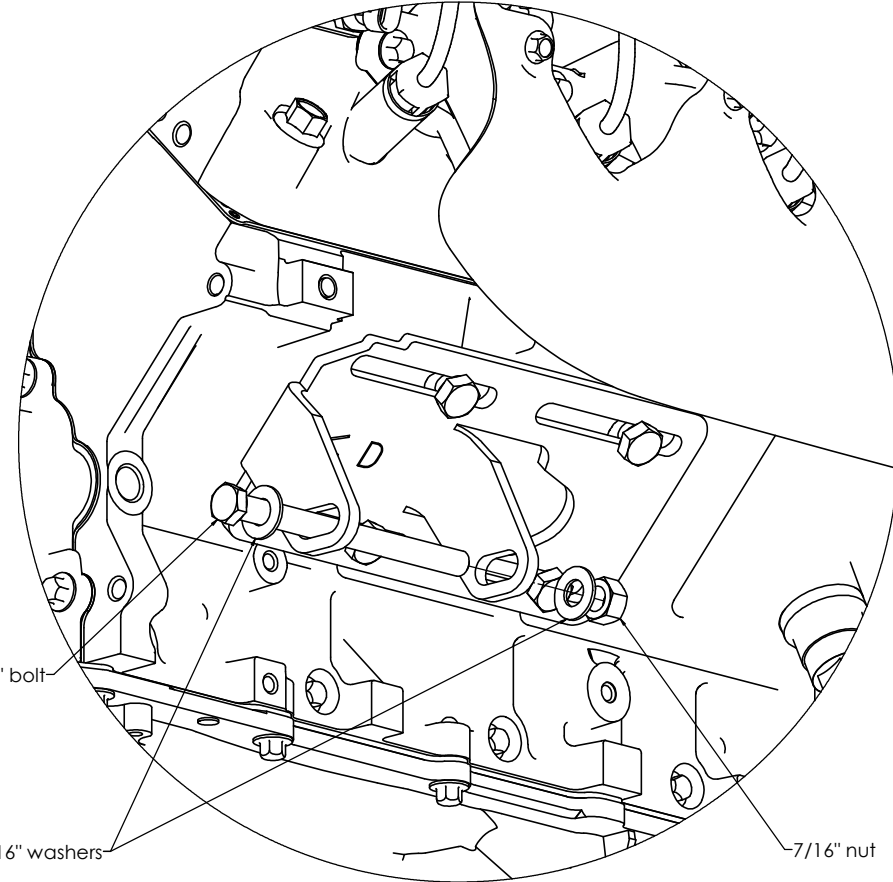

7/16" x 5-1/2" bolt

Two 7/16" washers

7/16" nut

### 4. Repeat for other side.

### 5. Position engine and tighten all bolts to 35 ft-lbs.