


MOBILITY KIT ASSEMBLY DIAGRAM FOR 10-345, 10-350 & 10-370 SERIES BANDSAWS

Tools Required for Assembly

- * 13mm or Adjustable Wrench
- * Pliers

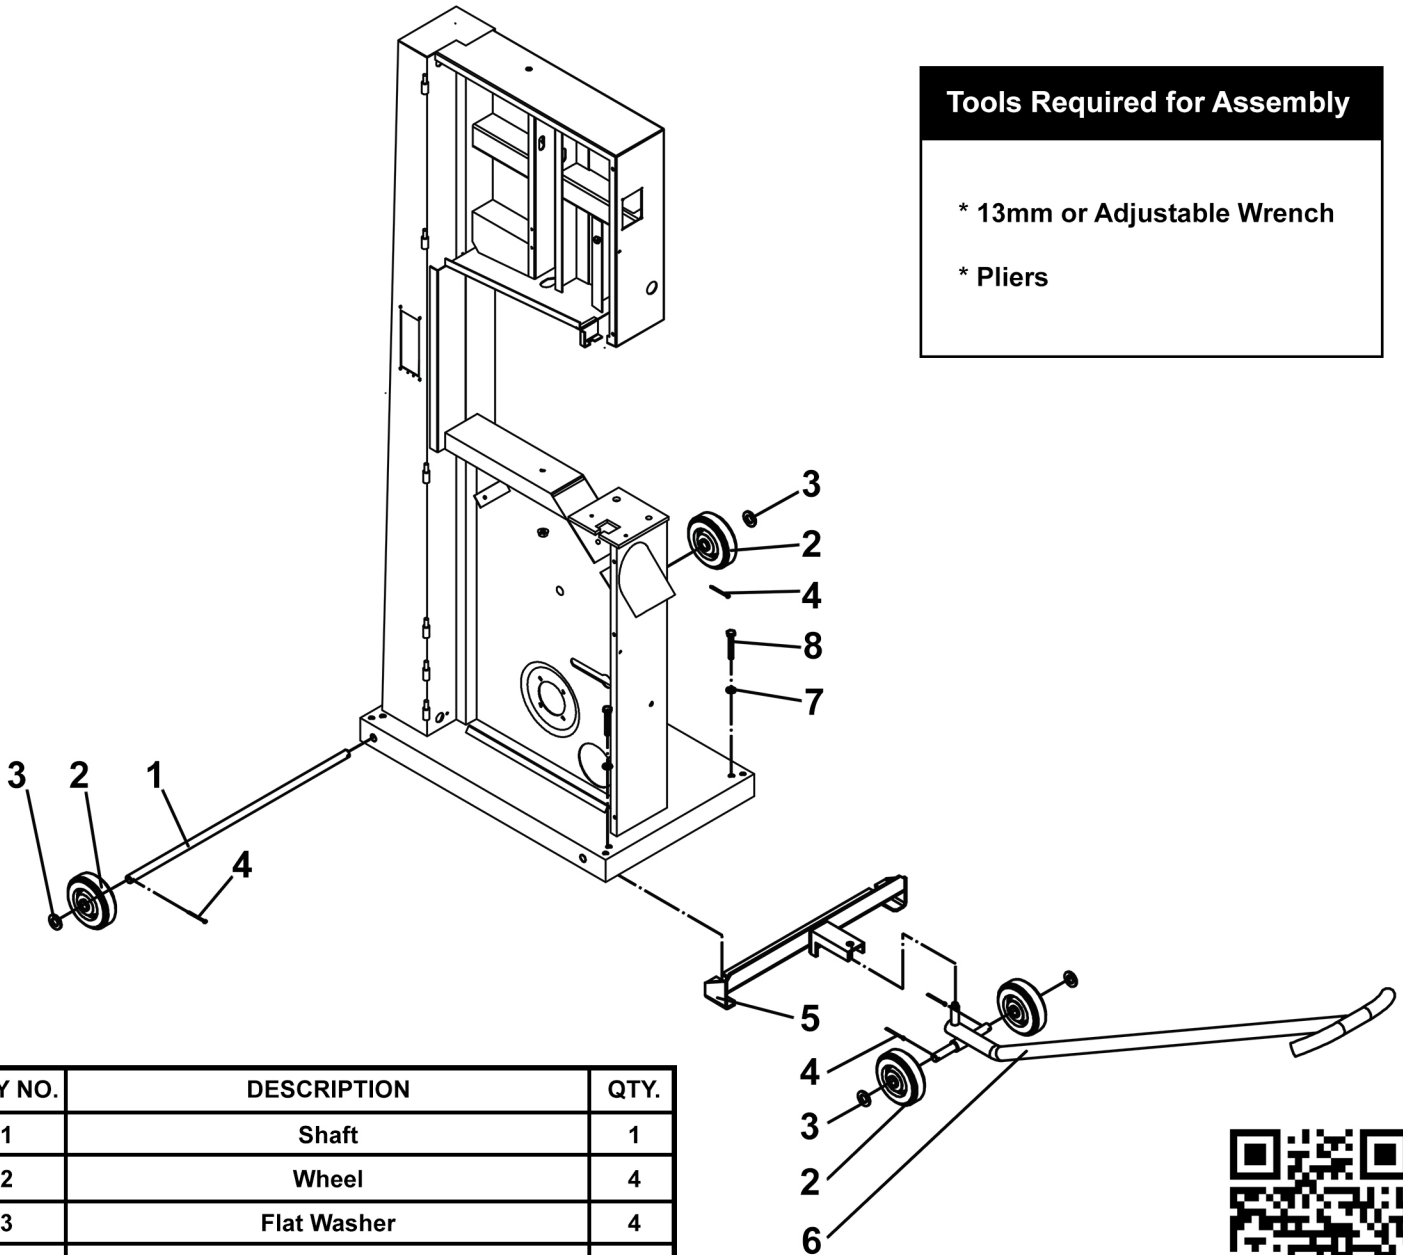

| KEY NO. | DESCRIPTION | QTY. |
|---------|------------------|------|
| 1 | Shaft | 1 |
| 2 | Wheel | 4 |
| 3 | Flat Washer | 4 |
| 4 | Split Cotter Pin | 4 |
| 5 | Bracket | 1 |
| 6 | Tow Bar Assembly | 1 |
| 7 | Flat Washer | 2 |
| 8 | Hex Bolt | 2 |



California Prop 65 Warning
 WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.