



Sarge Drop Point Knife Kit


Product #844451



ASSEMBLY INSTRUCTIONS

- ① Place your completed handles on each side of the knife and check that all holes are properly lined up.
- ② Place aluminum pins into the handle assembly in the order shown in the diagram. Tap each pin only 2/3rd of the way into the handle.

DO NOT HAMMER PINS FLAT UNIT ALL THREE ARE IN PLACE.

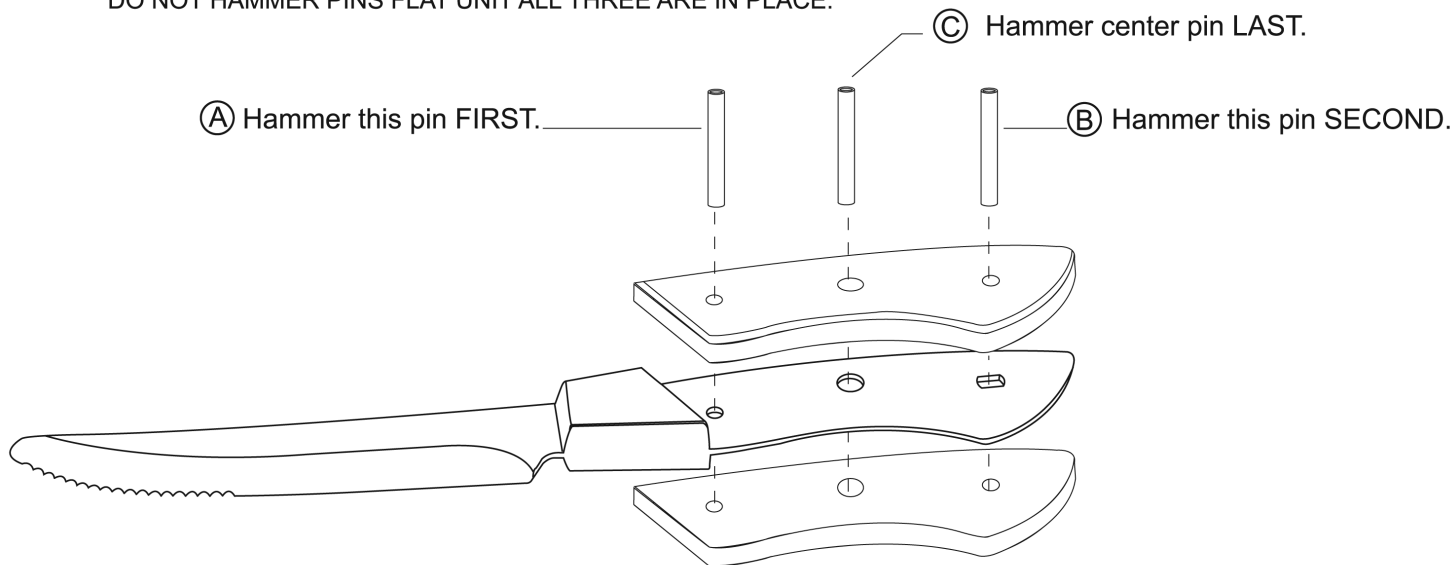

- ③ Once you are certain all pieces are in the desired position, gently hammer pins securely into place.