

# **XJ Rear Window Molle Panel Installation Instructions**

Thank you for purchasing our XJ Rear Window Molle Panel!

#### **Installation Notes:**

- This panel is only made to fit the 1984-2001 4 Door Cherokee
- 1996 and older will have to drill a hole for the rear mount

#### Tools required:

Phillips Head Screwdriver

• 5/32" Hex Drive

• 8mm Socket and Ratchet

Drill (1996 and older)


## **Contents of each box**

Bill Of Materials For B4WK12732 XJ Rear Window Molle Panel Passenger Side				
QTY	Part Number	Etch Number	Description	
1	B4W125131	131	XJ Rear Window Molle Panel	
1	B4WK12726	133BP	Upper Front Bracket	
1	B4WK12727	134BP	Upper Rear Bracket	
1	B4WK12728	135BP	Lower Rear Bracket Passenger Side	
1	B4WK12730	132BP	Seat Latch Bracket Passenger Side	
4	25C62KBC3	N/A	1/4"-20 x 5/8" Button Head Screw SS	
1	91515A570	N/A	#8-18 x 2.5" Self-Tapping Phillips Screw	

Bill Of Materials For B4WK12733 XJ Rear Window Molle Panel Driver Side				
QTY	Part Number	Etch Number	Description	
1	B4W125131	131	XJ Rear Window Molle Panel	
1	B4WK12726	133BP	Upper Front Bracket	
1	B4WK12727	134BP	Upper Rear Bracket	
1	B4WK12729	137BP	Lower Rear Bracket Driver Side	
1	B4WK12731	138BP	Seat Latch Bracket Driver Side	
4	25C62KBC3	N/A	1/4"-20 x 5/8" Button Head Screw SS	
1	91515A570	N/A	#8-18 x 2.5" Self-Tapping Phillips Screw	

## Step 1:

Release and pull the rear seat back. Take note of how the rear seat latch is aligned and remove the three bolts with the 8mm socket. Place the molle panel bracket over top of the seat latch bracket and reinstall with the factory hardware. Leave the hardware slightly loose.

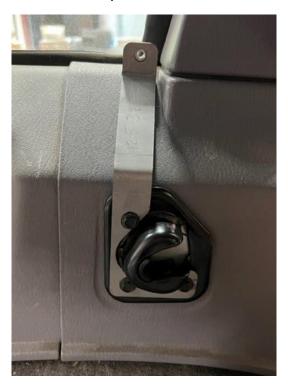

Step 2:

Remove the first upper trim screw and install the upper front bracket with the factory hardware. Leave the hardware slightly loose.



## Step 3:

Remove the rear upper trim screw and install the upper rear bracket with the factory hardware. Leave the hardware slightly loose.



Step 4: (1997+)

Remove the factory panel screw from the rear panel of the Jeep and install the lower rear bracket with the supplied screw. Leave the hardware slightly loose. If you have a 1996 or older Cherokee, you will install this bracket after installing the molle panel.



#### Step 5:


Install the molle panel using the provided stainless steel button head bolts. We recommend using some anti-seize on these bolts. With the molle panel in the desired location, start tightening all the hardware.



Step 6: (1996-)

Install the rear lower bracket on to the molle panel. With the bracket in the desired spot, use it as a guide to drill a hole for the provided screw. This is a self-tapping screw, so a small pilot hole should work. Fully install the rear lower bracket and tighten all the hardware.



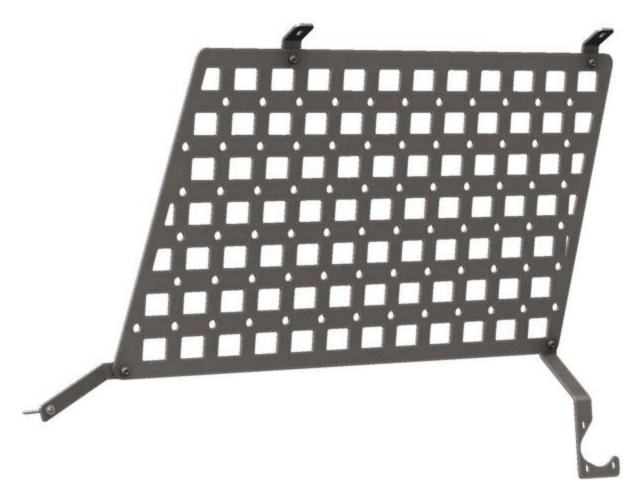

# Congratulations you have completed the installation of your XJ Rear Window Molle Panel!

#### Professional Services Disclaimer:

The content of all pages of this website (collectively, the "Website"), such as text, graphics, images, information and other material (collectively, "Content") is for informational purposes only. Any information furnished on this Website is not intended nor implied to be automotive advice and is not intended to replace personal consultation with a qualified automotive service technician, mechanic, or similar automotive professional.

Barnes 4WD has not examined the Content for accuracy, timeliness, completeness, appropriateness, or helpfulness. Barnes 4WD does not endorse any specific tests, products, procedures, opinions, or other information that may be mentioned on this Website. Your reliance upon information and Content obtained by you at or through this Website is solely at your own risk. IN NO EVENT SHALL BARNES 4WD BE LIABLE OR OTHERWISE RESPONSIBLE FOR ANY DAMAGE OR INJURY (INCLUDING DEATH) TO YOU, OTHER PERSONS, OR PROPERTY ARISING FROM ANY USE OF ANY PRODUCT, INFORMATION, IDEA, OR INSTRUCTION CONTAINED IN THE CONTENT.

BARNES 4WD DOES NOT MAKE ANY REPRESENTATION OR WARRANTY, EXPRESS OR IMPLIED, AT LAW OR IN EQUITY, WITH RESPECT TO ANY PRODUCT FEATURED ON THE WEBSITE, INCLUDING WITHOUT LIMITATION WITH RESPECT TO MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE, VALUE, VALIDITY, OR ENFORCEABILITY, AND ANY AND ALL SUCH OTHER REPRESENTATIONS OR WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED.