


Sprinter 144 Wall Panel Kit

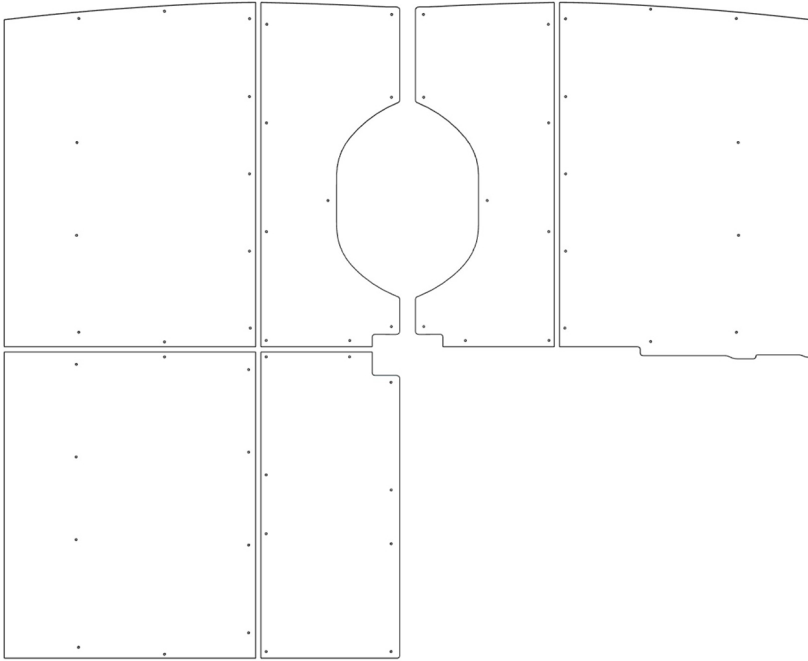

Material:

Natural wood veneer on plywood or laminate on MDF core depending on material choice



Installation:

2 people
30 min predrill + rivet nuts
1 Hour panel installation



Weight

45lb - 80lb (20kg - 39kg)




Size:

Full Width x Full Height
20" - 48" x 55"-70"

Factory Fit

Our wall panel kit features the easiest installation on the market with pre-drilled holes matching your vehicle wall's factory holes. The average installation time is 2 Hours for a full wall panel kit installation.

A robust fastening method utilizing 1/4"-20 rivet nuts ensures a sturdy hold for any adventure and allows the capability of modular attachment for any fastening systems with matching thread pitch.

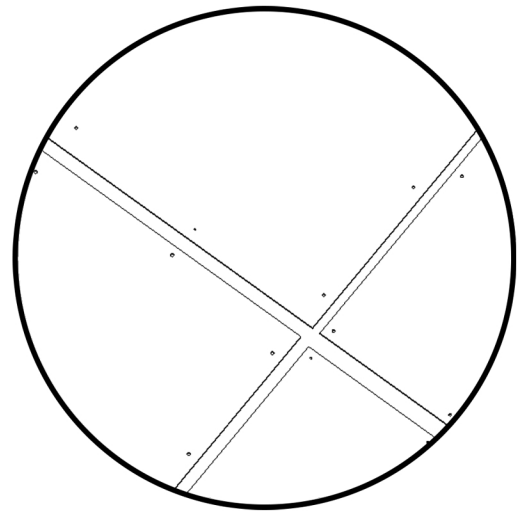

This kit must be fastened properly to the walls of the vehicle to avoid damage or injury. You are responsible for ensuring that this kit is fastened using rivet-nuts or other fastening method equal in strength. Modification to this unit may affect the structural strength of the unit. Avoid making large cuts on wall panels, partitions, or beams as this may weaken the vehicle. You are responsible for ensuring proper wiring and insulation when wiring your build as faulty wiring may create a fire hazard. Any cabinetry or load-bearing components need to be mounted to the vehicle and not to the wall panels alone.



Serg Supply