

Assembly instructions

PURE SOFA armchair


01202s / 01202 /01202-03/01207

Tribù nv
Langendijkstraat 5a
3690 Zutendaal
BELGIUM

www.tribu.com
info@tribu.com

TRIBÙ
The art of leisure

Content

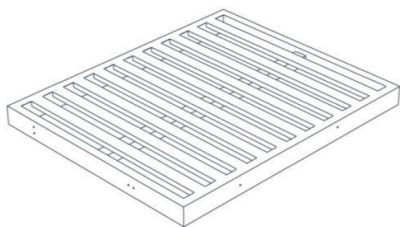

1 x seatrest




6 x M6x25mm



10 x M6x50mm

woodglue

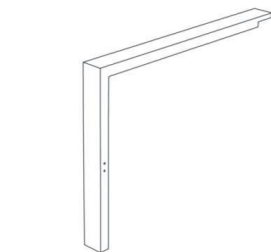


2 x armrest – front leg
(1 left and 1 right)





1 x backrest – back leg

Assembly Instructions


1 Turn the backrest-backlegs upside down. Put glue on the thin part of the armrest and on the thin part of the backrest.

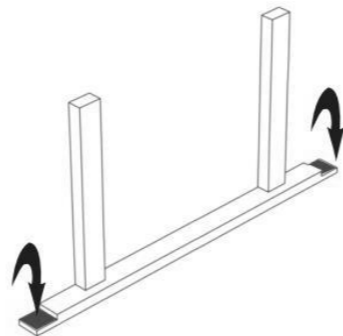

2 Put the armrest-frontleg into place as shown on the picture. **Make sure the holes for the bolts in the frontleg are facing inside!** Tighten the M6x25mm bolts on each side using the m6 Allen key (not included). Clean the outcoming glue.

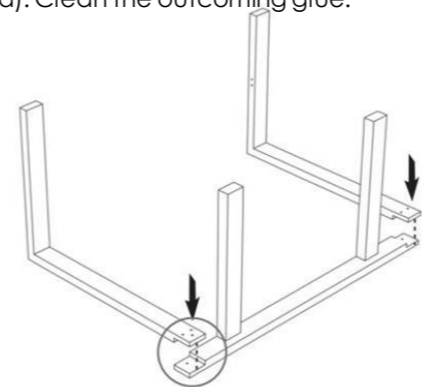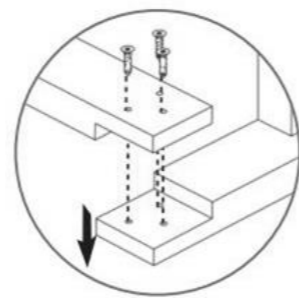

3 Now insert the seatrest between the legs. Use 2 M6x50mm bolts to fix the seat with the frontlegs (left and right).

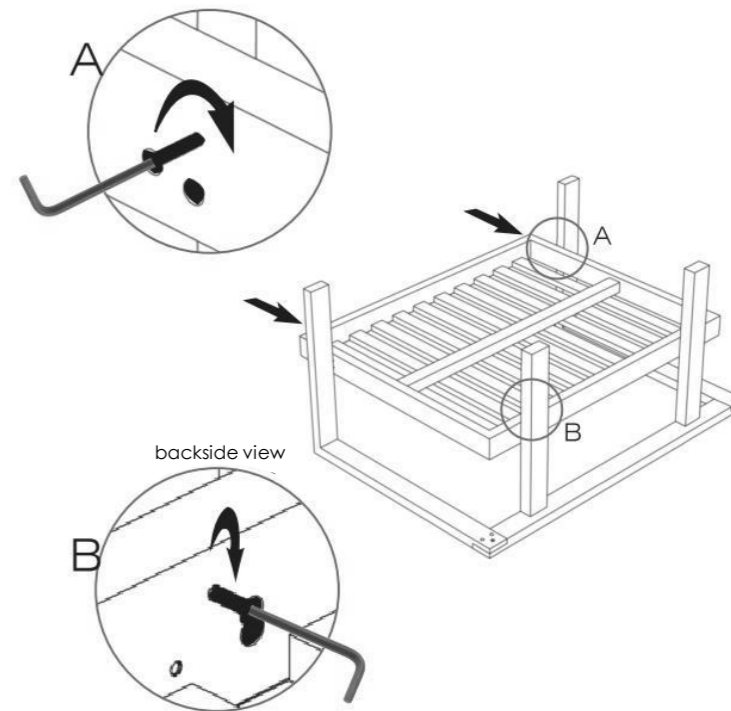

4 Use 3 M6x50mm bolts to fix the seat with the backlegs. Put the chair in its upright position.