



Replacement Shear Blocks
available at
universalsonarmountparts.com

TOOLS - You will need a 3/16" hex key (allen wrench), a 7/16" open end or box wrench, as well as a replacement Shear Block.

①

INSTALL NEW SHEAR BLOCK - Remove the old Shear Block and replace with a new one. Orientation is symmetrical, but the Duty Rating should be appropriate for your system.

③

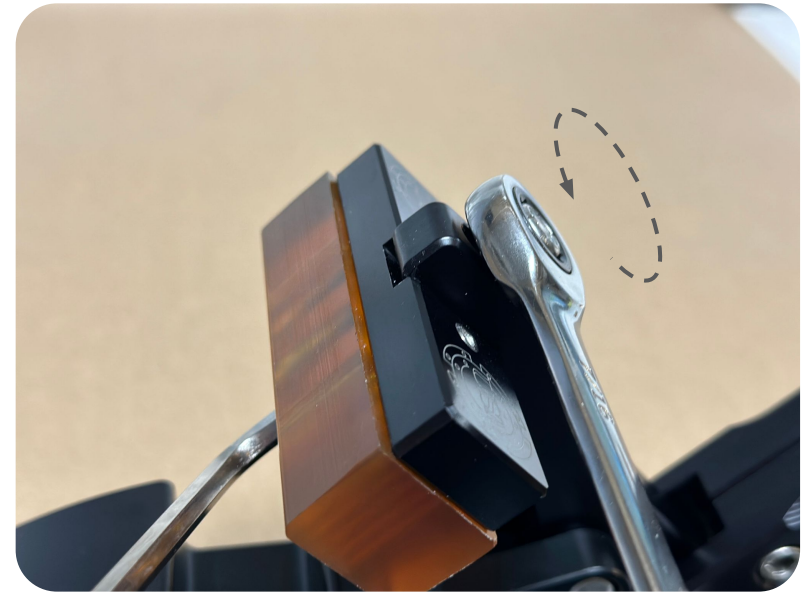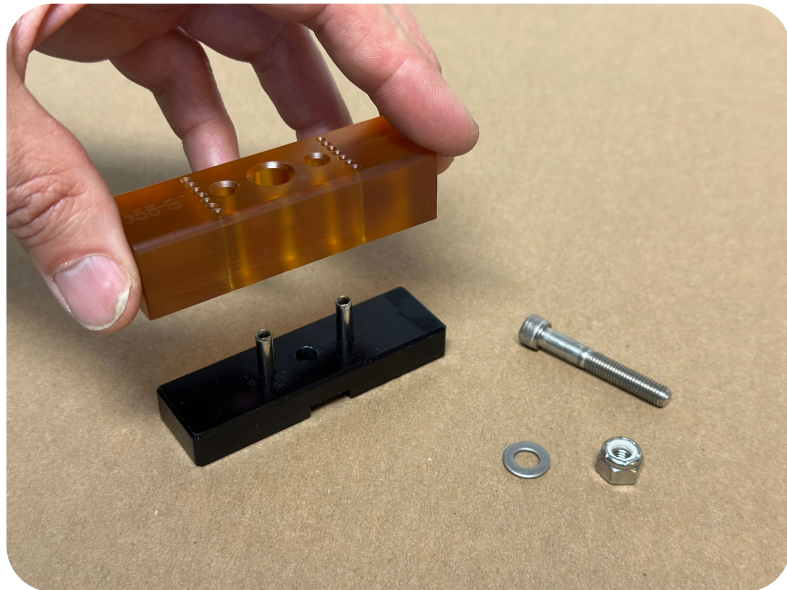

REMOVE SHEAR BLOCK- With the Shear Block disengaged, unthread the nut from the top of the Shear Block Carrier while counterholding the socket head bolt from the underside.

②

READJUST SHEAR BLOCK CARRIER - Re-tighten the nut so that it is flush with the tip of the bolt. Test engagement repeatedly.

④

