

Hose Restrictor Wall Bracket


SGRXSR025


INSTALLATION


IMPORTANT: The position of the Hose Restrictor Bracket is dependent on the proximity of the shower to the WC and/or bath. Place the bracket on the wall (with the hose inserted) and move until the handpiece no longer reaches the WC and/or bath. Once the location for installation has been determined, fix the Hose Restrictor Bracket to the wall as per instructions below.

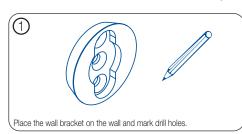


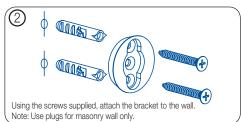

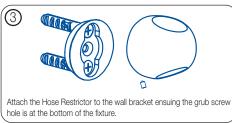


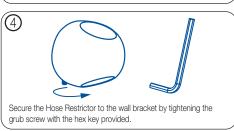

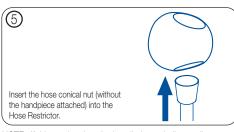

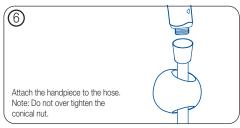

NOTE: If this product is to be installed on a hollow wall, appropriate hollow wall anchors should be used.

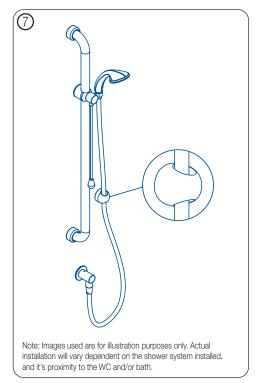

Version: Sep 21

