







Hardware List

- 1 - (A) Roof Assembly
- 2 - (B) Side Assemblies
- 4 - (C) Brace Assemblies
- 4 - (D) End Caps

Hardware

- 8 - 3/8" x 7" Stainless Steel Bolts
- 8 - 3/8" Stainless Steel Nuts
- 16 - 3/8" Stainless Steel Washers
- 8 - 3/4" Panhead Screws
- 56 - 2" Stainless Steel Screws

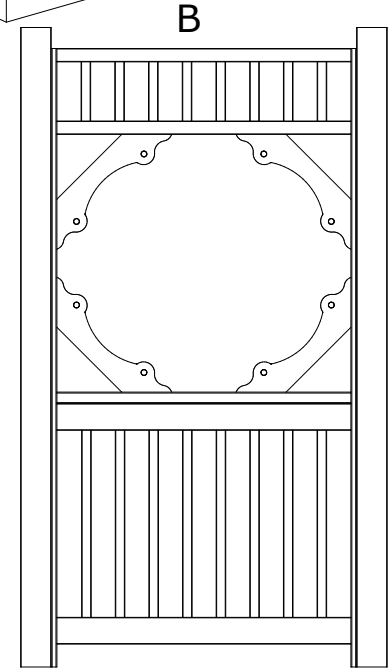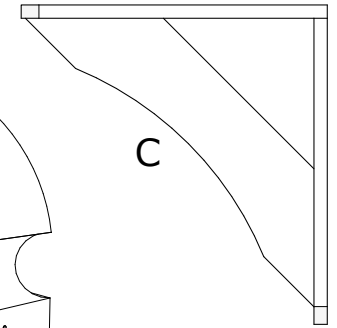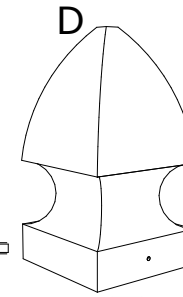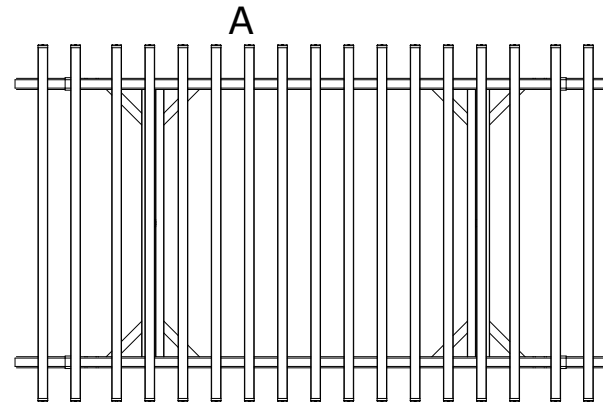


Tools Required

- 9/16" Wrench (Not Included)
- #2 Square Drive Bit (Not Included)



1. Lay Roof Assembly on a Soft Blanket With Slats Facing Down, Attach Side Assembly to Roof Assembly Using 2 - 7" Bolts 2 - 3/8" Nuts & 4 - 3/8" Washers per Corner. Be Sure to Align all Pre-drilled Holes & match all numbers & or letters. Hand Tighten Bolts then Position Swing Stand Upright & Tighten Bolts.

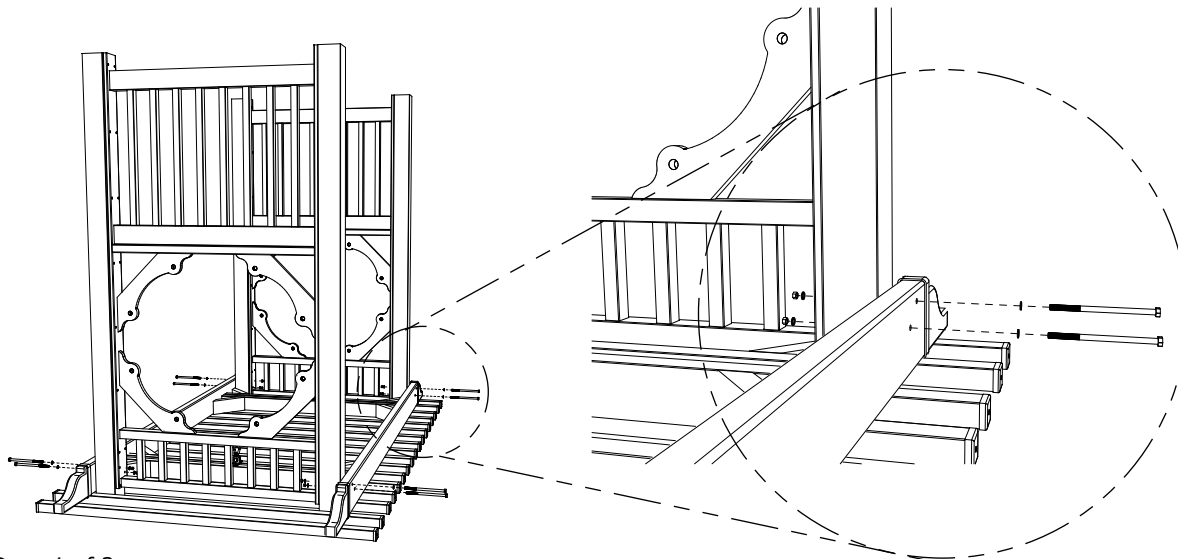


Classic Vinyl Swing Stand Assembly Instructions

10/16/ 2017

R.M.

2. Attach Brace Assemblies to Side & Roof Assembly using 13 - 2" Screws Per Brace, Be Sure To Position Brace As Shown Below or Predrilled Holes will Not Align with Roof Assembly.

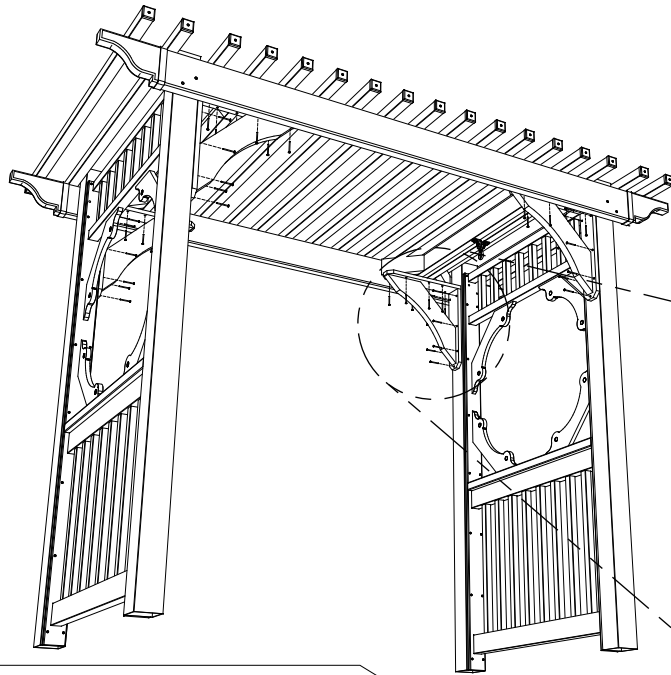

3. Attach End Caps To Top of Posts Using 2 - 3/4" Screws Per End Cap in Predrilled Holes.

