

# Boori Country Sleigh Royale Forever Crib

**Assembly Instructions** 





### **IMPORTANT:**

THE ASSEMBLY OF THIS PRODUCT REQUIRES TWO PEOPLE

#### IMPORTANT:


PLEASE READ THE INSTRUCTIONS CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read all instructions BEFORE assembly and USE of the product. KEEP INSTRUCTIONS FOR FUTURE USE.

# \*IMPORTANT, RETAIN FOR FUTURE REFERENCE\* PLEASE READ CAREFULLY

Boori International Pty Ltd 18-20 Charles Street St. Marys Sydney NSW 2760 Australia Ph: 61 2 9833 3769 Fax: 61 2 9673 4240 Boori (UK) Ltd Unit 1,Transigo Gables Way Thatcham RG19 4ZA Ph: (44) 016 3529 5670 Fax: (44) 016 3587 7552 Boori USA LLC 20 Chapin Road, Suite 1001 Po Box 406 Pine Brook, NJ 07058 Ph: +1 973 577 6933 Fax: +1 973 577 6934 Boori Japan Co.,Ltd 401A, 4-2-10 Kitakyuhoji-machi, Chuo-ku, Osaka 541-0057 Japan Ph: 06-4963-3939 Fax: 06-4963-3900 E-mail: info@boori.co.jp

# Instructions for Boori Country Sleigh Royale Forever Crib (BCA-SLRFE)

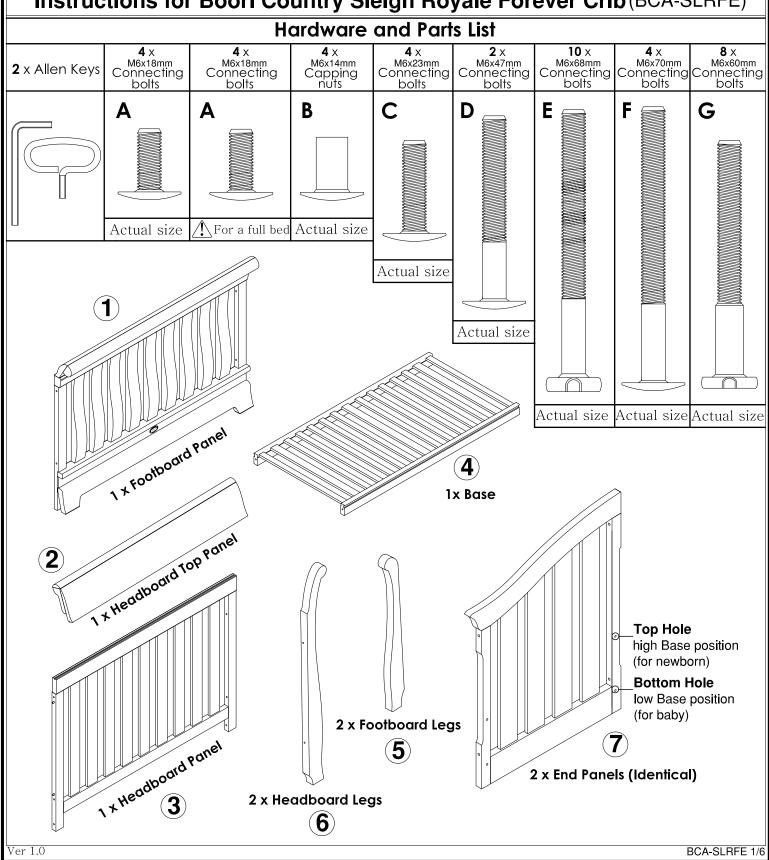

# **ASSEMBLY AS A CRIB** Step 1: Assemble Headboard with parts 236, as shown with 6 x E connecting bolts and 2 x D connecting bolts provided. **6**) 6 Dx2Ex6 Step 2: Assemble End Panels 7 with Footboard Legs 5, as shown with 4 x G connecting bolts provided. **5 5** 2 x G

2 x G


BCA-SLRFE 2/6

**G** x 4


Ver 1.0

## **ASSEMBLY AS A CRIB (CONTINUED)**

Step 3: Connect Headboard to the two End Panels 7 with the 4 x G connecting bolts provided. (Do not over tighten at this step).

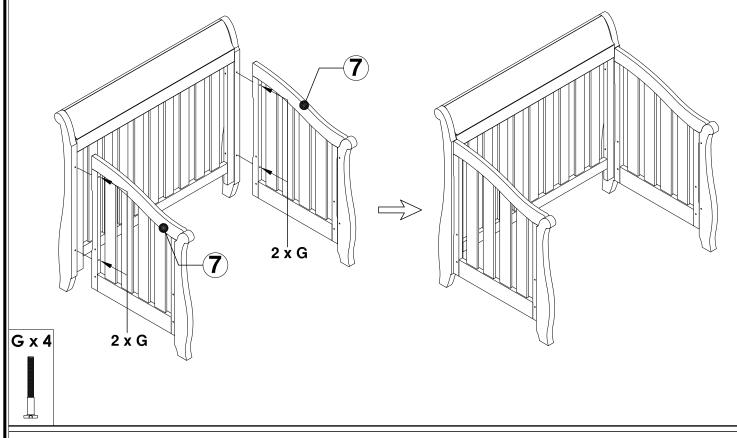

**Step 4:** Connect **Base**(4) to the two **End Panels**(7) with the 4 x F connecting bolts provided. (Keep all bolts loose at this step).

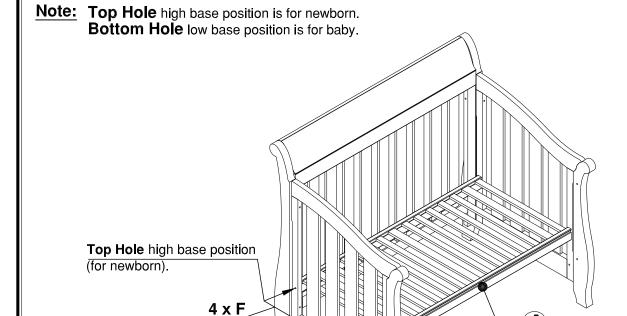


F x 4 er 1.0

Bottom Hole low base position(for baby). Base should be lowered to this position before child is able to sit up.


## **ASSEMBLY AS A CRIB (CONTINUED)**

Step 5: Connect Footboard Panel 1 to the two Footboard Legs 5 with the 4 x E connecting bolts provided. Cover Bottom Holes (low base position holes) with 4 x B capping nuts and 4 x C connecting bolts provided.

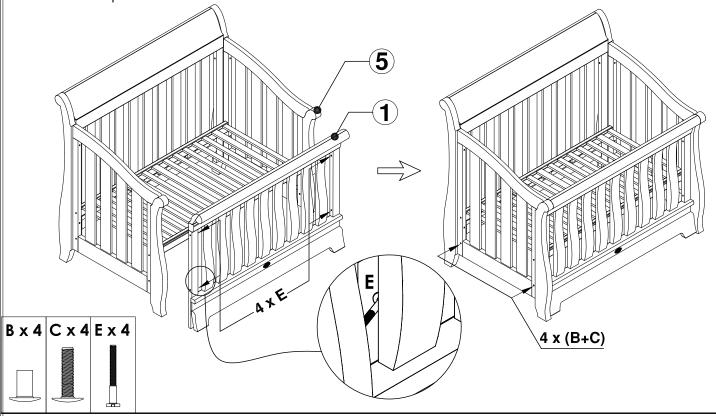

**Note:** When child is able to sit up, adjust **Base**(4) to the **Bottom Hole** low base position (for baby).

- 1. Remove bumper pads, large toys and other objects that could serve as steps for climbing out.
- 2. Remove 4 x B capping nuts and 4 x C connecting bolts from Bottom Holes of End Panels 7 and use to block Top Holes of End Panels 7 after securing low base position.
- 3. Loosen 4 x G connecting bolts on End Panels (7) (4 x G connects the End Panels (7) to the Footboard).
- **4. Remove 4 x F** connecting bolts from the **Top Hole** high base position in **Base** 4 and lower the **Base** 4 to baby position.
- 5. Connect Base 4 to End Panels 7 using 4 x F connecting bolts to secure Bottom Hole lower base position.
- 6. Tighten all remaining bolts in the Base (4), End Panels (7) and Footboard.

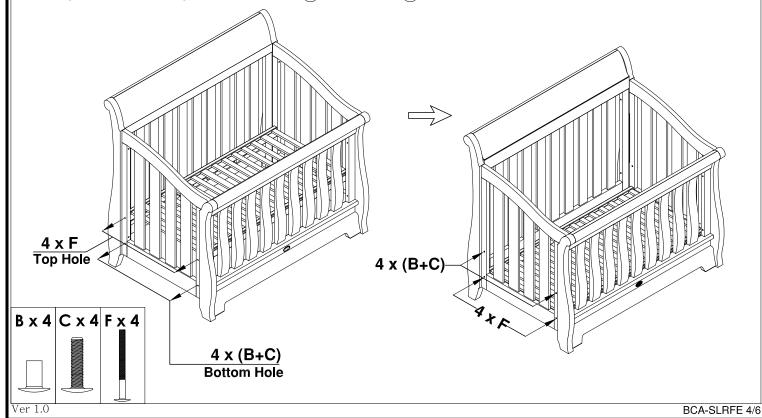


### **CONVERTING YOUR CRIB TO A DAYBED**

Step 1: Reposition the Base 4 to the Bottom Hole lower base position of the End Panels 7.

Loosen 4 x F connecting bolts in the Base 4.


Remove 4 x F connecting bolts from the Footboard to separate the Footboard Panel 1.

Remove 4 x E connecting bolts from the Footboard to separate the Footboard Panel (1) from the Footboard Legs(5).

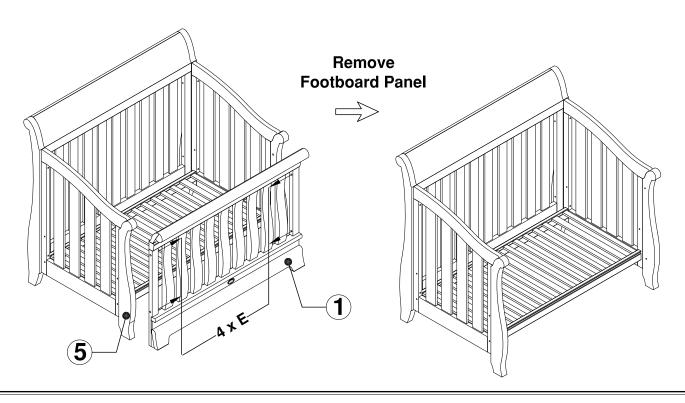


Step 2: Screw 4 x A connecting bolts into Footboard Legs(5).

Note: Use 4 x (B+C) capping nuts and connecting bolts provided to block the Top Holes. Tighten all the connecting bolts.

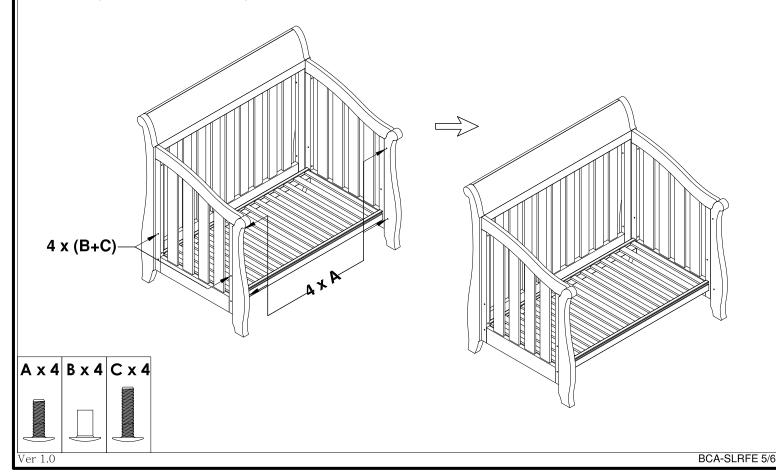


### **ACCESSORIES**

Note: The Toddler Bed Conversion, item TGR (Toddler Guard Rail) is sold separately and available in all Boori finishes. Please contact your Boori dealer for more information.

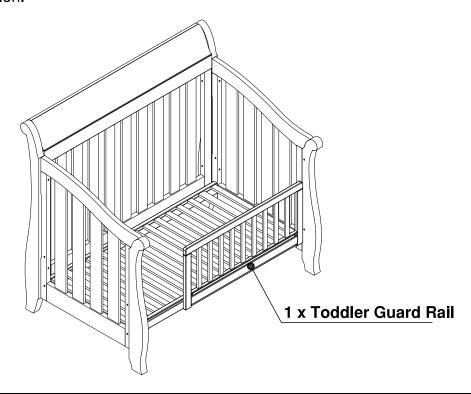

<u>Note:</u> The Full Bed Conversion, item **FBK (Full Bed Conversion Kit)** is sold separately and available in all Boori finishes. Please contact your Boori dealer for more information.

Note: Block remaining holes on Headboard Legs 6 and Footboard Legs 5 with 8 x A connecting bolts provided.

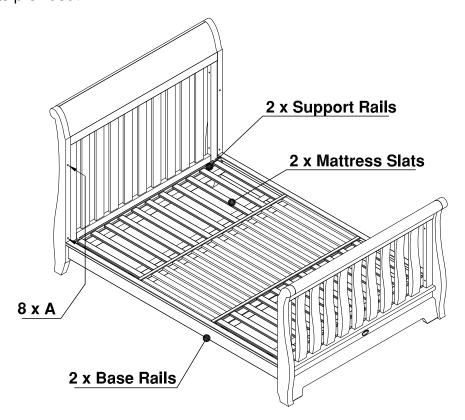

8 x A



Ver 1.0