
Rear Rack Assembly for CITY 1



Denago Rear Rack for the City 1.0-The rack comes assembled along with 4 bolts to secure your rack.

Please follow the below assembly instructions



Step 2- Place rack on rear wheel with 2 bars pointing towards the front of the bike




Step 3- Loosen but do not completely remove the nuts and bolts on the top of your rack. FOUR (4) positions. Once loosen you should be able to move the bars freely. For the top- USE your DENAGO folding tool 5mm Allen wrench. For under the rack, you will need a 10mm or adjustable wrench. In loosing these 4 areas this will allow you to adjust the rack in STEP 5.







Step 4- Take one of the black bolts and pass thru the hole on the bottom of the rear rack and align with the treaded portion on the bottom of the bike frame-Tighten but keep slight loose. Now do the same on the other side. You will need the 4mm Allen wrench

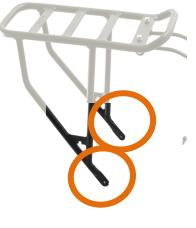



CS@BIKE.com or 1-877-755-2453(BIKE)



Rear Rack Assembly for CITY 1

Step 5- You will need to remove the 2 SILVER BOLTS just below the seat clamp. Once REMOVED TILT your rack towards the front of the bike and align the open hole on the rack arms with the threaded part on the frame and secure the bolt.





DO NOT TIGHTEN COMPLETELY YET. You need the movability.

Step 6- You can now slide and adjust the RACK RODS to allow for as much as possible FLAT/LEVEL position on your rack. Once you have established this tighten the BOLTS on the TOP of the rear rack first then confirm alignment and position of bars and secure the NUTS on the BOTTOM of the rack









Step7- Go OVER all areas on your rack and TIGHTEN and SECURE all BOLTS and NUTS. You should be checking 6 BOLTS and 2 NUTS.

If you have any questions or concerns, we are here to help.



CS@BIKE.com or 1-877-755-2453(BIKE)

