

KD - TRICK BINDING MOUNTING AND PLACEMENT


RECOMMENDED FRONT BINDING PLACEMENT

MEASURE FROM REAR OF SKI TO REAR OF HEEL ON FRONT BINDING

41' 17 1/2" 42" 18" 43" 18 1/2"

ALWAYS CHECK SCREW LENGTHS AND THREAD TYPE

Only use hand screw driver to start and tighten screws to avoid cross threading of screws

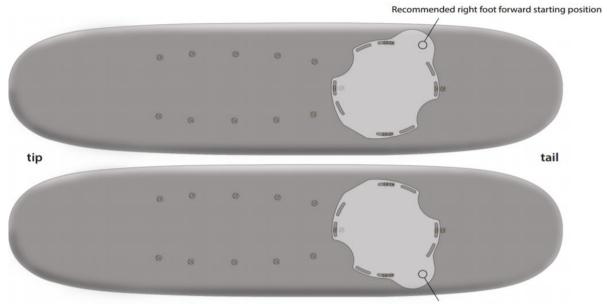

Recommended left foot forward starting position