


# DIY Candle Making Kit

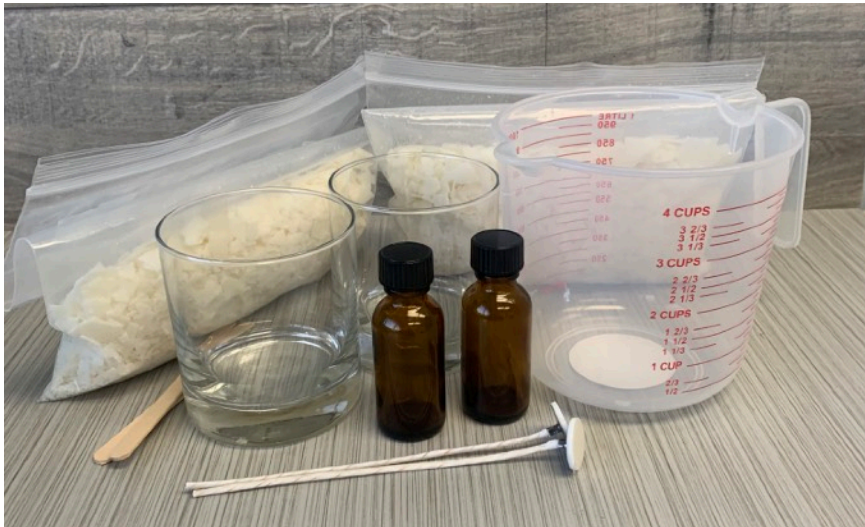

## Materials

- Mixing pitcher
- Scented Oils
- Wax Packets
- Glass Vessels
- Plastic Lids
- Stirring Sticks
- Wicks
- Instructions

## Cautions / Prepare Your Workspace

- It is recommended to put kraft paper or news paper on your work surface. Some people like to work on baking sheet just in case of any spills.
- If you are working with your children, it is highly recommended that you help them every step of the way. You will be working with hot wax that could burn.
- No items should be consumed internally or placed on the skin.



1. Prepare the wick by removing the clear covering from the adhesive pad.



2. Place the wick in the center of your glass vessel.
3. Use your fingers to press down to the wick base to ensure that it is securely attached to the bottom of the glass vessel.



Have Questions or Need Help?  
Call or Text: 980-320-0769  
Email: [michael@malloryscandles.com](mailto:michael@malloryscandles.com)

MALLORY  
candle co




### Melt the Wax

4. The Wax is pre-measured for you. Take one bag of wax and pour it into your melting/mixing pitcher.

**Do not melt the wax in the plastic bag.**



5. Place the mixing pitcher with the wax into the microwave.
6. Heat for 1-2 minutes. This might take a shorter period of time depending on your microwave. Do NOT walk away.

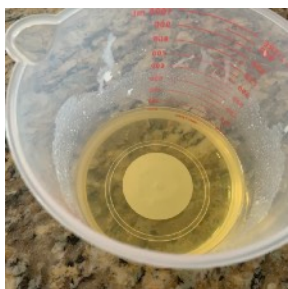

7. If the wax is not completely melted, continue to microwave in 30 second intervals.
8. When wax is ready, it will appear completely liquid and a golden honey-like color.




### Mix the Scent and the Wax

9. Pour the scented oil (in the small brown bottle) into your melted wax. Pour the entire bottle as this has been pre-measured for you.



### Pour the scented wax into the vessel

11. Place your glass vessel on a heat resistant surface.
12. Pour your scented wax mixture into your glass vessel.
  - Don't worry if the wick in not complete straight at this point, we'll fix that in the next step.

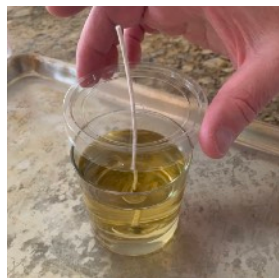

### Place the plastic lid on the glass vessel

13. The wick should go through hole in the center of the plastic lid as this will hold the wick straight while the candle sets up.



### Allow to cool

14. Keep the candle on a heat resistant surface.
15. Allow the candle to setup for about 12-14 hours. This will ensure the candle is completely cool.



### Trim the Wick

16. Remove the plastic lid from the candle.
17. Using scissors, cut the wick to about 1/4-inch.



- Keep a careful watch while heating wax in the microwave and Do Not walk away.
- Melting wax typically takes 3-4 minutes, but can vary depending on microwave.
- Be careful not to over heat wax once it liquifies.
- Container and melted wax will be hot! Use caution when removing melted wax from microwave.