
## Four door, 11 story shoe cabinet with shoe positions

The installation methods for the 8th and 11th floors are the same


8-layer boot board x2 narrow layer board x3 backboard x7
















The following is the installation method for flat doors, louver doors, Changhong doors, and plastic rattan doors. The installation method is the same, and it is more convenient for two people to install them on the ground together

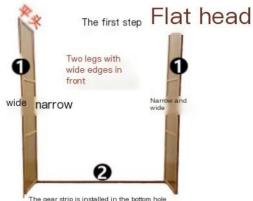





The gear strip is installed in the bottom hole of the narrow edge

Install the wide laminated board backboard and clamp it onto the laminated board slot


Install middle groove plate magnetic



Install backboard, boot position board, narrow layer board



First install the card slot, then install the bottom gear strip

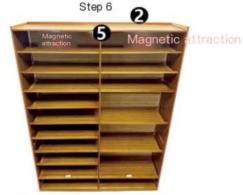

Install the wide laminated board with magnetic suction on the top and the stopper strip. Install the screws in front of the wide laminated board and wait for the door to be installed before installing it

## Step Seven

Install the door to the middle groove plate and the top wide layer plate with a latch, with the handle facing outward in the middle. Finally, install the door iron sheet and complete the installation

Bottom layer open shoe placement





The door iron plate must be installed on the small hole of the door with the smallest screw. Each door has two door iron plates, one on top and one on the bottom



If the door latch

If it's a bit tight,
it's a normal
phenomenon

Press it in with some force