




**SIP.LEARN.
PRESS!**



GUIDELINES FOR PLACING T-SHIRT TRANSFERS

POCKET LOGOS:
CENTER THE TRANSFER
WITH THE RIGHT EDGE OF
THE COLLAR AND PLACE
1.5" - 3" BELOW THE
BOTTOM OF THE COLLAR.

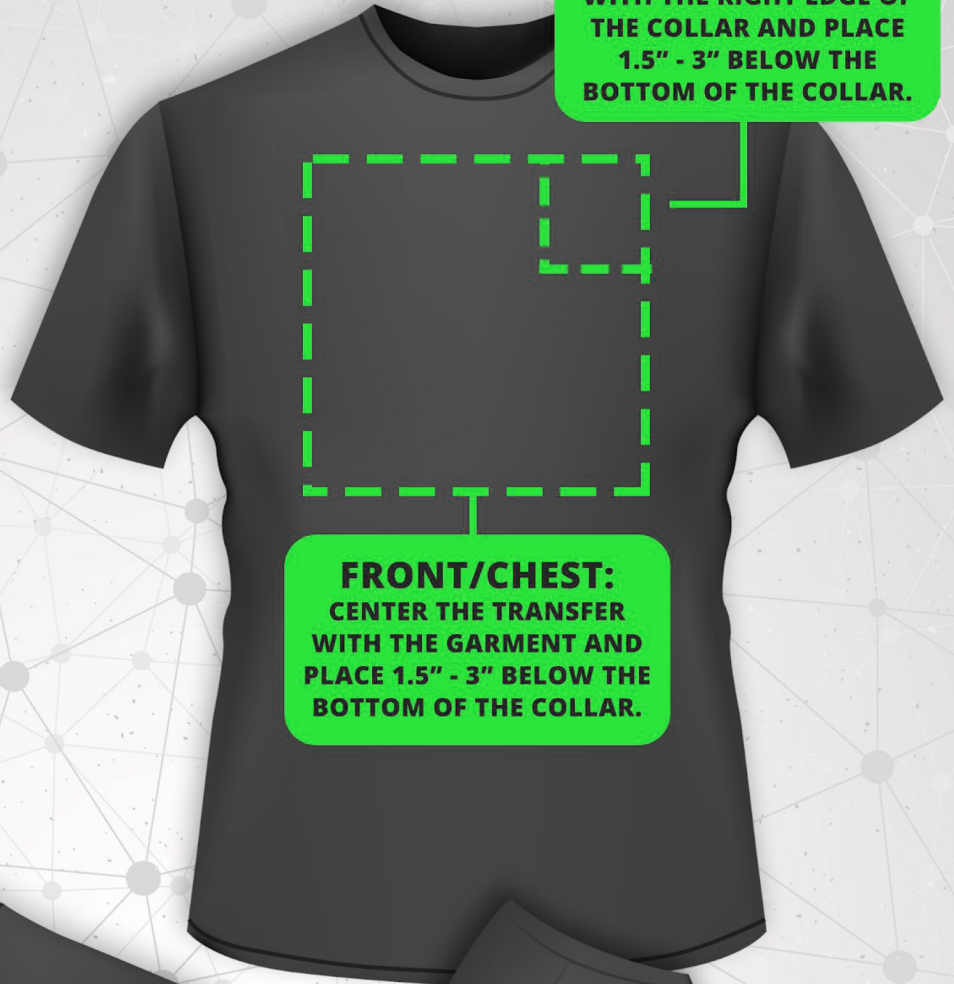

FRONT/CHEST:
CENTER THE TRANSFER
WITH THE GARMENT AND
PLACE 1.5" - 3" BELOW THE
BOTTOM OF THE COLLAR.



REAR/BACK:
CENTER THE TRANSFER ON
THE GARMENT AND PLACE
0.5" BELOW THE FRONT OF
THE COLLAR.



SHORT SLEEVE:
CENTER THE TRANSFER
OVER THE SLEEVE AND
PLACE 1.5" - 3" ABOVE THE
SEAM ON THE SLEEVE HEM.