


Sliding screen installation manual


1. Connect the left and right frames to the end of the top rail and secure them in place with the screws supplied.

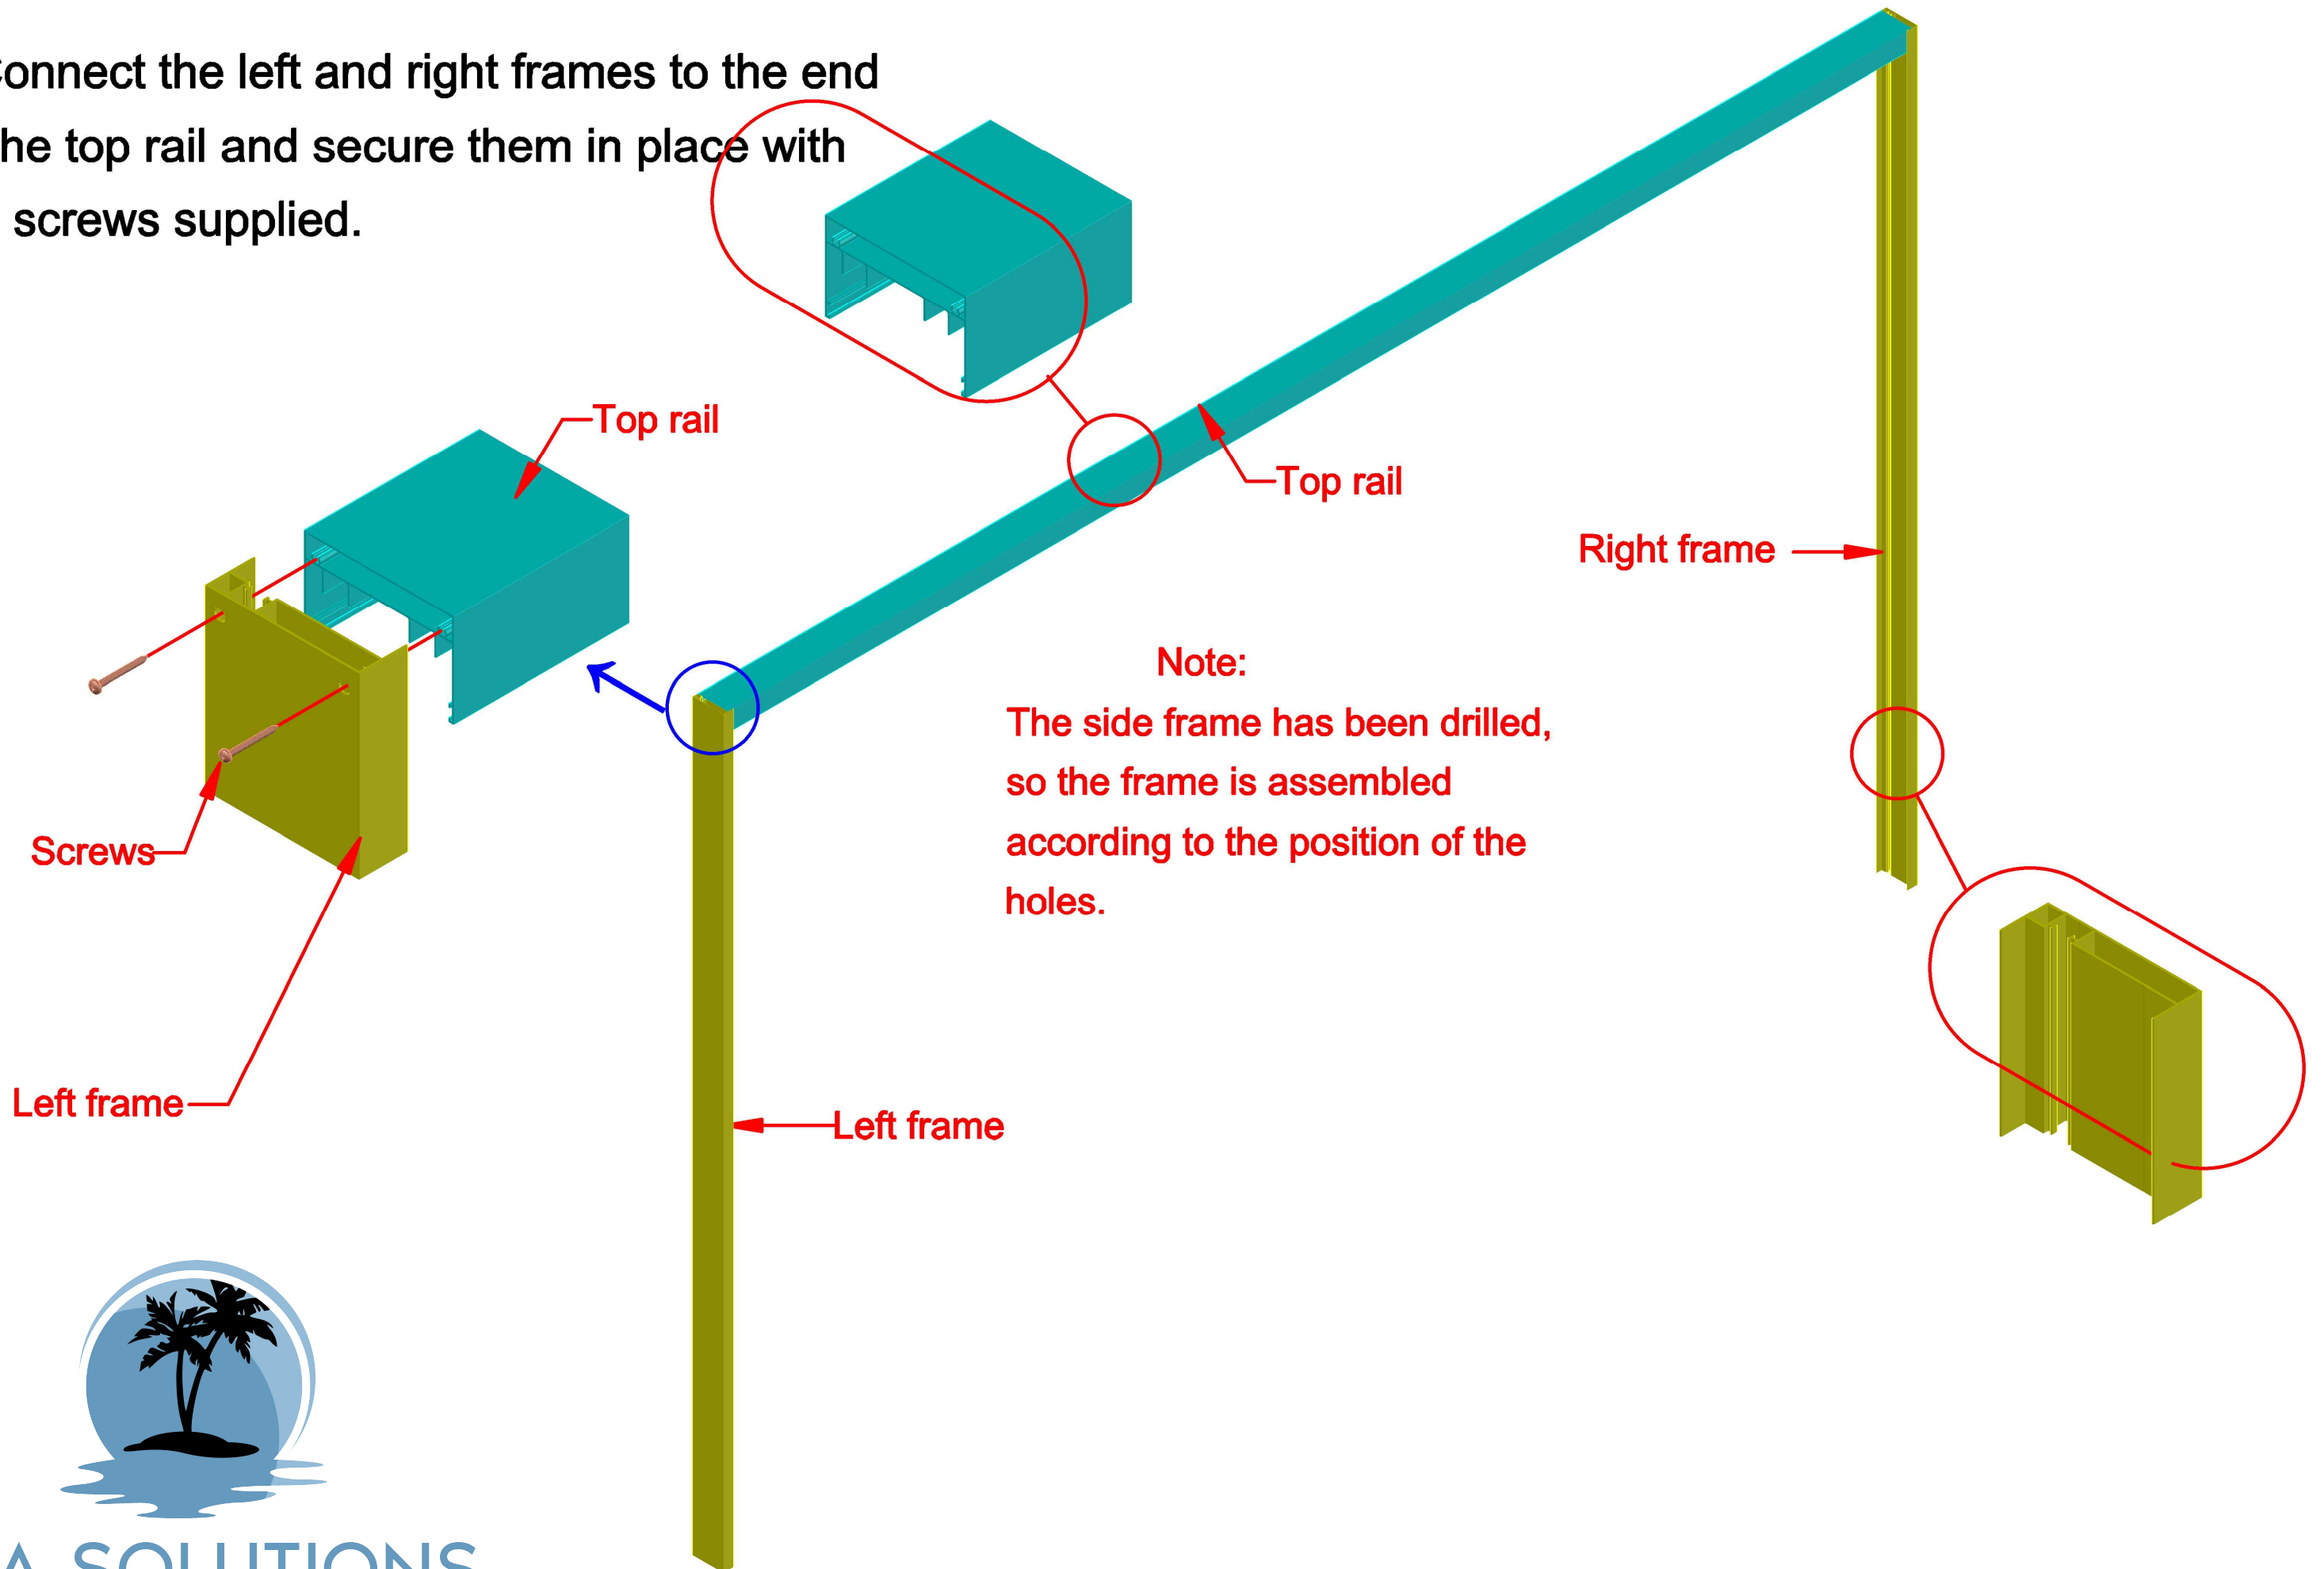

2. Using a spirit level, make sure that the legs of the pergola are at 90° to the ground when ground once they have been fitted. To do this, position the top rail and the right/left frames on the inside of the pergola legs and secure them with the screws. Position the bottom rail between the base plates of the pergola and secure it with the screws supplied.

Note:

The bottom rail must be flush with the top rail.

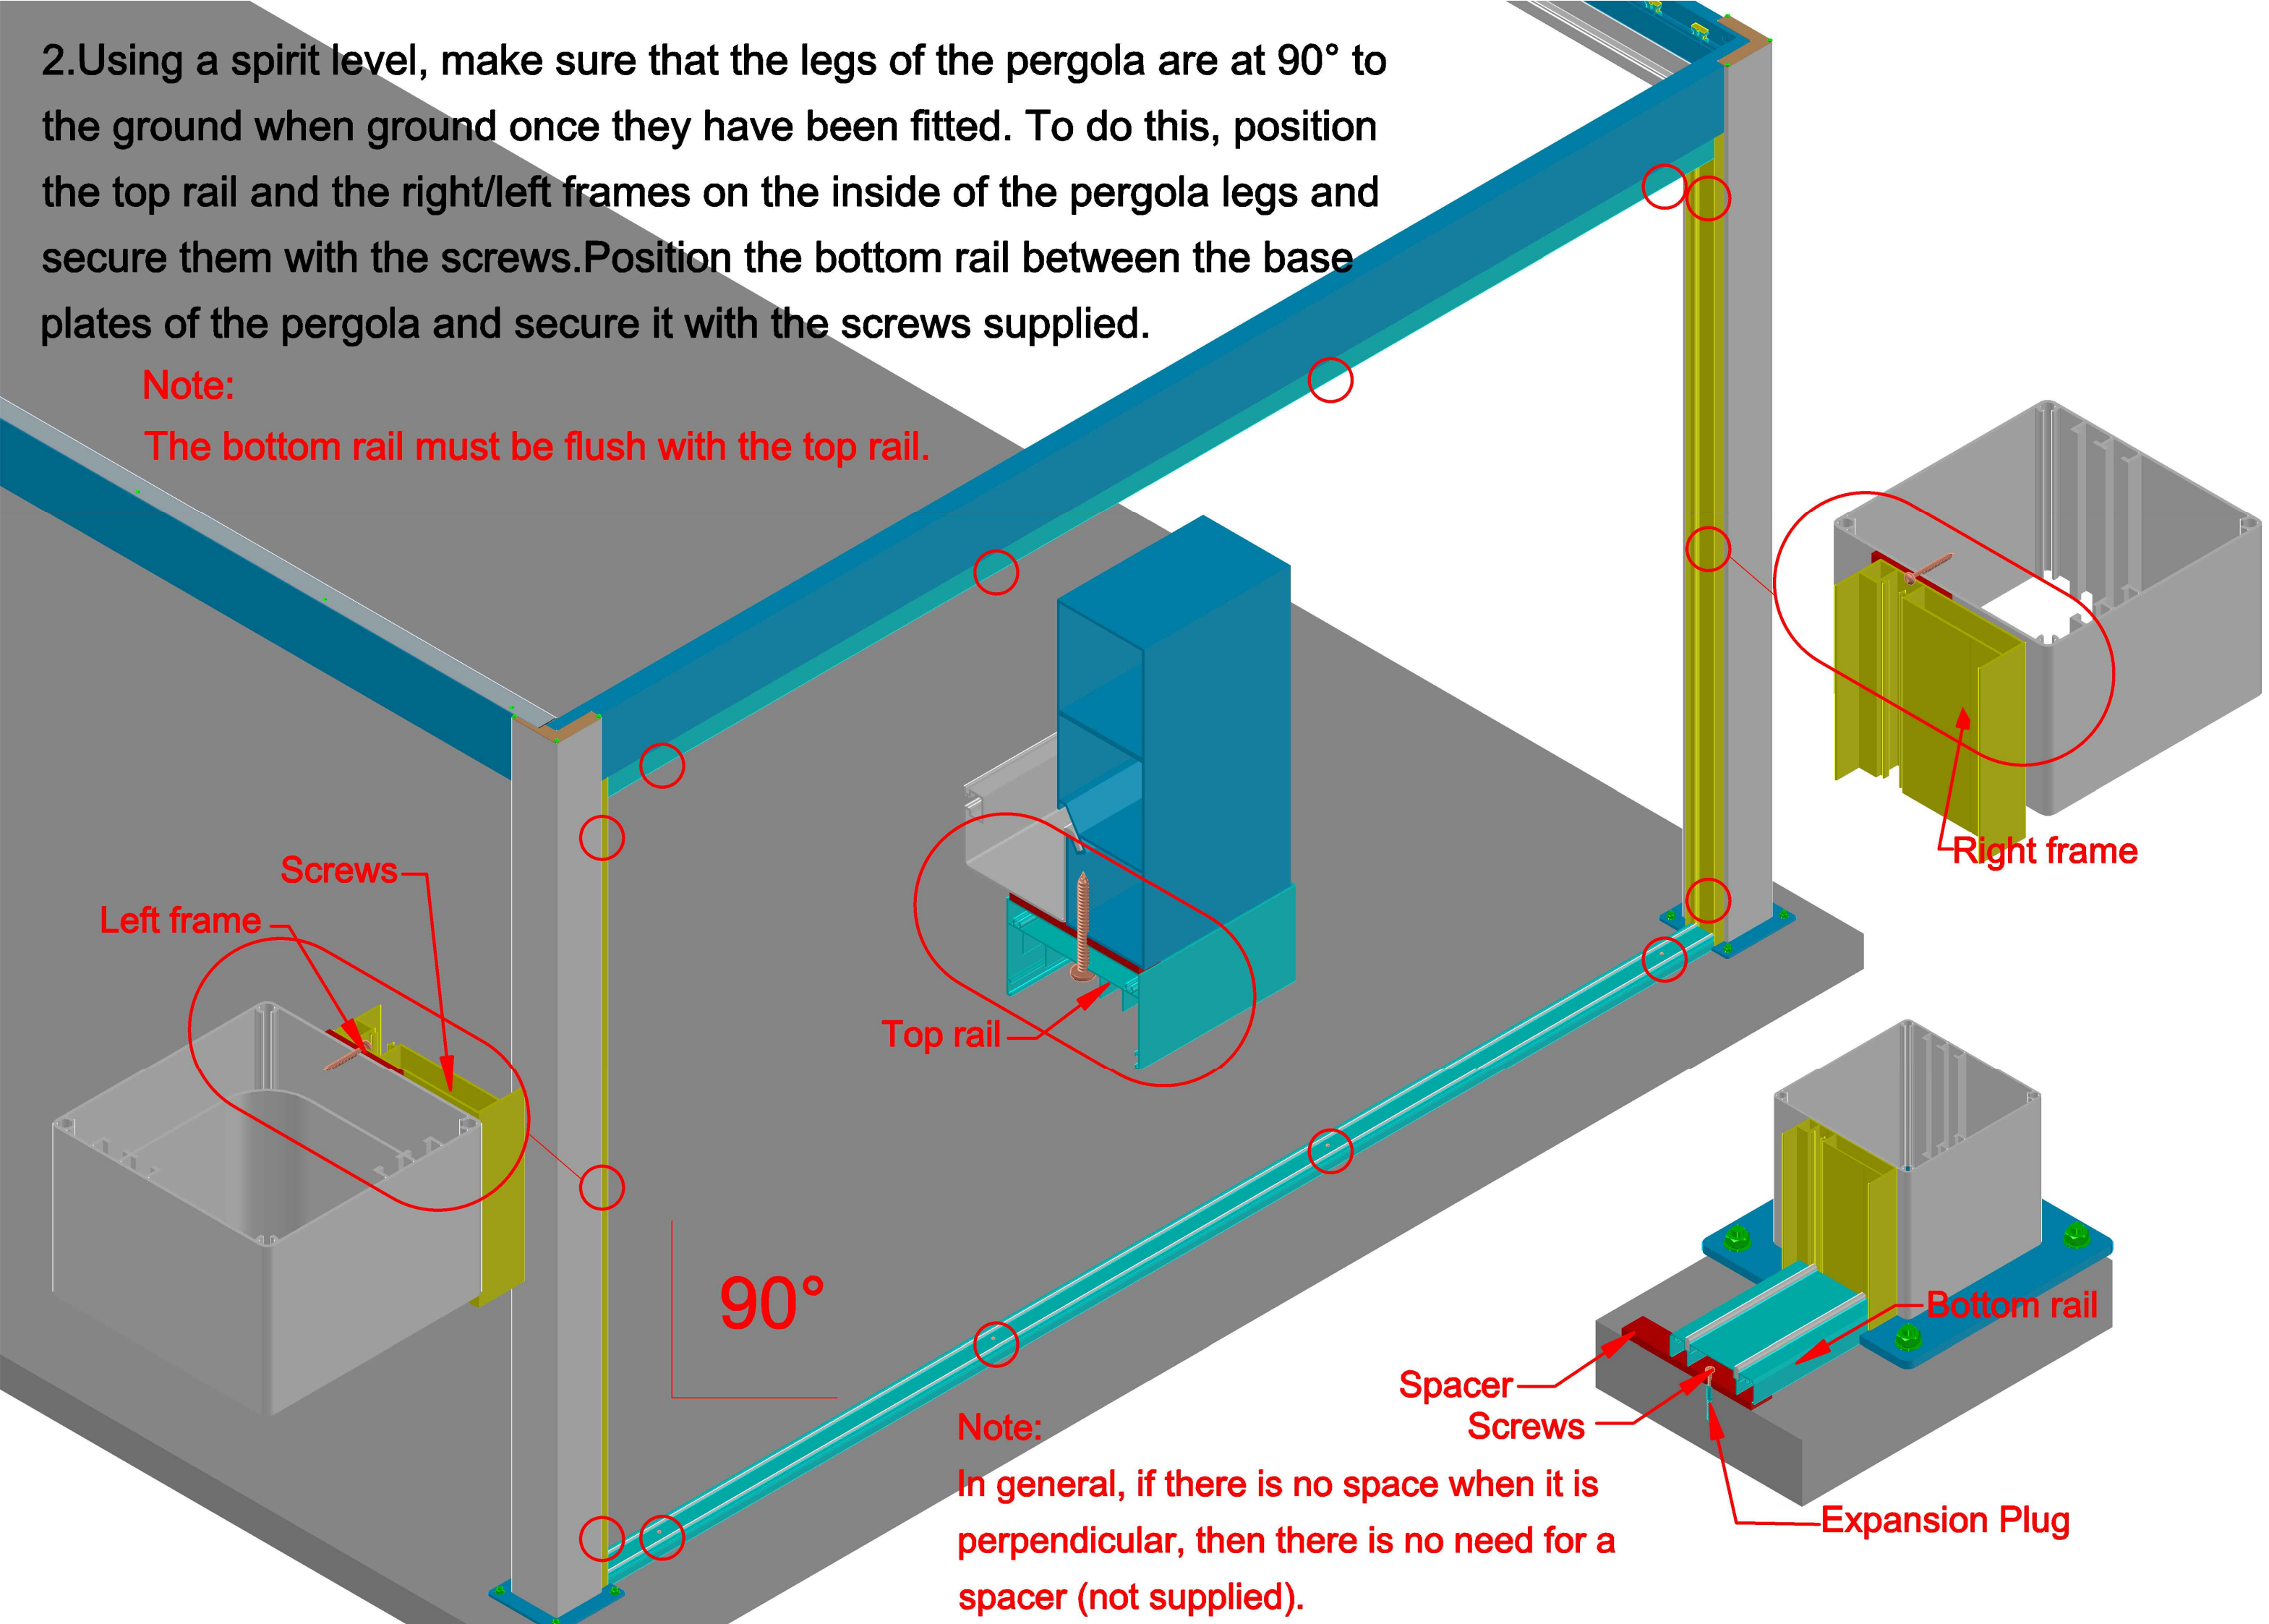

Left frame

Screws

Top rail

Right frame

90°

Spacer
Screws


Bottom rail

Expansion Plug


Note:

In general, if there is no space when it is perpendicular, then there is no need for a spacer (not supplied).


3. Lace the screen panel into the frame in the correct order.

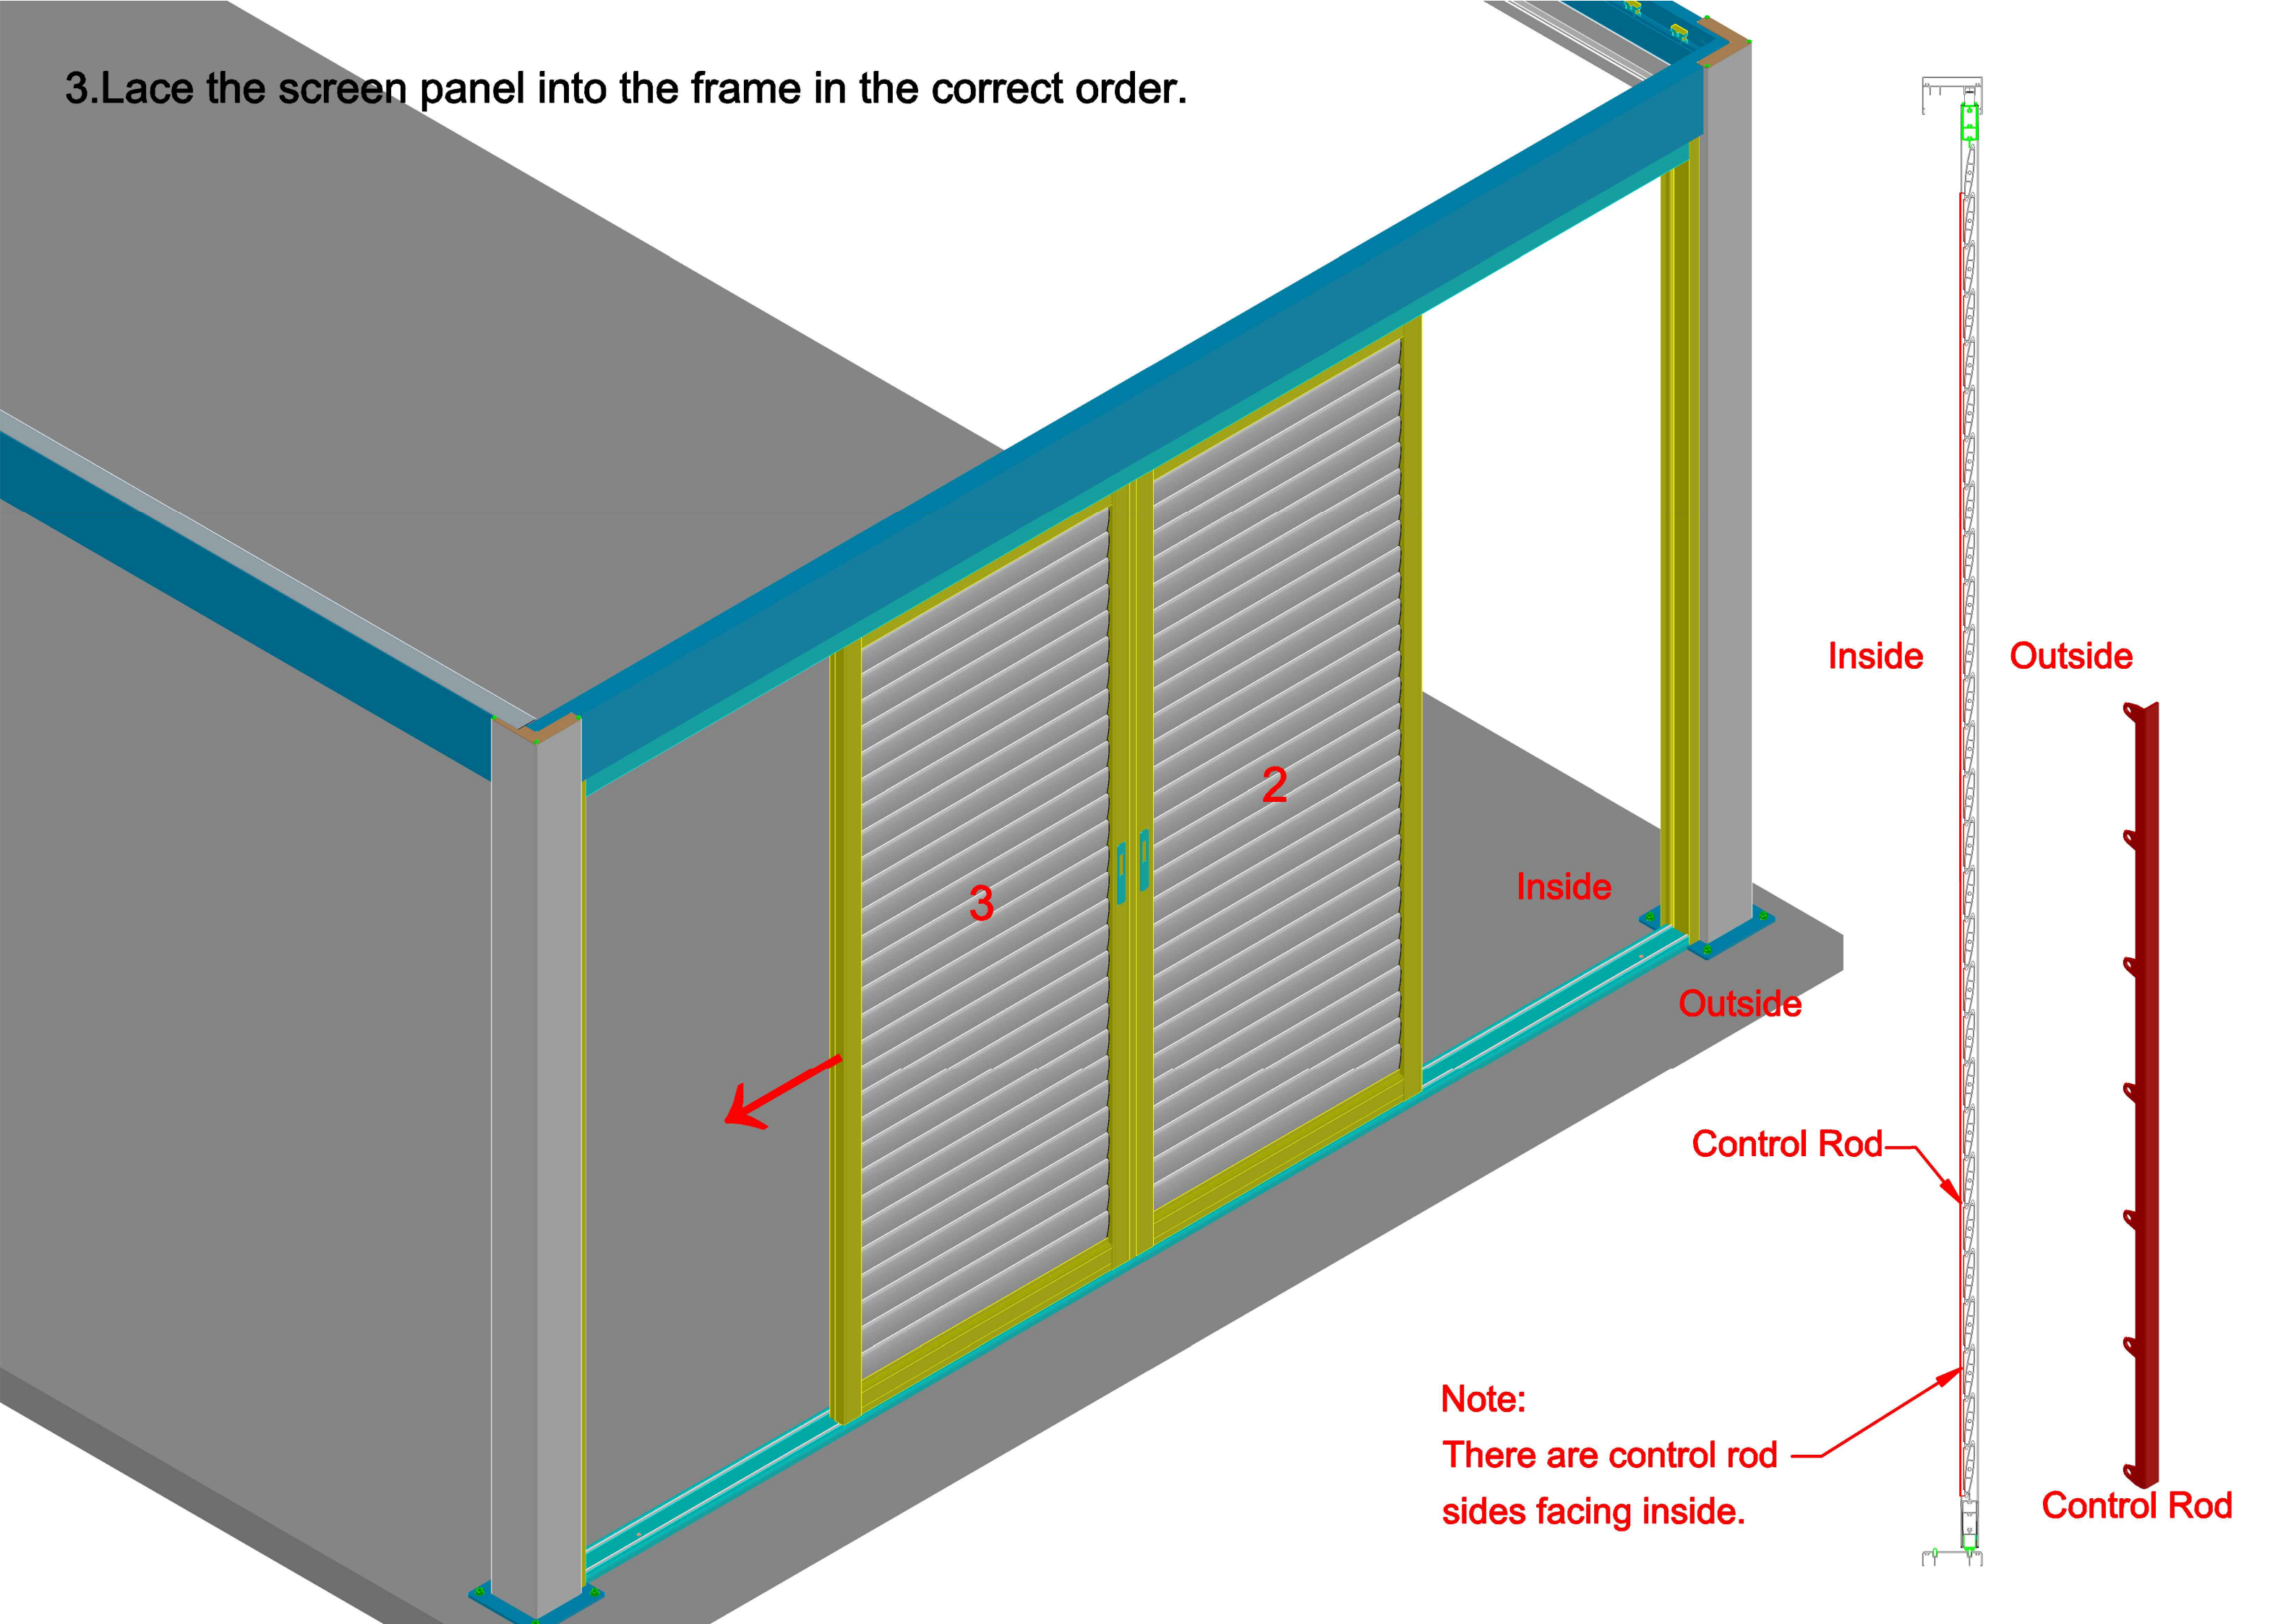

4.Repeat the same steps to add the rest of the sliding screens.

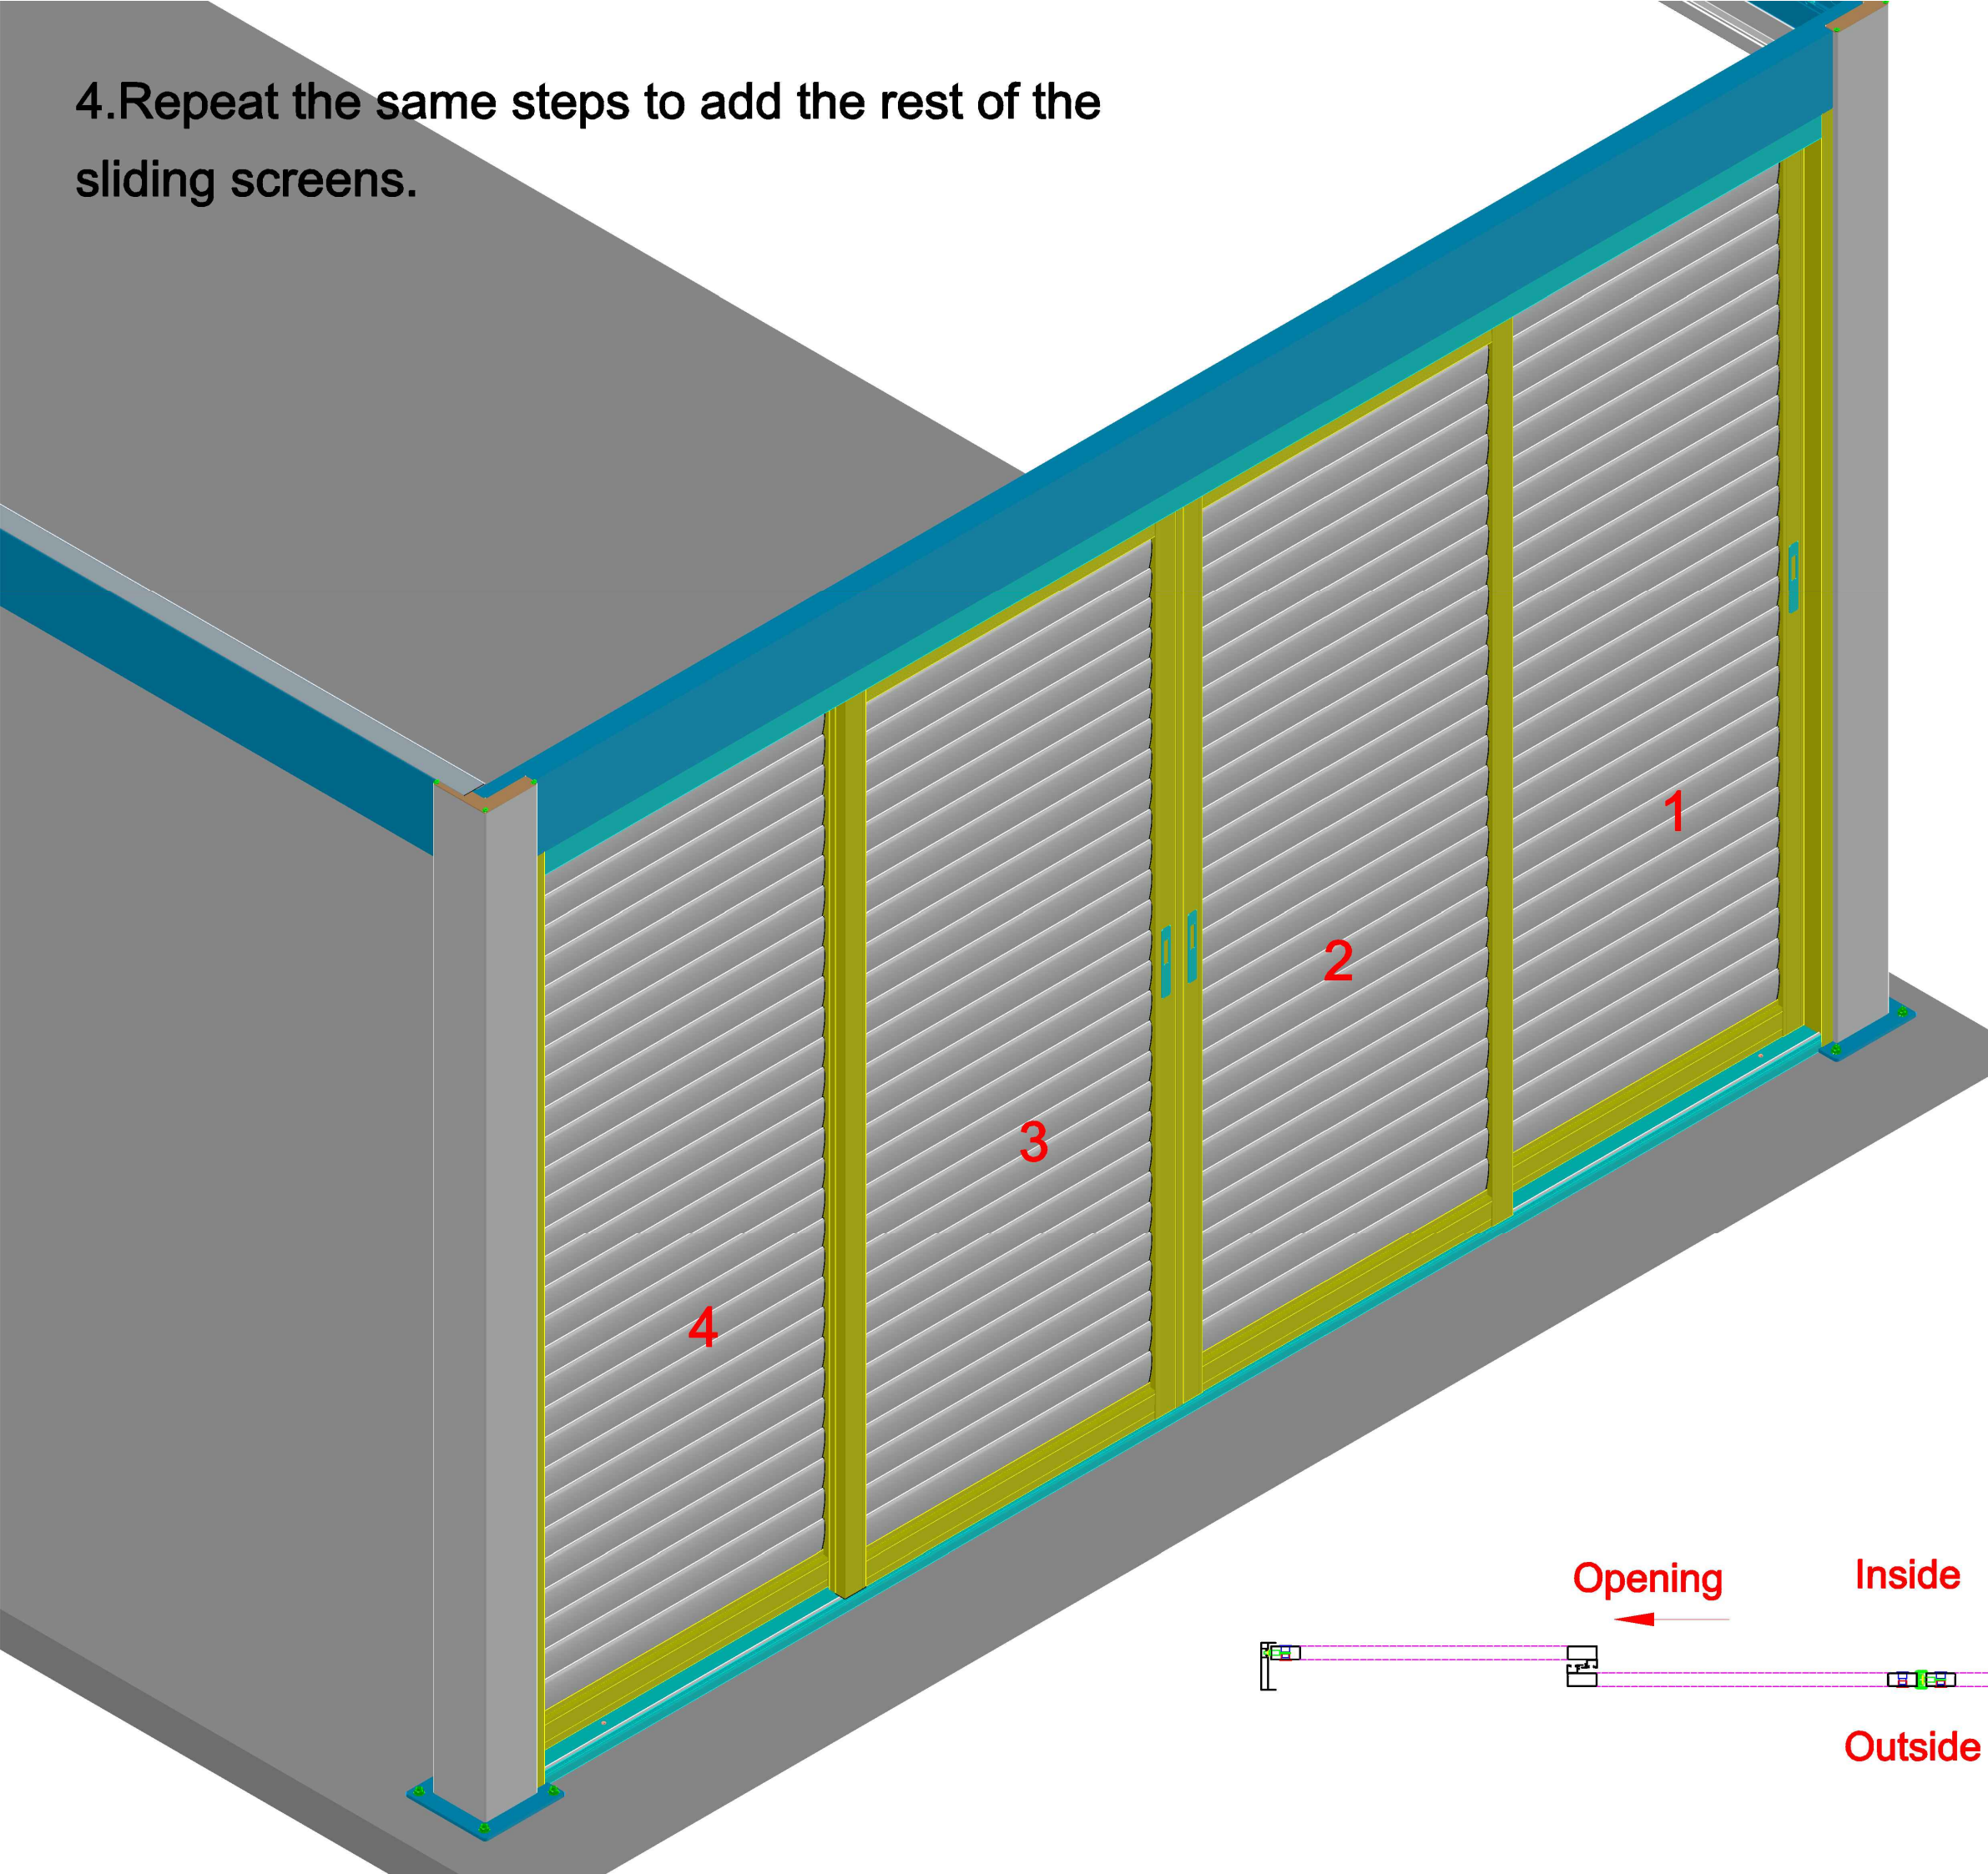

Note:
Please consider the
meaning of the section.

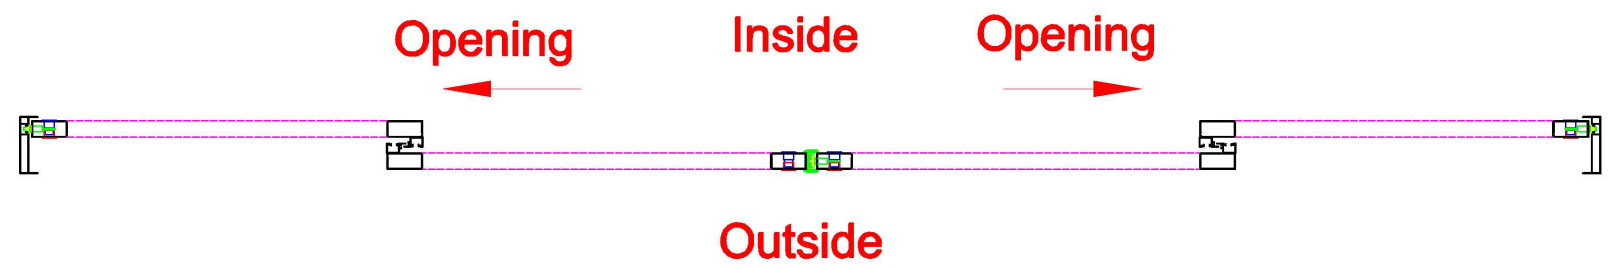

5. As shown, apply silicone sealant to the gap between the frame and the pergola.

Note:

If you want a better watertightness, it is recommended to put Silicone sealant, if not ignore this step!

Silicone sealant

Inside

Outside

Silicone sealant

