





METAL
Garden Screen

WALL BRACKET INSTALLATION

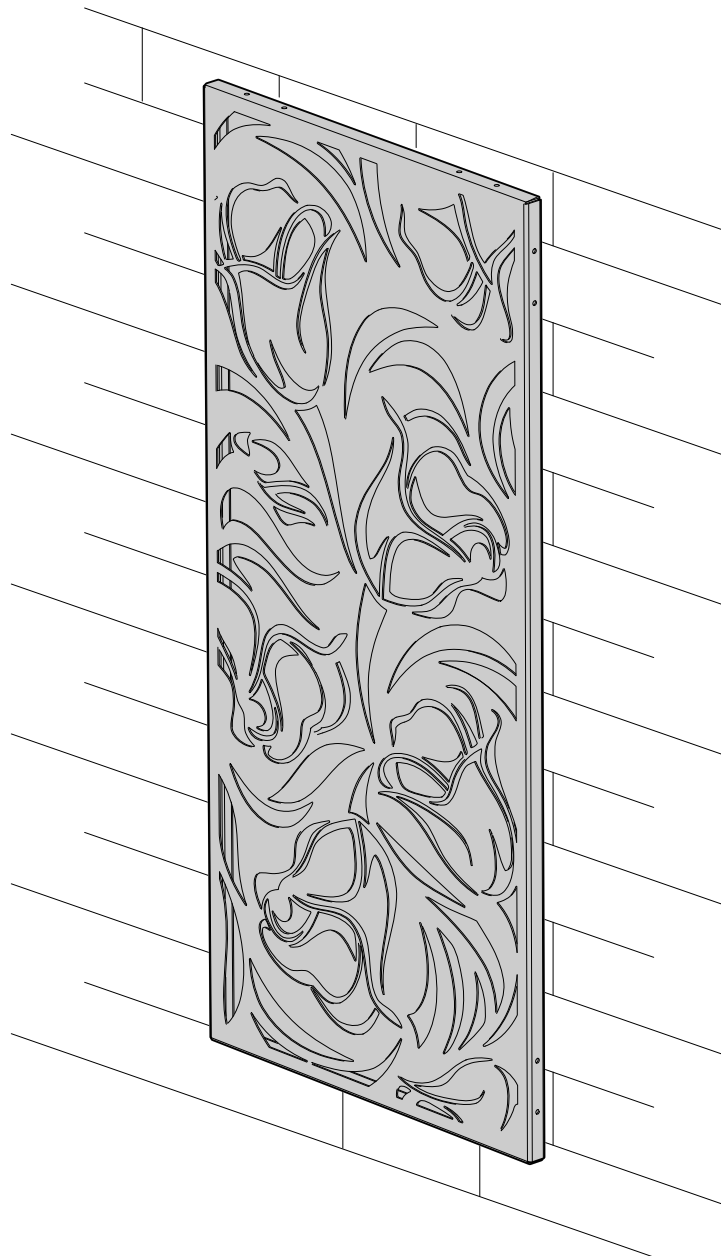


TOOLS REQUIRED

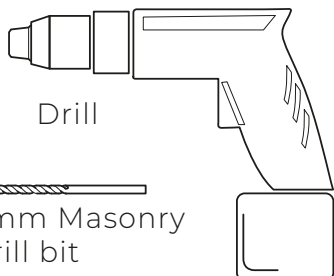

Drill

8mm Masonry
Drill bit

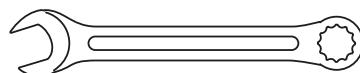

2 x 13mm
Spanner




Level




INSTALLATION

- 1** Position the wall bracket on the wall. Level it, then mark hole positions.

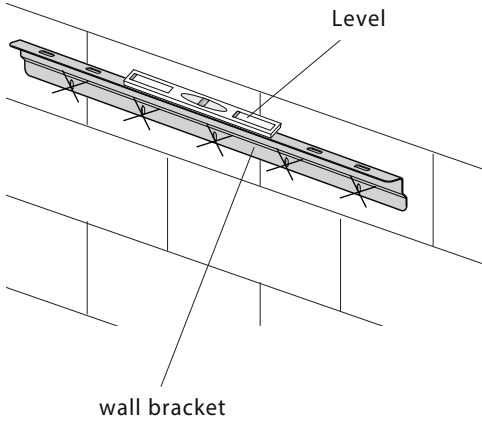



- 3** Bolt lower bracket to screen.

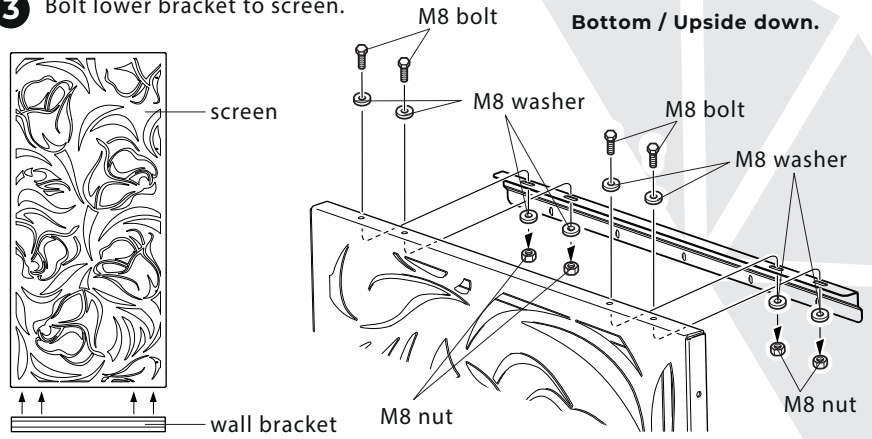

- 2** Drill holes on the marks and mount the brackets using anchor bolts.

PRO TIPS

Leave mounted anchor bolts loose until step .

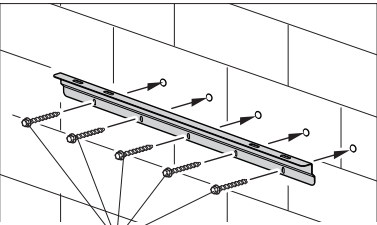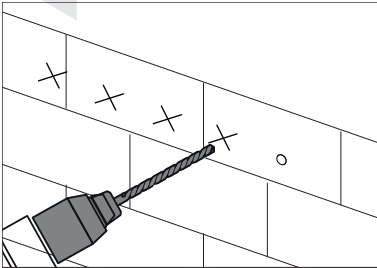


Anchor bolt

Hang the screen on the first installed bracket in position.





PRO TIPS

Ensure colour coating is not damaged by wall or bolts.

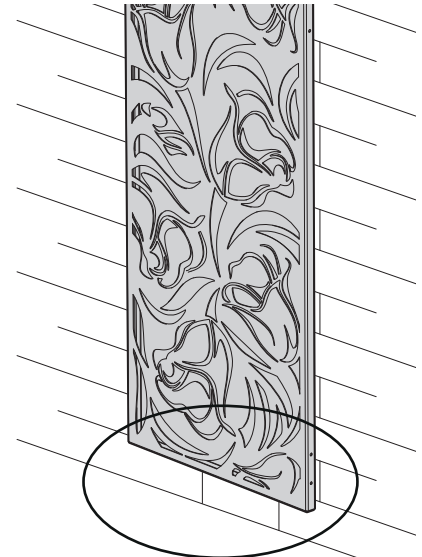


Mark lower hole positions.

- 4** Remove screen and drill lower bracket holes.

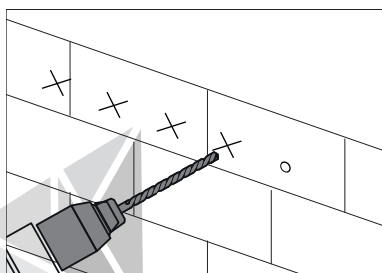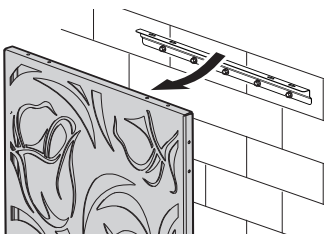


- 5** Hang the screen to the bracket. Secure the lower bracket using anchor bolts.

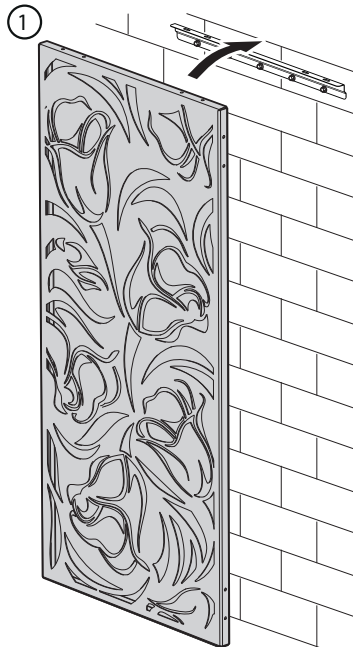


PRO TIPS

Ensure colour coating is not damaged by wall or bolts.

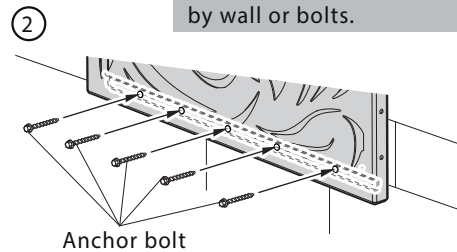


Anchor bolt

- 3** Tighten bolt on upper bracket.

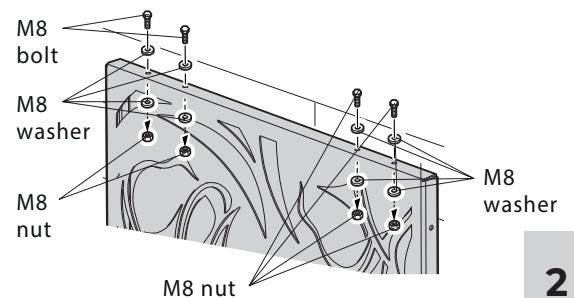


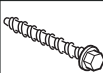


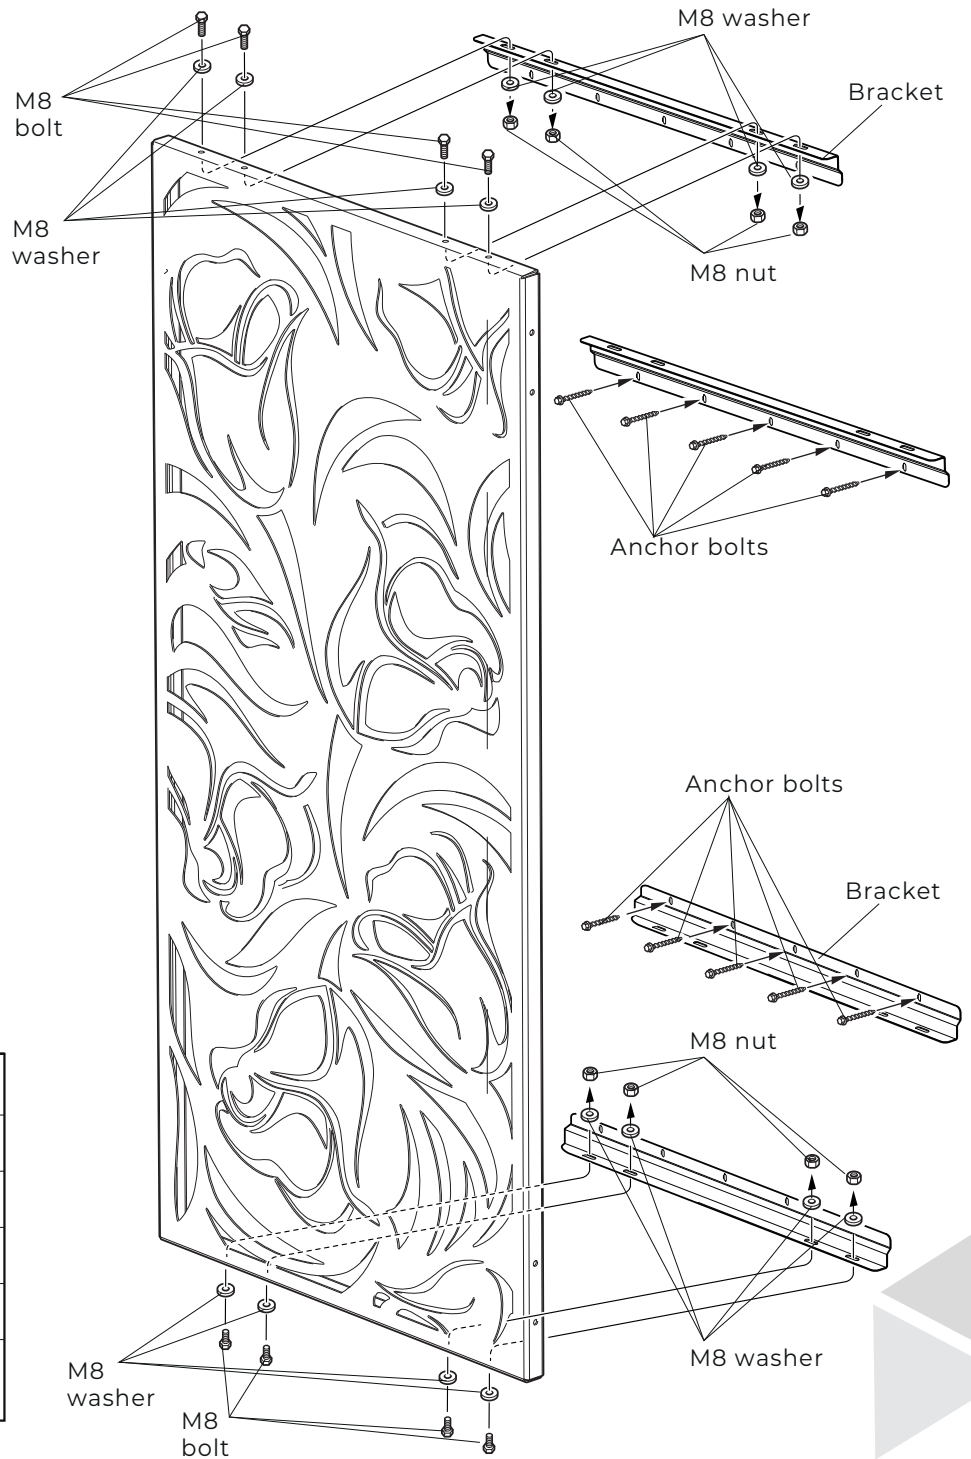

PARTS VIEW



Parts

	Screen	x 1
	Bracket	x 2
	M8 Bolts	x 8
	M8 Locknut	x 8
	M8 Washer	x 16
	Anchor bolt	x 10



METAL
Garden Screen

Metal Garden Screen Ltd.

Metal Garden Screen, Unit 2381
37 Westminster Buildings, Theatre Square
Nottingham. NG1 6DQ

Tel: +44 800 044 8412

Email: sales@metalgardenscreen.co.uk/

Website: <https://metalgardenscreen.co.uk/>

REGISTERED IN ENGLAND
Company number: 9270750

