
BASIC Casserole Carrier

for 9" x 13" Casserole Dish





9" x 13" folded

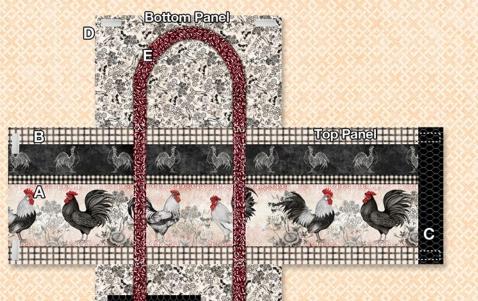

A Repeating Stripe (Outside Top Panel) 1-1/8 yards*


*5/8 yard if cutting 2 shorter stripes to piece together.


B Border (Outside Top Panel) 1/4 yard

C Lining, Pocket & Right Border 7/8 yard

D Outside Bottom Panel 5/8 yard

E Handles 1/3 yard

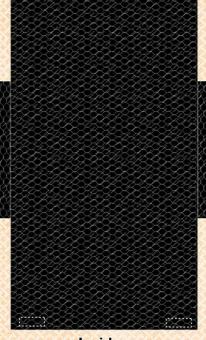

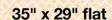

Inside

ALSO REQUIRES: Hook and Loop Tape Cotton or Insulated Batting

Prints as shown may not be to exact scale.



BASIC Casserole Carrier

for 9" x 13" Casserole Dish



Prints as shown may not be to exact scale.



Basic Casserole Carrier

Please read all instructions carefully AND identify all fabrics before beginning.
All instructions include a 1/4" seam allowance and strips are cut selvage to selvage, unless stated otherwise.

1. Cut the following:

Fabric A - Referring to the carrier image, fussy cut along the length of fabric parallel to selvage: (1) 8-3/4" x 33-1/2" strip OR cut 2 shorter 8-3/4" strips and stitch together for total 33-1/2" piece

Fabric B - Cut (2) 1-7/8" strips, subcut (2) 1-7/8" x 33-1/2" strips

Fabric C - Cut (1) 15-1/2" strip, subcut (1) 15-1/2" x 29-1/2", (1) 2-1/2" x 11-1/2", and (2) 5-1/2" x 7-1/2" pieces

Cut (1) 11-1/2" strip, subcut (1) 11-1/2" x 35-1/2" piece

Fabric D - Cut (1) 15-1/2" strip, subcut (1) 15-1/2" x 29-1/2" piece

Fabric E - Cut (2) 4" strips, sewn together end to end and cut into (1) 4" x 64-1/2" strip

Cotton or Insulated Batting - Cut 2 pieces: approximately 16" x 30" and 12" x 36"

Hook and Loop Tape - Cut (4) 1" x 3" pieces

2. Piecing Order:

1. Stitch a **Fabric B** 1-7/8" x 33-1/2" strip to each long edge of the **Fabric A** 8-3/4" x 33-1/2" piece for Unit 1 (11-1/2" x 33-1/2" unfinished).



2. Stitch **Fabric C** 2-1/2" x 11-1/2" piece to the right end of Unit 1 to make Unit 2 (11-1/2" x 35-1/2" unfinished).

3. Loosely baste Unit 2 and **Fabric C** 11-1/2" x 35-1/2" piece right sides together with edges aligned. Lay basted set on 12" x 36" batting and stitch 1/4" from raw edges of basted set, through all layers leaving a

10" opening for turning.

Batting

Unit 2
(Wrong Side Up)

Fabric C
(Right Side Up)

Leave open for turning

4. Remove basting, trim excess batting, turn right side out, fold raw edges in, and stitch opening closed. Quilt as desired to complete Top Panel (approximately 11" x 35").

5. Repeat step 3 with 15-1/2" x 29-1/2"

Fabrics C and D pieces
and 16" x 30" batting.

6. Repeat step 4 to make bottom panel (approximately Fabric C 15" x 29"). (Right Side Up)

Fabric D
(Wrong Side Up)

Leave open for turning

Bottom Panel

(Fabric D Side)

1-1/2"

Leave


open

7. Stitch all sides of 2 **Fabric C** 5-1/2" x 7-1/2" pieces right sides together, aligning edges and leaving an opening for turning. Turn right side out, turn in raw edges, and baste opening closed to form 5" x 7" lined pocket. Press.

8. Referring to diagram, pin pocket 1-1/2" from **Fabric D** side of Bottom Panel. Stitch 3 sides of pocket through all layers.

9. Referring to diagram, place Bottom Panel on flat surface with Fabric D side up. Center Top Panel

crosswise over Bottom Panel with
Fabric A side up, approximately 9" from
short edges of Bottom Panel and extending 7"
to the left side. Stitch Panels together as
shown.

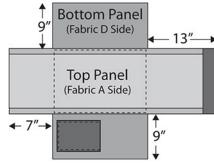


Letters in italics indicate wrong side of fabric.

Basic Casserole Carrier

10. Press **Fabric E** 4" x 64" strip in half lengthwise wrong sides together, then unfold and press both long raw edges in to the center fold, wrong sides together.

11. Unfold, and stitch short ends, right sides together to form a circle, then refold along the 3 pressed marks. Top stitch approximately 1/8" from each long edge for a 1" x 64" handle. Mark center of handle with a pin, across from seam as shown.

- 12. Referring to Outside Placement Diagram, lay handle on Panels with seam and center mark of handle placed at center of Top Panel. Pin or baste in place. Stitch handle in rectangular shapes through all layers, extending just over the edges of Top Panel. Stitch an X at each end of the rectangles for reinforcement. Be sure the handles remain loose over the Bottom Panel.
- 13. Stitch hook and loop pieces to the inside and outside as indicated on diagrams.
- 14. To use carrier, place your casserole on the center inside. Fold sides over dish in the order indicated, pressing the hook and loop tapes together to secure dish.

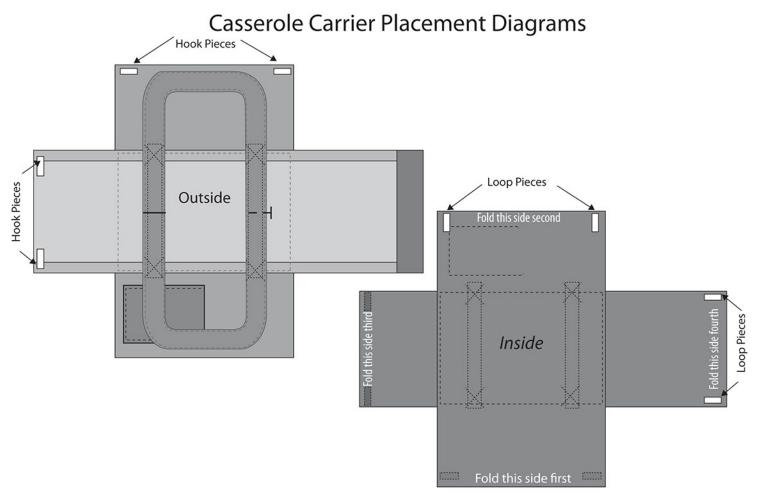

(Placement diagrams are not to scale)