

SwitchBack **“SOLO”**

The “Down Tailgate” Camera

Installation instructions for “Drill In” version
and “License Tag” version

By



SwitchBackSOLO.com

SwitchBack™“SOLO”Installation



Installation
Video

“Drill In” Version

1

Open your tailgate and remove the access panel



2

Look inside the access panel for a location that has no metal under the cap. Drill the camera hole into the top cap.



3

Insert the camera with the “UP” label on top. Leave it out a bit for now in case you need to make final adjustments



4

“Fish” the SOLO Block harness, camera wires & connectors through the access hole at the bottom of the tailgate.



5

Mount the SOLO Block to a rib of the tailgate. *Make sure the block faces the passenger side of the truck. CAB arrows point to the front of the truck*



SwitchBack "SOLO" Installation



Installation
Video

"Drill In" Version

6

From under the truck disconnect your tailgate side harness from the truck side harness



7

Install the inline harness between the tailgate side and truck side harnesses



8

Connect the Camera connections to the inline harness. Secure with electrical tape.



9

Connect the SOLO harness to the inline harness until it clicks.




10

Test installation by putting truck in reverse and checking each camera. Once SwitchBack camera is centered, push it the rest of the way in.



11

Tidy up. Use cable ties to secure the wires. Replace tailgate access panel.

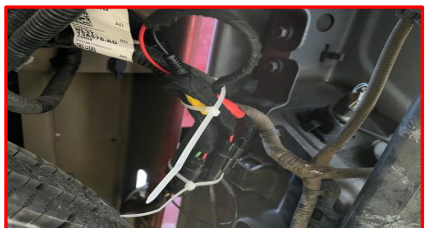

“License Tag” version

SwitchBack™“SOLO”Installation



Installation
Video

License Tag Version

1

Open your tailgate and remove the access panel



2

“Fish” the SOLO Block harness & connector through the access hole at the bottom of the tailgate.



3

Mount the SOLO Block to a rib of the tailgate. *Make sure the block faces the passenger side of the truck. CAB arrows point to the front of the truck*



4

Attach the Camera/Frame. Run connectors over bumper cover.



5

From under the truck disconnect your tailgate side harness from the truck side harness



SwitchBack“SOLO”Installation

License Tag Version



**Installation
Video**

6

Install the inline harness between the tailgate side and truck side harnesses



7

Connect the Camera connections to the inline harness. Secure with electrical tape.




8

Connect the SOLO harness to the inline harness until it clicks.



9

Tidy up. Use cable ties to secure the wires. Replace tailgate access panel.

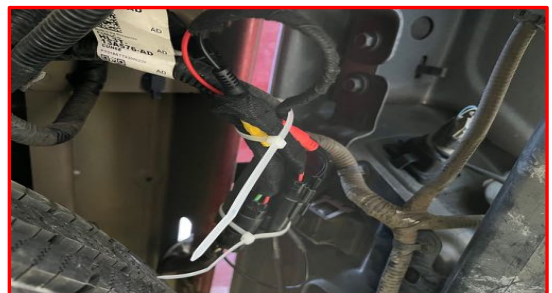

Check the installation:

With your tailgate up and the truck in reverse you should see your factory camera view

With your tailgate down and the truck in reverse you should see the license tag view