



FIFO™ CAN TRACKER

Assembly Instructions

KIT INCLUDES:

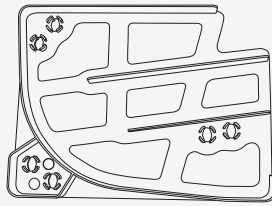


4 PANELS




12 - C DOWELS

Use with most standard 10-15 oz. cans such as condensed soup, fruit, and vegetable cans.

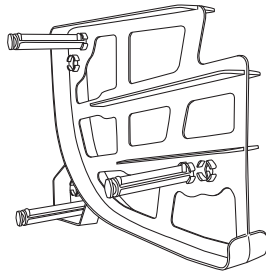


STEP 1

Insert three dowels into three of the holes (as shown). The remaining three holes will be used for the other panel. **DO NOT LOCK DOWELS IN PLACE.**

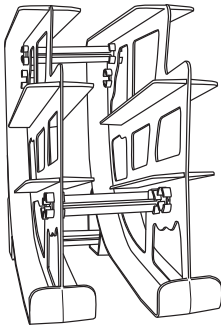


STEP 2

Attach the next panel into dowels.

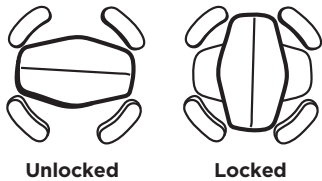

STEP 3

Lock dowels into place by turning clockwise. If it is difficult to turn dowels, use pliers. Pliers will not damage the dowels.

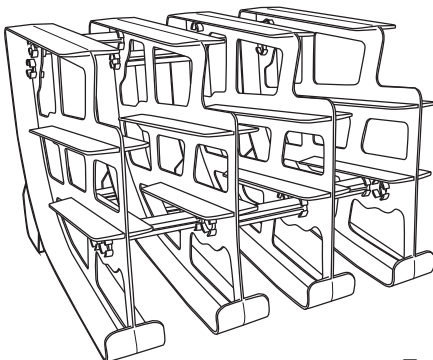

STEP 4

Put three more dowels into remaining holes to attach next panel. Repeat steps 2 & 3.

For assembly video and support visit www.fifostorage.com.

Copyright ©FIFO 2023. All Rights Reserved.

