



## Built-in Driver Backrest for a Harley Davidson with a Slit Seat



**From Full Dress Ultra**

**To Cruisers and More**



A driver's backrest that becomes part of your seat. No bars in the way of the driver's hips and legs or passenger's legs. Folds forward to ease passenger getting on or off and adds to safety by getting out of the way in sudden stops. Includes up and down height adjustments, as well as driver seating position, back and forth, to help driver sit upright to avoid slouching, a big factor in driver fatigue.

Backrest is concaved and pivots at the top of bar as you lean against it so no uncomfortable edges dig into your back. Well padded with foam, but only 1 1/2" thick which takes up less seating room than most other driver backrests. Comes with a handy pouch and shoulder strap to enable conversion to a shoulder bag.

### **INSTALLS IN MINUTES WITHOUT TAKING OFF SEAT COVER !**

Available for most motorcycle stock seats and can be custom fitted to most aftermarket touring saddles. Comes with stock stitching or custom upholstery to match closely to your seat.

OPTIONS: Upper Bar Cover; For passenger who would feel more secure with padded bar..  
Quick-Out Bar; Seldom needed, but available when frequent removal of backrest is desired..


1351 Cleveland-Massillon Rd., Suite A, Copley, OH 44321 (888)-343-3320  
email: [utopia@utpr.com](mailto:utopia@utpr.com) website: [www.utpr.com](http://www.utpr.com)



# Utopia Built-In Driver Backrest Installation Instruction for Slitted Harley Seats

1. Remove seat. 2. Remove fender nuts or bolts. 3. Set inside bar in place resting holes over fender bolts (as shown below), lining up inside bar to come out of seat slit. 4. Adjust height to be no more than 1/2" above seat (shown below). 5. Re-install nuts, on fender and tighten. 6. Attach bolt to small bracket on front of inside bar, to hole on frame in back of battery on older models, or to T bracket furnished on newer models (you will need to tweak fit by using holes and or bending small brackets on front of upright). 7. Re-install seat over inside bar. 8. Finally, install 2 1/4" bolt in backrest upper bar on Utopia pad to the tube now sticking up through seat.

**NOW ADJUST BACKREST FOR COMFORT AND TAKE A RIDE!!!**

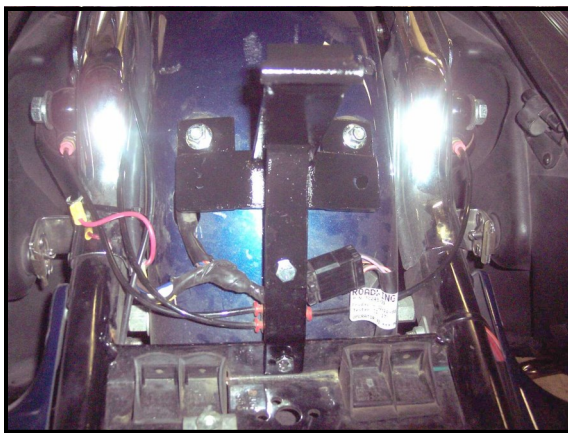

← Older Models



Inside Bar No More Than 1/2" Above Seat

Newer Models →

