


Made at our Shop in Akron, Ohio USA

by the Original Craftsmen since 1974

Built-in Driver Backrest for Victory Kingpin-8 Ball-Vegas-Gunner and others



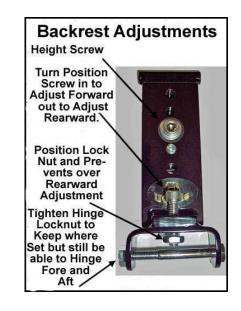

A driver's backrest that becomes part of your seat. No bars in the way of the driver's hips and legs or passenger's legs. Folds forward to ease passenger getting on or off and adds to safety by getting out of the way in sudden stops. Includes up and down height adjustments, as well as driver seating position, back and forth, to help driver sit upright to avoid slouching, a big factor in driver fatigue.

Backrest is concaved and pivots at the top of bar as you lean against it so no uncomfortable edges dig into your back. Well padded with foam, but only 1 1/2" thick which takes up less seating room than most other driver backrests. Comes with a handy pouch and shoulder strap to enable conversion to a shoulder bag.

INSTALLS IN MINUTES "WITHOUT" TAKING OFF SEAT COVER !

Available for most motorcycle stock seats only and comes with stock stitching to match closely to your seat.

OPTIONS: Upper Bar Cover; For passenger who would feel more secure with padded bar..

"Please call to get your make and ship date, depending on our Workload."

3867 West Market, #202, Akron, Ohio 44333 (888)-343-3320 email: utopia@utpr.com website: www.utpr.com

 \propto

UTOPIA BUILT-IN DRIVER BACKREST INSTALLATION INSTRUCTIONS FOR <u>KINGPIN</u> and <u>Vegas</u>

Pop off both side covers. Remove two seat bolts with 6mm Allen wrench lift off front seat.

Remove both plugs in holes in Fender.

To Protect Fender, apply furnished peel and stick rubber, if not already on fender, where shown in picture.

Set Utopia Bracket in place lining up holes with holes in Fender.

Reach up under left side of rear fender and hold Utopia metal plate that has to holes tapped in it.

Screw in the two 1/4-28 bolts into the holes. One side will have the wiring clip under fender. Use the Longer screw and nut furnished to hole up clip.

Attach Utopia Driver Backrest Pad to top of Bracket

Reinstall front seat and side covers.

Adjust pad for comfort and take a ride.

Note: Can take rear seat off and ride solo of desired. Just install bracket as shown without rear seat.

