

Built-in Driver Backrest Installation Instructions

The following instructions to install Utopia's Custom Driver Backrest are very similar on many models. We demonstrate the procedure using photos from an 1100 ACE installation. The steps are basically the same for your model. The photos below are specifically for your model. Just install the steel bracket in the same position as in the picture, being sure to center the bracket and it will fit correctly. Review complete instructions on the second page, to learn how to install the backrest.


Model: Yamaha FJR 1300



This is a photo showing the location of the supporting bracket in place on the plastic




Photo showing covering in place after the bracket has been installed.

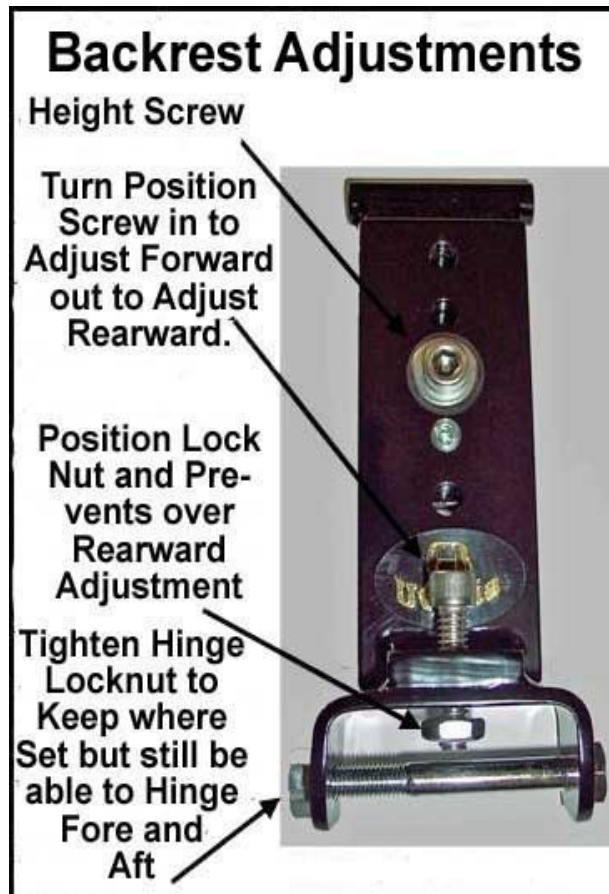


Custom Bar Installation


Center bar and position as shown

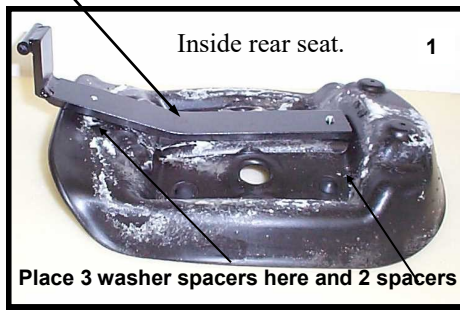

Long Serrated Knife (foam off seat base)

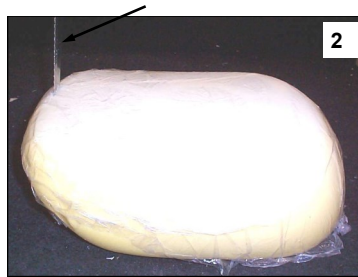

Slide Foam over Tube
(foam now on seat base)

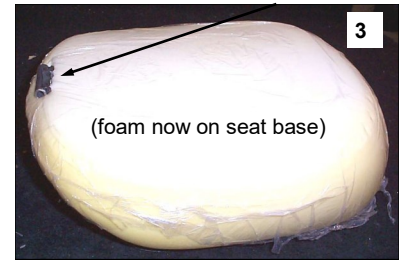

Now see Bar under re-installed cover.



Shown here on Shadow 1100 A.C.E.
(Step 1 shows Spacers, but most models do NOT require Spacers)



Peel and Stick Boot

Boot will be with Pad, Bars and Installation Instructions, all wrapped together in clear plastic.

General Custom Installation Instructions (applies to all models shown)

INSTALLS INSIDE REAR SEAT!!!

Remove "REAR SEAT" (IF 2 PIECE), ENTIRE SEAT (IF 1 PIECE), from cycle.
Remove any seat brackets.
Remove all staples holding on seat cover.
Remove seat cover and foam, being careful not to tear cover or foam.

1. Install our Custom Backrest Bar. Lay in place as shown in picture 1 or on next page for your model cycle. Mark through holes in bar and drill 9/32" holes in seat base to line up with the holes in Custom Bar. Install bolts through lock washer, flat washer, seat base and screw tightly into Custom Bar.
2. Mark center of foam in appropriate area, by lining up foam along side seat base with bar now installed. Cut slit in foam about 1 1/2" wide, all the way through the bottom of foam, as shown in picture 2.
3. Slide foam over installed bar, as shown in picture 3. Tube should be close to level with the surface of foam.
4. Install cover completely. Do not cut slit in cover till completely installed. Feel for tube, under cover, as shown in picture. Note: If you do not have an electric or air stapler to staple cover back in place, after completing installation to this point, take to your local upholstery shop, to staple cover back in place. Should only take a few minutes while you wait, and cost just a few dollars.
5. Carefully make a slit to allow it to come through the now installed cover, as shown in picture 5. "DO NOT CUT ANY THREADS WHERE COVER IS SEWN TOGETHER." Cut no wider than necessary.
6. Bend and shape the Peel and Stick Boot and install, as shown in picture 6.

Install backrest to tube with bolt provided. Install seats, adjust backrest for comfort, and "Take a Ride!"

