



Built-in Driver Backrest for BMW R-18



Front view of pad installed on BMW R-18

A driver's backrest that becomes part of your seat. No bars in the way of the driver's hips and legs or passenger's legs. Folds forward to ease passenger getting on or off and adds to safety by getting out of the way in sudden stops. Includes up and down height adjustments, as well as driver seating position, back and forth, to help driver sit upright to avoid slouching, a big factor in driver fatigue.

Backrest is concaved and pivots at the top of bar as you lean against it so no uncomfortable edges dig into your back. Well padded with foam, but only 1 1/2" thick which takes up less seating room than most other driver backrests. Comes with a handy pouch and shoulder strap to enable conversion to a shoulder bag.

INSTALLS IN MINUTES WITHOUT REQUIRING ANY UPHOLSTERY WORK!


We also have backrests available for most other motorcycle stock seats. We strive to closely match the material and stitching on each seat.

1351 S. Cleveland-Massillon Rd. Unit A, Copley, OH 44321 330-576-3024
email: utopia@utpr.com website: www.utpr.com



Utopia Built-In Driver Backrest Installation Instruction for BMW R-18 Transcontinental and Bagger

1. Remove passenger lower backrest. From inside the trunk remove two T-25 torx screws. (This step is not needed on the Bagger — simply remove the T-30 to remove the seat.)

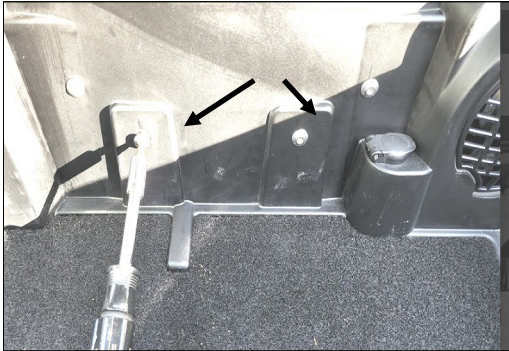

3. Remove the passenger strap. The screws will be reused.



5. Carefully reinstall your seat by lowering the seat so that the Utopia bracket comes up through the strap opening.



6. Secure the seat with the T-30 screw at the rear of the seat by the fender.

7. Re-install the passenger backrest using the T25 screws.

8. Finally, install 2 1/4" bolt in Backrest Upper Bar on Utopia Pad to the tube now sticking up through the strap gap.

2. Remove T-30 Torx screw to remove seat (lifting it up and back). The screw is at the very back of the passenger portion of the seat down by the fender.



4. Install the Utopia bracket, reusing the screws used to mount the strap. Install the bracket so that the tube is toward the front of the bike. (as shown in the photo).


Backrest Adjustments

Height Screw

Turn Position Screw in to Adjust Forward out to Adjust Rearward.

Position Lock Nut and Prevents over Rearward Adjustment

Tighten Hinge Locknut to Keep where Set but still be able to Hinge Fore and Aft

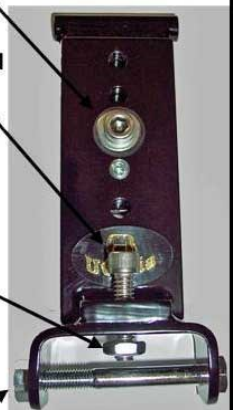

Now Adjust for comfort and take a ride!!!