

Built-in Driver Backrest with Quickout for SPYDER F3 LTD/T 2019 +



A driver's backrest that becomes part of your seat. No bars in the way of the driver's hips and legs or passenger's legs. Folds forward to ease passenger getting on or off and adds to safety by getting out of the way in sudden stops. Includes up and down height adjustments, as well as driver seating position, back and forth, to help driver sit upright to avoid slouching, a big factor in driver fatigue.

Backrest is concaved and pivots at the top of bar as you lean against it so no uncomfortable edges dig into your back. Well padded with foam, but only 1 1/2" thick which takes up less seating room than most other driver backrests. Comes with a handy pouch and shoulder strap to enable conversion to a shoulder bag.

INSTALLS IN MINUTES WITHOUT TAKING OFF SEAT COVER !

Available for most motorcycle stock seats only and comes with stock stitching to match closely to your seat.

OPTIONS: Upper Bar Cover; For passenger who would feel more secure with padded bar..
 Quick-Out Bar; Seldom needed, but available when frequent removal of backrest is desired.

1351 S. Cleveland Massillon Rd, Unit A, Copley, Ohio 44321 (888)-343-3320
 email: utopia@utpr.com website: www.utpr.com



Utopia Built-in Driver Backrest Installation with Quickout


For all SPYDER F3 2019 and Newer.

Step 1: Push ignition key down and turn clockwise to remove passenger seat. Unbolt 2 screws rear of driver seat, to remove driver seat.

Step 2: Slide off Utopia Upright set aside to install in Step 6.


Remove the bolt, lock washer and fender washer, from mounting bracket and set aside for Step 4.

Do not adjust these screws, we set to allow Backrest to slide in and out.

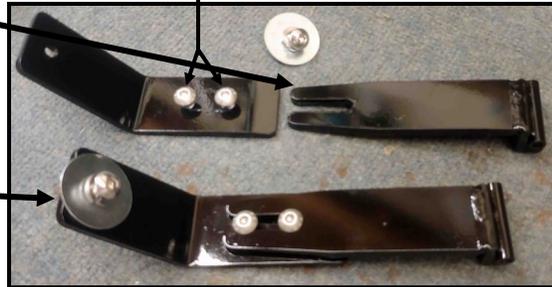

Step 3: Slide mounting bracket into receiver slot under seat. Line up hole in mounting bracket with hole in receiver.

(Ignore the extra wires, for other add on accessories)

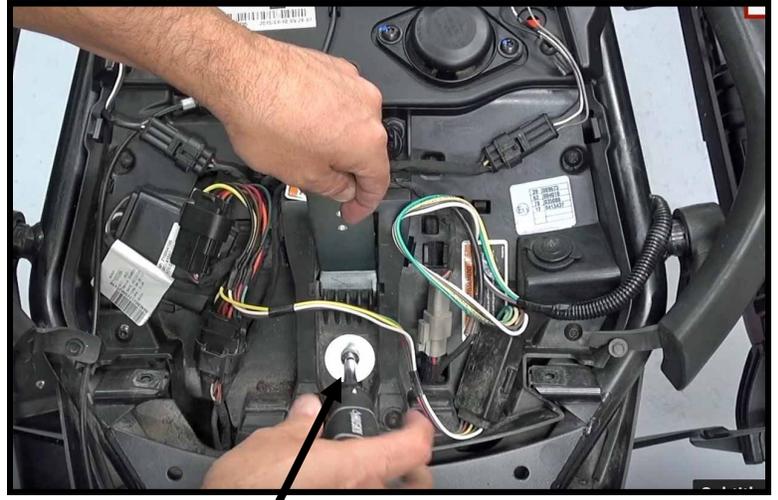

Step 4: Insert bolt with lock washer and fender washer, through hole into threaded hole in Mounting bracket and tighten snugly, but do not over tighten.

Step 5: Reinstall Seats.

Step 6: Attach Top Bar on back of backrest, to tube on upright with 2 1/4" bolt furnished.

(Install Upright with TUBE to the front and STOP to the rear).



Finally, Slide Utopia upright with Utopia driver backrest into slit in seat.



Adjust for Comfort and take a Ride!!!!