

Built-in Driver Backrest for Vision 2010 and newer



A driver's backrest that becomes part of your seat. No bars in the way of the driver's hips and legs or passenger's legs. Folds forward to ease passenger getting on or off and adds to safety by getting out of the way in sudden stops. Has up and down height adjustments, as well as driver seating position, back and forth, to help driver sit upright to avoid slouching, a big factor in driver fatigue. Included is our Quickout, that allows you to pull up on Backrest to remove.

Backrest is concaved and pivots at the top of bar as you lean against it so no uncomfortable edges dig into your back. Well padded with foam, but only 1 1/2" thick which takes up less seating room than most other driver backrests. Comes with a handy pouch and shoulder strap to enable conversion to a shoulder bag.

SIMPLE BOLT ON INSTALLS IN MINUTES!

We also have backrests available for most other motorcycle stock seats. We strive to closely match the material and stitching on each seat.

1351 S. Cleveland Massillon Rd, Unit A, Copley, OH 44321 330-576-3024 email: utopia@utpr.com website: www.utpr.com




Utopia Built-in Driver Backrest Installation For *Vision* with Slit in Standard or Heated Stock Seat




Utopia Built in Driver Backrest Bracket.

Remove your seat and place on your work-bench, with bottom up. Slide Bracket into Slit that is in Bottom of Your Seat, that comes out the Top of Seat.



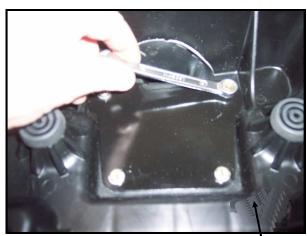

Install and Tighten the Bolts and Lock Washers included with your new Backrest

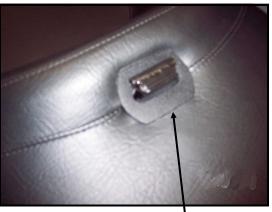


Install the Peel and Stick Boot included with your new Backrest, over the Tube now above seat.

NOTE: If you ordered with the Quickout Option you will not use the Boot since your seat already has a finished slit and no raw edges are exposed when backrest is removed.





Install Backrest to the Tube sticking out of Seat with the Bolt and Lock Nut Included.

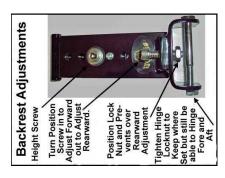

Finally, install seat back on your bike, adjust backrest for comfort, and take a ride!!